

WOCA Multi Cleaner

- for cleaning exterior garden furniture
made of Poly Rattan, wood, steel, PVC etc



Preparing today for tomorrow



- Ready mixed - easy to use
- For cleaning exterior garden furniture
- Also suitable for universal cleaning of other exterior items such as window frames, claddings etc.
- Ecologically friendly product

Product info

Container: 750 ml.



Application area

WOCA Multi Cleaner is a product especially developed for cleaning exterior garden furniture made of Poly Rattan, wood, steel, PVC etc. It is also suitable for universal cleaning of other exterior items such as window frames, claddings etc. WOCA Multi Cleaner is very easy to use due to the ready mixed spray bottle.

Result

WOCA Multi Cleaner is an ecologically friendly product with a high degree of penetration and removes dirt and grease efficiently.

Application

Spray WOCA Multi Cleaner on the item to be cleaned until the surface is saturated with Cleaner. Scrub surface carefully with a sponge or brush. Hose WOCA Multi Cleaner and dirt down with water. WOCA Multi Cleaner leaves the surface with less protection and is therefore recommended to be rejuvenated with WOCA Multi Protector.

After care

We recommend an after care with WOCA Multi Protector.

How to do...

- WOCA Multi Cleaner: for cleaning exterior garden furniture made of Poly Rattan, wood, steel, PVC etc



Tools

Sponge or brush, cotton cloth.
Clean tools with water and soap.

Ready mixed - easy to use

Multi Cleaner is a product especially developed for cleaning exterior garden furniture made of Poly Rattan, wood, steel, PVC etc. It is also suitable for universal cleaning of other exterior items such as window frames, claddings etc. Multi Cleaner is an ecologically friendly product with a high degree of penetration and removes dirt and grease efficiently. Multi Cleaner is very easy to use due to the ready mixed spray bottle.

- 1 Wet the surface with water.
- 2 Shake the spray well before use. Spray Multi Cleaner on the item to be cleaned from a distance of approx 20-30 cm. until the surface is saturated with Cleaner.
- 3 Scrub surface carefully with a sponge or brush.

- 4 Hose Multi Cleaner and dirt down with water. Wipe the item dry with cloth.

Multi Cleaner leaves the surface with less protection and is therefore recommended to be rejuvenated with Multi Protector.

TIP: Very difficult stains can be removed with WOCA spot-remover or WOCA Wood Quick.