


Controls and Indicators



**NOTE:** System serial numbers must match for Remote to activate NightHawk unit.

**External System Check:** Check system prior to taking unit on patrol – **depress** External Check Button located near carry handle. **Check LED color** reading.

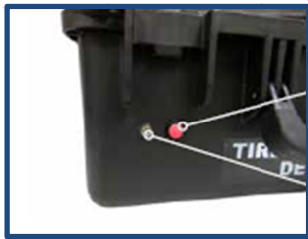

External Check Button

Status LED

- █ **STEADY GREEN:** Battery level good. **System ready to go.**
- █ **BLINKING RED:** Battery level marginal; **Charge** at earliest opportunity. **Unit will FIRE.**
- █ **SOLID RED:** System **NOT** ready. Either battery charge too low or system has not been reset following reload.

**NOTE:** System Check Button on outside case does **NOT** indicate Remote battery level.

**Remote batteries charge level:**  
Press and hold "ARM" button.

- STEADY GREEN** – Good to go.
- Blinking RED** – Marginal but will work.
- Steady RED or NO LED** – Replace batteries.




**Internal System Status Check:** Inside the case, flip red switch guard and flip toggle power switch.


- STEADY GREEN** – Good to go.
- Blink RED/STEADY GREEN** – Marginal to deploy.
- STEADY RED** – Reset System / recharge battery.



**Batteries:** NightHawk **main receiver unit** in Pelican case is powered by a BOSCH power tool battery (BAT612 18V Lithium-Ion Battery). BOSCH battery **slides into** the Battery Retainer inside the case and **clicks** into place.

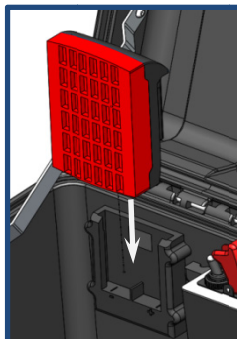

To **remove** battery, press red button and slide battery out of retainer.

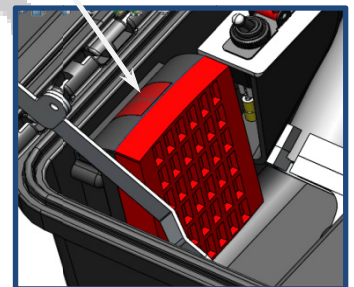

**Batteries:** Depending on model, NightHawk Remote is powered by two AAA (older model) or AA (newer model) batteries.

The newer model Remote has a rear AA battery access panel.



## Deployment



1 – Place Unit 4 paces (12 ft) from Roadway. Ensure **RED ARROW** points toward road.



2 – Release Latches and Fully Open Case Lid.



3 – Remove Hand-Held Remote.



4 – Lift Switch Red Guard and ARM Toggle Switch. Verify LED turns **GREEN**.



5 – Remove Hand-Held Remote

Move to a safe location, ensure **Line of Sight** between Remote and NightHawk unit.

6 – Fire

- i. Press and hold the **ARM Button**, check the remote LED illuminates **GREEN**.
- ii. Continue to **hold down** the **ARM Button** then press the **FIRE** button to launch the spikes.
- iii. Release pressure off **BOTH Buttons**.
- iv. After spiking target vehicle, retract the spikes by repeating the button sequence (**ARM/FIRE**).

Download Full Manual



Link to Training Video

