





# Throttle Body Cleaner

## **FEATURES & BENEFITS**

Throttle Body Cleaner is a light duty, solvent-based, aerosol cleaner which cleans effectively and dries quickly. This **non-chlorinated** product can be used to clean air throttle valves, idle air control valves and the internal surfaces of the air intake manifold. The 360-degree valving allows the user to direct the spray onto surfaces and linkages requiring cleaning, as well as into the intake manifold to clean varnish and dirt from the manifold walls, even with the can inverted.

Oxygen sensor and catalytic converter safe.

#### **DIRECTIONS FOR USE**

To access the air throttle valve and the idle air control valve, disconnect the air snorkel from the end of the air intake manifold and pull it aside. Spray Throttle Body Cleaner directly onto the throttle linkages, throttle valve surfaces and into the intake manifold until clean. Excess product may be absorbed with a shop towel. Idle air control valves may require removal to facilitate cleaning. The air intake system should be cleaned whenever it is serviced.

#### **PRECAUTIONS**

REFER TO SAFETY DATA SHEET FOR PRECAUTIONS IN HANDLING.

### **AVAILABLE PACKAGE SIZES**

TNDS8045 425g aerosol

