



 





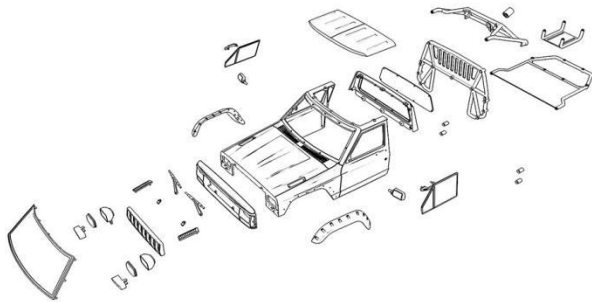 
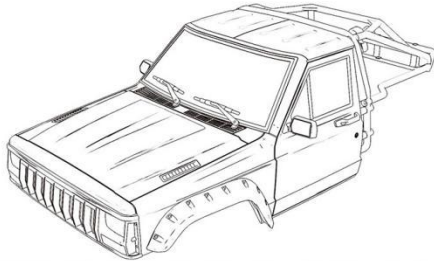 


Car Shell Instruction Manual


INJORA

Screw Specification

 A1 M2X6mm Screw	 B1 M3X12mm Screw
 A2 M3X8mm Screw	 B2 M3X16mm Screw
 C2 M2X8mm Screw	 B3 M3X25mm Screw
 M3 螺母 Nuts	 B4 M3X10mm Screw
	 D1 M2.6X8mm Screw
	 D2 M2.6X6mm Screw




 -1-

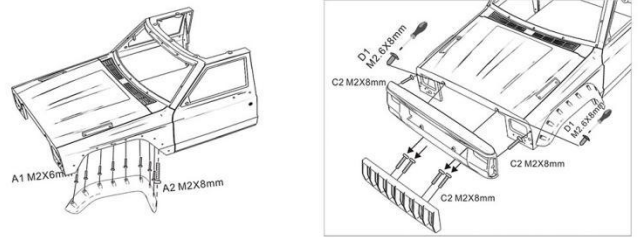


①

 ②

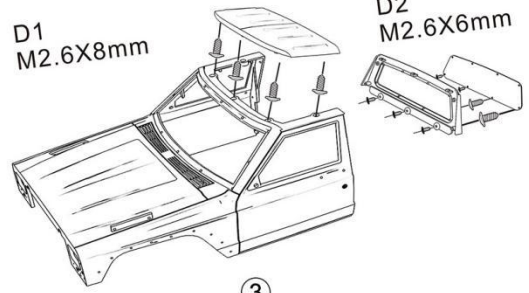


③

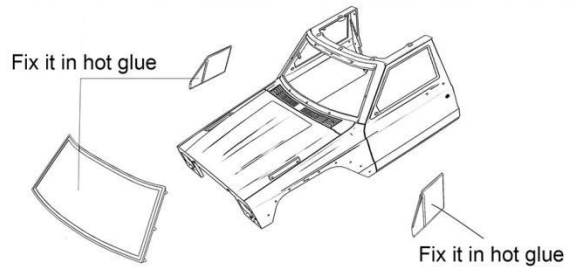 


④

 
-2-

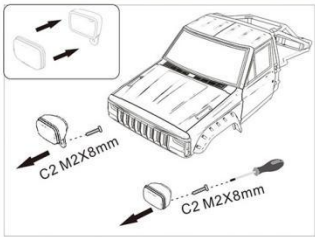


⑤

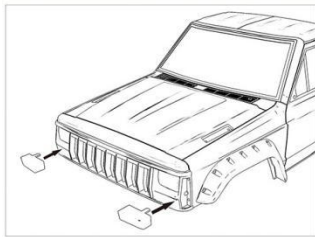 


⑥

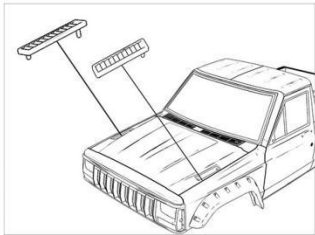 


⑦

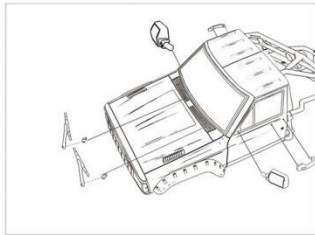 



⑧

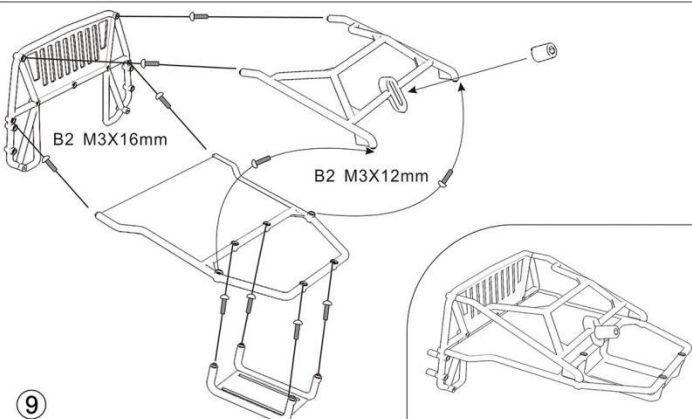 

⑨

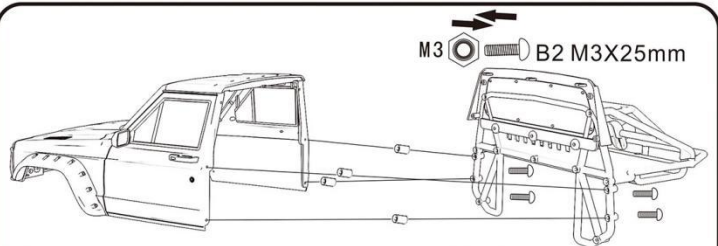 

⑩

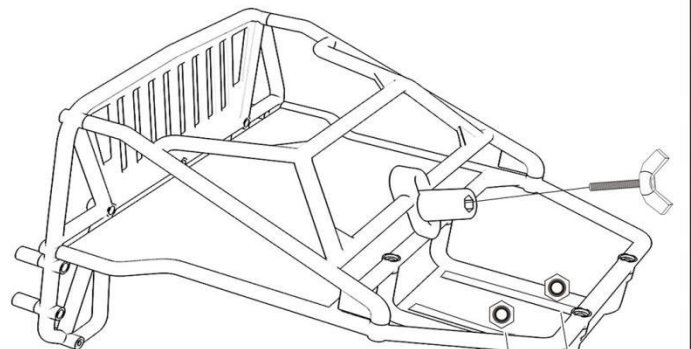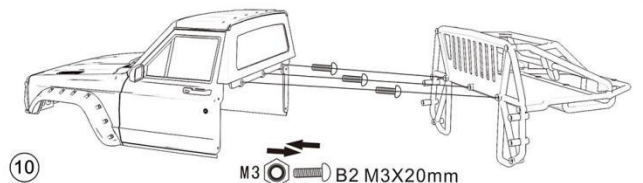  

⑪

B4 M3X10mm

-3-

-4-

