

100mm Square Tile Insert Floor Waste 50mm Outlet

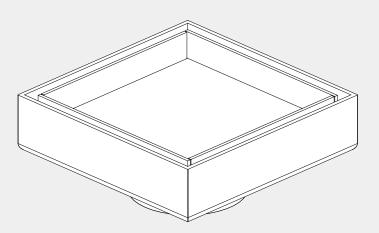


Nero

Versions:202311

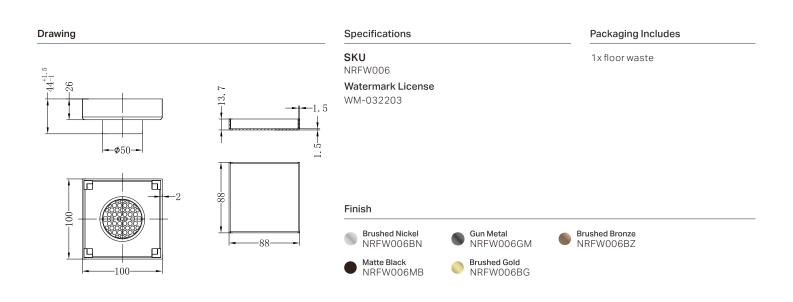

*Dimensions are nominal measurements only.

Installation Instruction

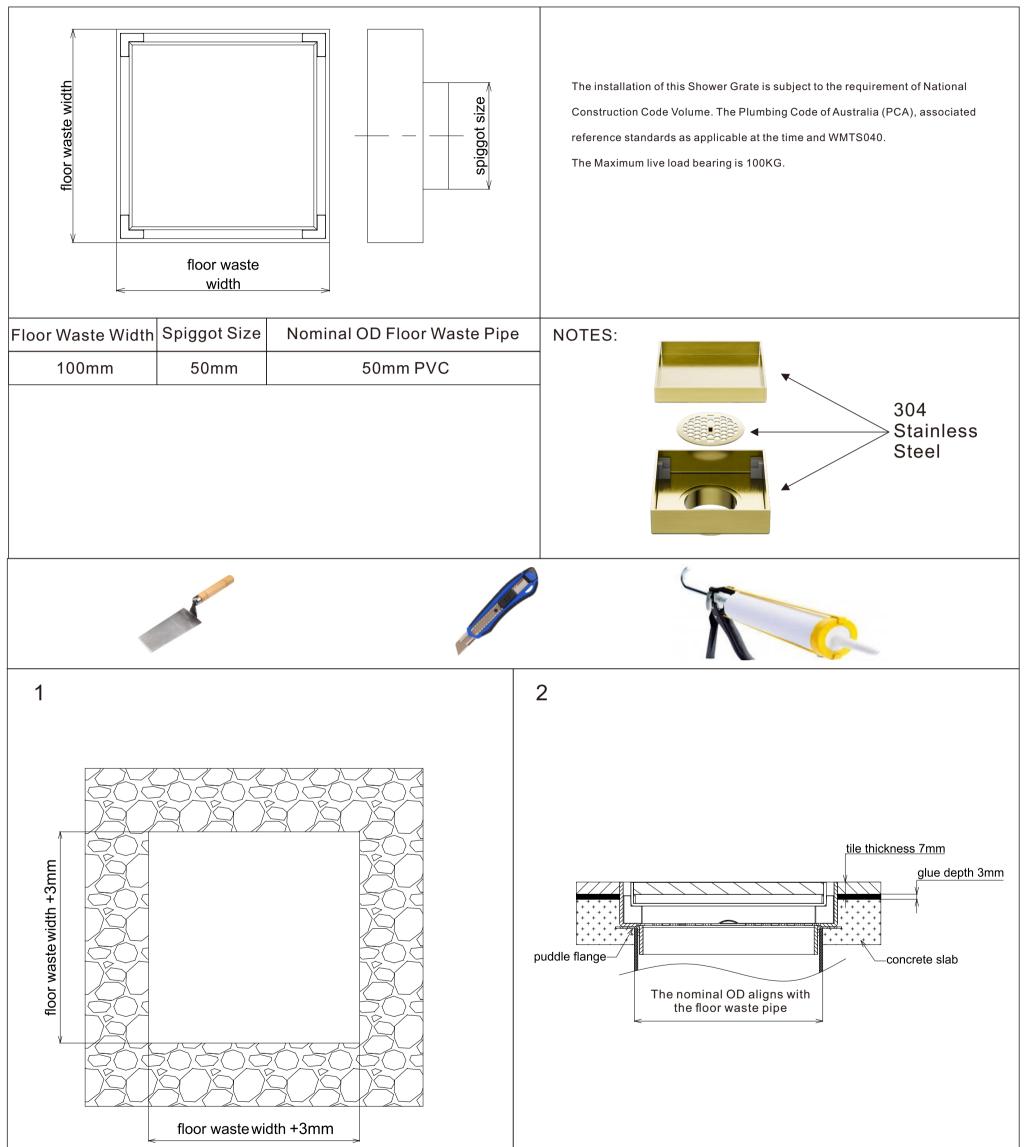


1. Cut grate to suit floor waste allowing at least 3mm of clearance in overall length to facilitate removal for cleaning.

2. Install floor waste as above picture. Note: it can be installed 2 ways: tile insert placement and normal placement.


www.nerotapware.com.au

130mm Square Tile Insert Floor Waste 100mm Outlet

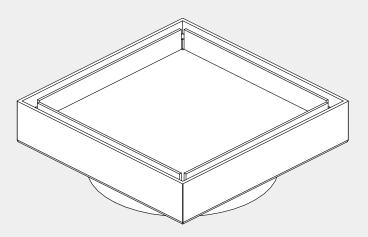


Nero

Versions:202311

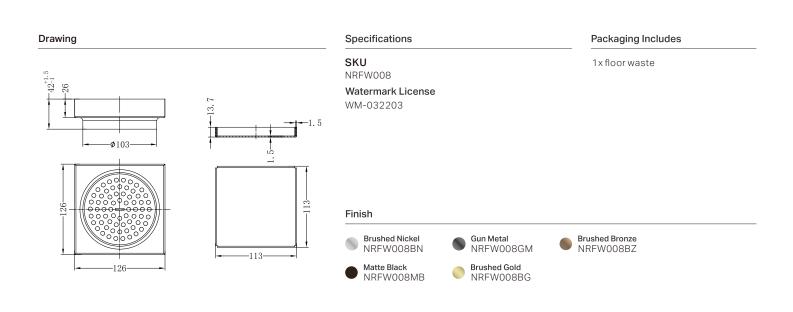

*Dimensions are nominal measurements only.

Installation Instruction

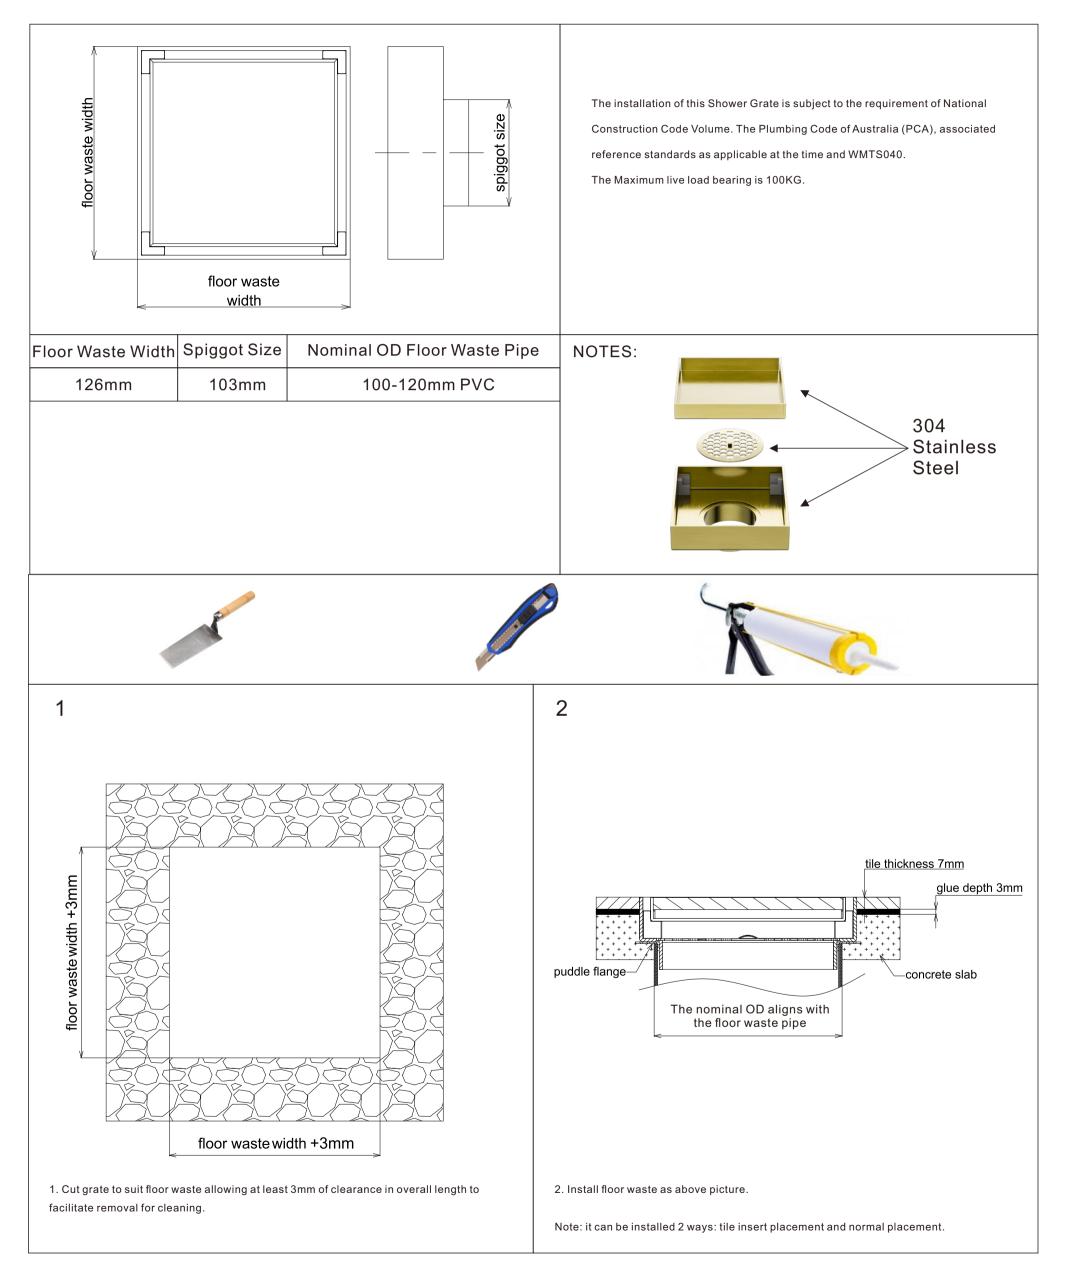

www.nerotapware.com.au