

A—N—D

# VECTOR SERIES TABLE/FLOOR

 
DESIGNER  
LUKAS PEET

INSTRUCTIONS



SCAN HERE

NORTH AMERICA + WORLD

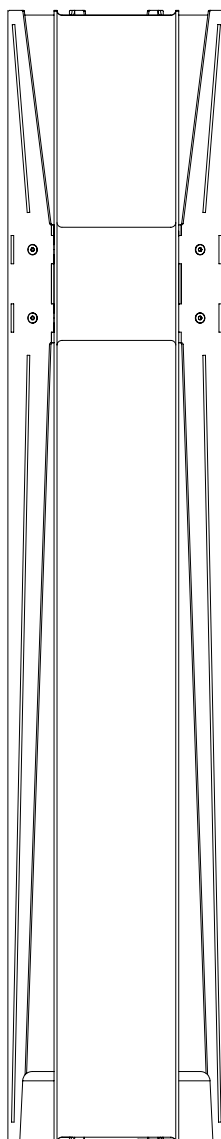

A-N-D.COM

# INSTALLATION NOTES

---

The luminaire is powered by a plug in LED driver.

For questions regarding installation, please email **[info@n-d.com](mailto:info@n-d.com)**



## CARE INSTRUCTIONS

Always wear clean gloves when handling the luminaire. Please handle with the utmost care. The finish of this luminaire is very delicate and can be marked or shed with improper handling. Some patine will naturally occur over time.

For replacement parts contact A-N-D directly.



## WARNING

 
The luminaire must be installed by a qualified electrician in a dry indoor location.

Failure to meet any or all of these criteria will not only damage the luminaire, but will void both then warranty and all of its certifications.


# VECTOR OPTIONS

---

## VECTOR TABLE

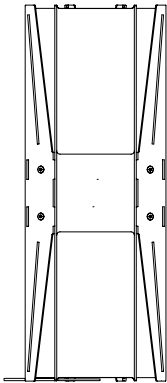



58cm  
22.75"

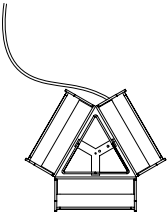 

22cm | 8.65"

## VECTOR FLOOR

  120cm  
22.75"

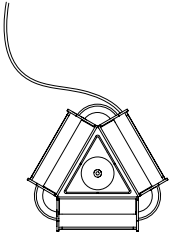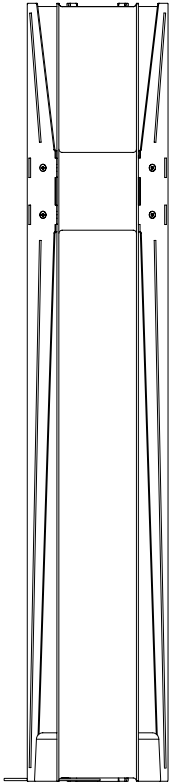


22cm | 8.65"

# COMPONENTS



 - ① LUMINAIRE BODY
- ② CONCRETE BASE\*
- ③ POWER CORD + PLUG IN DRIVER + DIMMER

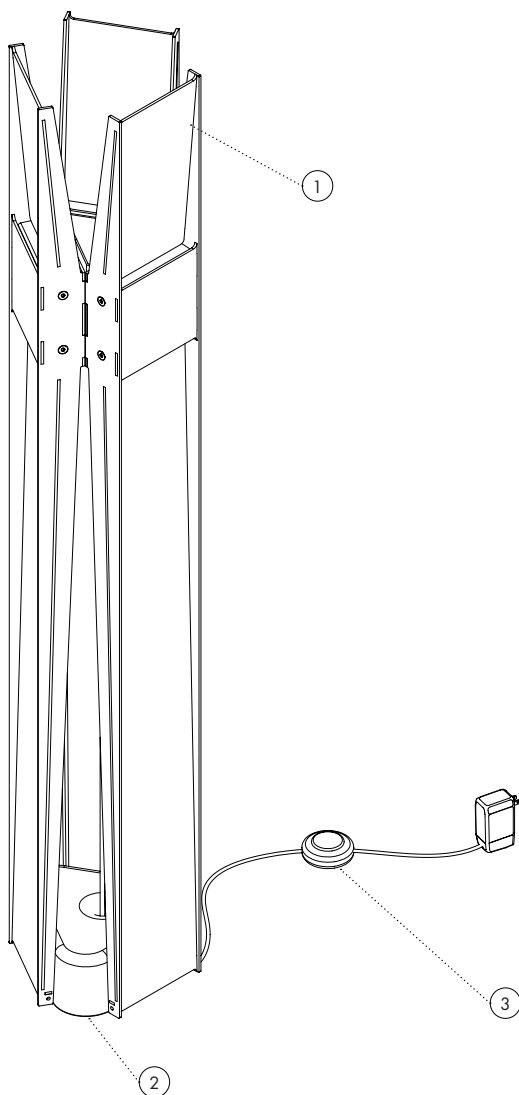

**\*FLOOR VERSION ONLY**

# INSTALLATION

---

 
## STEP 1

**Carefully lift the light fixture from the sides.**

**⚠ Caution!**


Please handle with the utmost care.

The finish of this luminaire is very delicate and can be marked or shed with improper handling. Some patina will naturally occur over time.

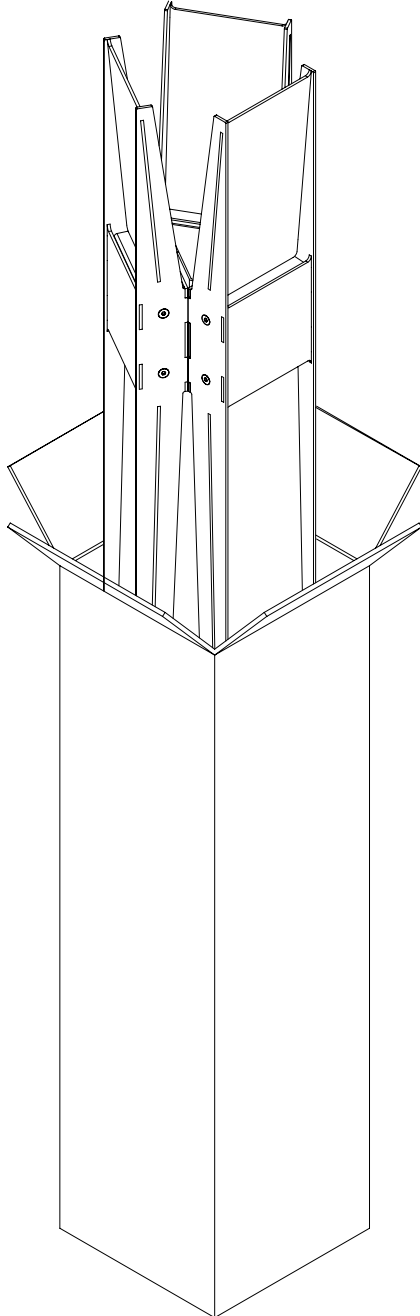

## STEP 2

 **Plug in the Vector Table/  
Floor. Press and hold the  
dimmer switch to reach  
the desired light output.**

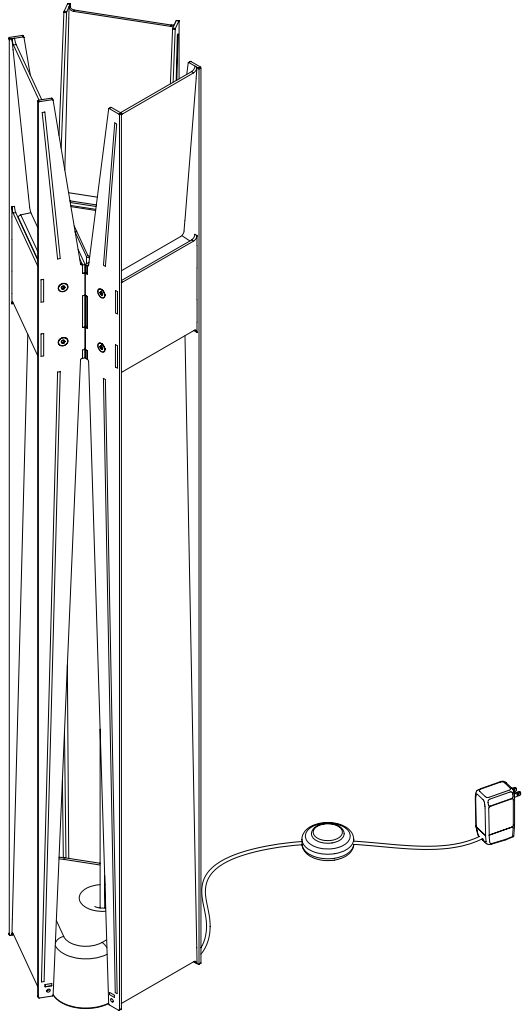

# A—N—D

For support, please contact:

[info@a-n-d.com](mailto:info@a-n-d.com)

+1 604 563 6938



1951 Franklin St,  
Vancouver, BC  
Canada V5L 0C7

**A-N-D.COM**