


CHRONOMASTER

AUTOMATIC

INSTRUCTION MANUAL

CHRONOMASTER AUTOMATIC Watch parts

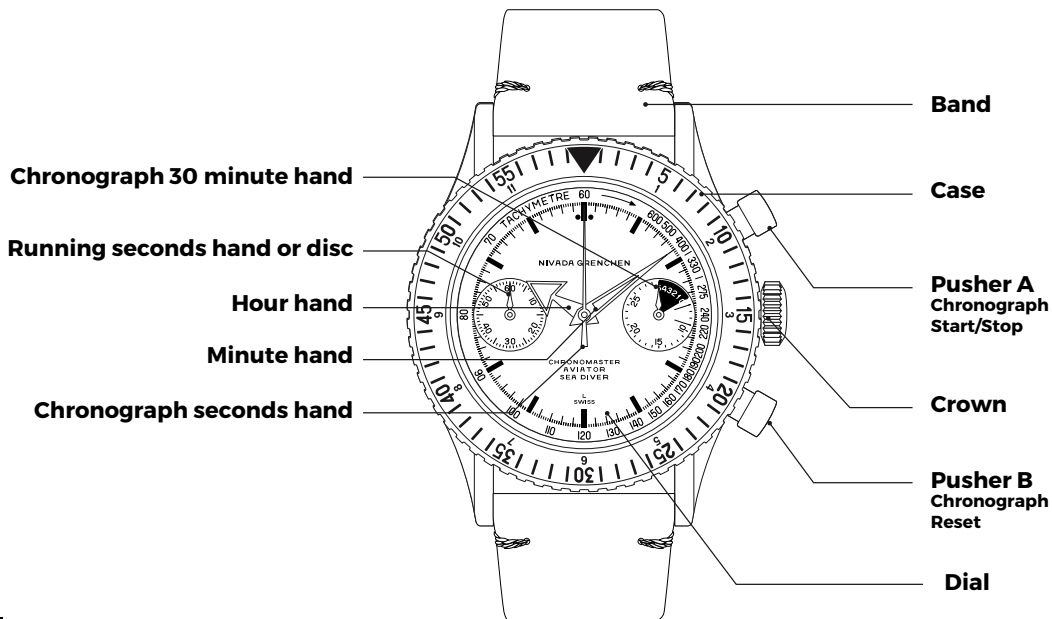

CHRONOMASTER AUTOMATIC Crown Position



1 Manual winding

2 Setting the time

CHRONOMASTER AUTOMATIC Manual winding



1 Manual winding

To manually wind the movement twist the crown clockwise approximately 8-9 times and keep wearing .

★ *This an automatic winding movement. with daily wear the movement will wind itself and will not require manual winding. but it is not worn for a certain amount of time, its power reserve (in this model, 41 hours) is exhausted, and the watch stops.*

CHRONOMASTER AUTOMATIC Setting the time



1. **1** Crown out to the **2** position

2. Turn the crown to set hour and minute hands

3. Push back to **1** position

CHRONOMASTER AUTOMATIC Using the chronograph



THIS MODEL CHRONOGRAPH FEATURES STOPWATCH THAT CAN MEASURE UP TO 60 MINUTES.

- 1. To start the chronograph: Press the upper pusher A**
The chronograph hands will begin to move.
- 2. To stop the chronograph: Press the upper pusher A again.**
The chronograph hands will stop and indicate the elapsed time.
(Read the elapsed seconds on the large central hand and minutes on the sub-dial in the 3 o'clock position).
- 3. To reset the chronograph: Press the lower pusher B to reset the chronograph.** All the chronograph hands will be reset to "0" position.

*Nivada
Grenchen*