
## CHRONOKING MECAQUARTZ

**INSTRUCTION MANUAL** 

### **CHRONOKING MECAQUARTZ** Watch parts




### CHRONOKING MECAQUARTZ Crown Position

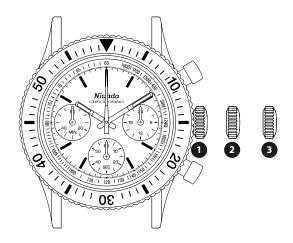

- Normal crown position
- 2 Date gear
  - ★ Since there is no calendar window on the dial in this Model, there will be no instructions for adjusting the date.
- Setting the time

#### CHRONOKING MECAQUARTZ Setting the time

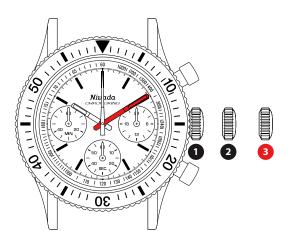

- 1. Pull the crown twice out to the 3 position.
- 2. Turn the crown to set minute and hour hands.
- 3. Push the crown back into the normal 1 position.

#### CHRONOKING MECAQUARTZ Using the chronograph



THIS MODEL CHRONOGRAPH FEATURES STOPWATCH THAT CAN MEASURE UP TO 60 MINUTES.

- To start the chronograph: Press the upper pusher A
   The chronograph hands will begin to move.
- 2. To stop the chronograph: Press the upper pusher A again. The chronograph hands will stop and indicate the elapsed time. (Read the elapsed seconds on the large central hand and minutes on the sub-dial in the 9 o'clock position).
- 3. To reset the chronograph: Press the lower pusher B to reset the chronograph. All the chronograph hands will be reset to "0" position.

# Nivada Grenchen