F77 WITHOUT DATE AUTOMATIC

INSTRUCTION MANUAL

F77 AUTOMATIC Watch parts



F77 AUTOMATIC Crown Position



- Manual winding
- 2 Setting the time

F77 AUTOMATIC Manual winding



Manual winding

To manually wind the movement twist the crown clockwise approximately 8-9 times and keep wearing .

★ This an automatic winding movement. with daily wear the movement will wind itself and will not require manual winding, but it is not wom for a certain amount of time, its power reserve (in this model, 38 hours) is exhausted, and the watch stops.

F77 AUTOMATIC Setting the time



- 1. 1 Crown out to the 2 position
- 2. Turn the crown to set hour and minute hands
- 3. Push back to 1 position

Nivada Grenchen