




# HENDERSON / SOMMER 868MHZ REMOTE CONTROL HANDSET PROGRAMMING INSTRUCTIONS

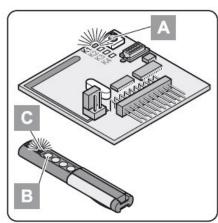

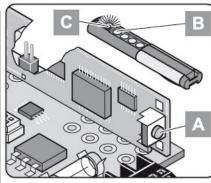

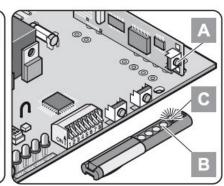

#### **SAFETY NOTE:**

Keep hand transmitters out of the reach of children at all times

Do not use near buildings which are sensitive to radio interference such as aircrafts, hospitals etc.

Accidental door activation may occur if the above process is not followed correctly. Please ensure that there are no persons or objects in the path of the door.

## STEP 1

Locate the radio receiver on the circuit board

#### STEP 2

Press learning button (A) on radio receiver

# STEP 3

Press required button on remote handset (B). The remote control handset will transmit the radio code to the receiver. Corresponding LED light will go out according to which channel is selected.

## STEP 4

Repeat procedure above to program further remote control handsets.

## TO CHANGE THE BATTERY:

Only use type CR2032 battery. Pull out concealed keypad to expose battery. Take out battery and replace with new one. Always observe correct polarity (+/-)