



GARAGE DOOR SPARES


TM

# **Henderson Premier Cones & Cables Fitting Instructions**

## **Tools Required:**

Toggle Bar or Screwdriver

- Using toggle bar or screwdriver in plug A, rotate shaft to ease spring pressure.
- Insert crook pin into right hand head bracket (1) and secure door within openings.
- Remove side jamb channels (2) and head bracket bolts (3)
- Remove door arms (4) from head bracket and door by withdrawing split pins (5)
- Detach free crimped end of cable (6.) from roller spindle clip (8)
- Remove and discard cables and cones by driving hollow pin (7) from cone and shaft, using a hammer
- Replace cones ensuring that white cone is on the left hand side and black cone on the right hand side
- Ensure that cones are correctly fitted by checking that cable fixing points on cones are aligned with each other
- Fix cones using new hollow pins and` hammer
- Refit the spring assembly and head brackets then replace door arm jamb channels by reassembling in reverse order
- Refit new cable by clipping into cone and roller spindle clips (8)
- Ease spring pressure using toggle bar and remove crook pin
- Allow spring to take up slack, ensuring that cables are in the outer groove, run down behind the cone and that roller spindle clips (8) are in position, as shown:

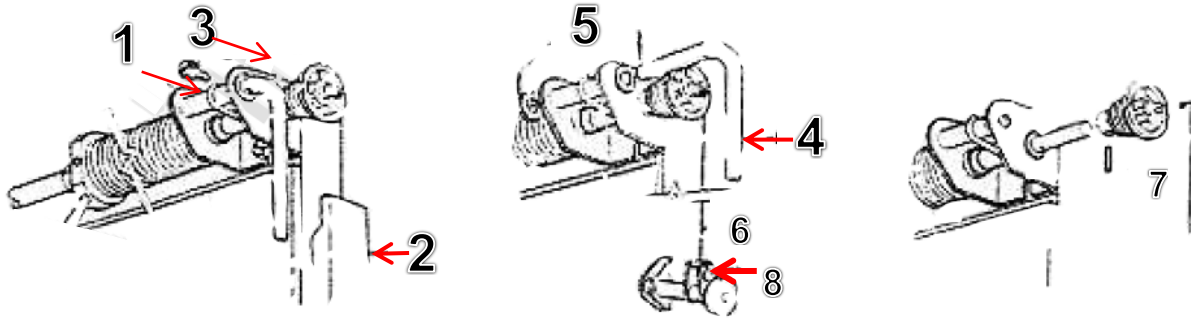

***Please note: All work is undertaken at your own risk.***