




GARAGE DOOR SPARES

TM

**Garador Mk4/F type spring  
Fitting Instructions**

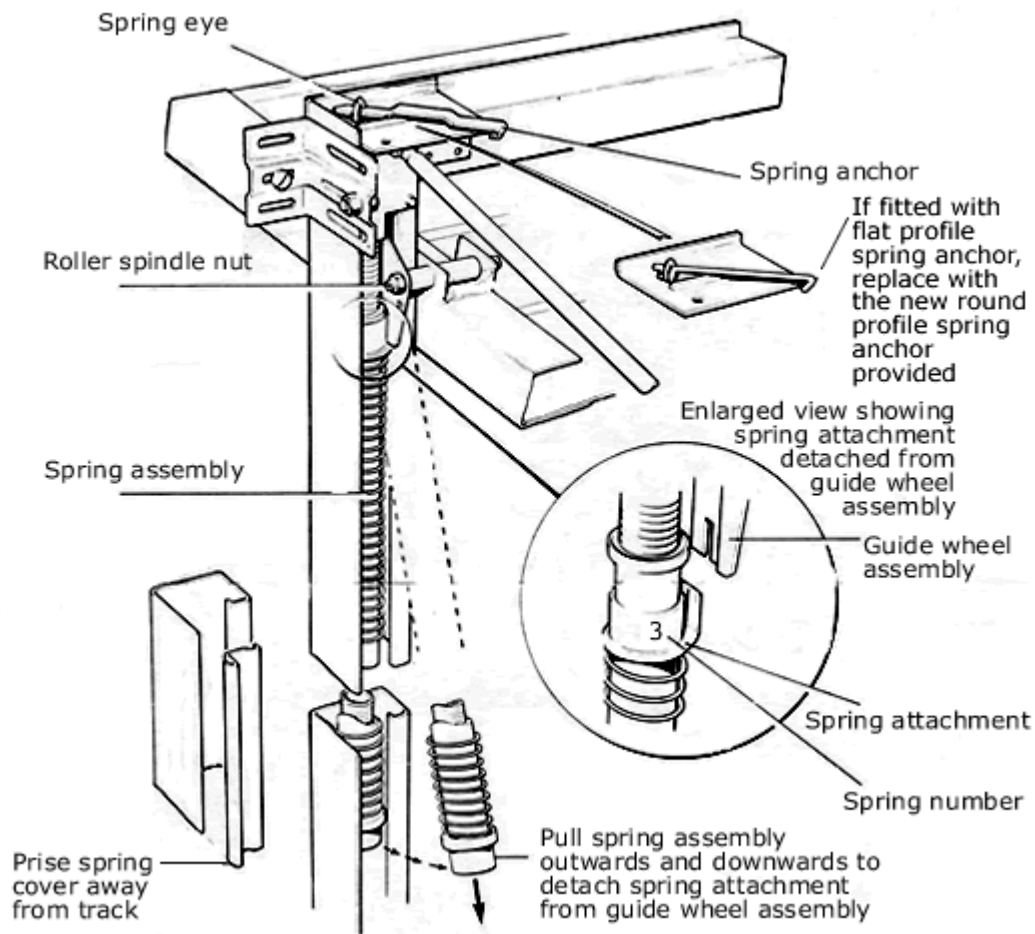

**Safety Notes:**

This work must be undertaken by a mature adult only. The spring may be under tension during installation. Please follow instructions carefully to avoid injury.

Wear protective gloves and eye protection. Two persons may be required for this operation.

**Step 1**

Raise the door to the fully open position and prop up securely.

**Step 2**

Remove the spring cover

**Step 3**

Pull the bottom of the spring assembly out of the track.

**Step 4**

Detach the spring attachment from the guide wheel assembly by taking hold of the bottom of the spring assembly and pulling downwards, ensuring that the spring is clear of the roller spindle nut.

**Step 5**

Carefully remove the prop and lower the door to the closed position.

**Step 6**

Lift the spring assembly to allow easy withdrawal of the spring anchor from the spring eye after which the spring assembly may be completely removed.

**Step 7**

TO FIT NEW SPRING ASSEMBLY REVERSE THE ABOVE PROCEDURE

Please note: all work is undertaken at your own risk so be careful!