 
 


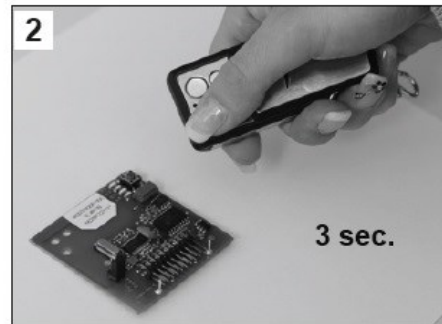

GARAGE DOOR SPARES

TM

HENDERSON / SOMMER SLIDER REMOTE CONTROL HANDSET PROGRAMMING INSTRUCTIONS

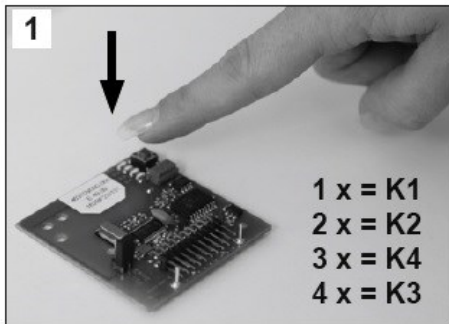

STEP 1

Locate the radio receiver on the circuit board

STEP 2


Press learning button on radio receiver

STEP 3

Press required button on remote handset. The remote control handset will transmit the radio code to the receiver. Corresponding LED light will go out according to which channel is selected.

STEP 4

Repeat procedure above to program further remote control handsets.

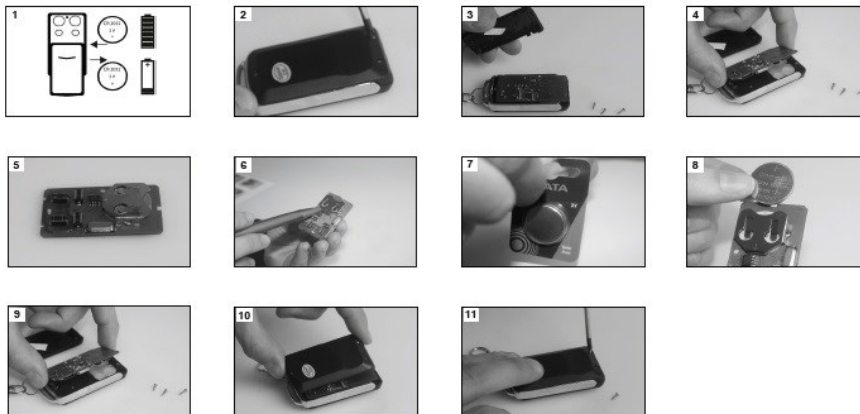

CHANGING THE BATTERY

The replace the battery in the handset, remove the back of the transmitter housing by removing the small retaining screws. Carefully remove the circuit board to expose the battery holder. Once the battery is replaced, re-insert the circuit board and screw the back cover back onto the remote control.