



GARAGE DOOR SPARES

TM


GARADOR DC / CM GARAGE DOOR SPRING FITTING INSTRUCTIONS

HOW DO I INSTALL THE SPRING?

Firstly, raise the door into the open position, and secure the door to prevent the door from closing.

Place the eye of the spring over the hook of the bottom spring anchor bracket. Using a cloth, or gloves, to protect your hands, grip the spring firmly and pull the spring up and hook the top eye over the spring anchor pin on the link arm, and locate the spring into the groove.

With the slotted end pointing down, clip the inner lower spring cover tube over the spring and lower downwards locating over the anchor bracket. With the slotted end at the top, clip the outer spring cover tube around the spring, then locate into the anchor pin on the link arm. Secure in place with the circlip on the end of the spring anchor pin.

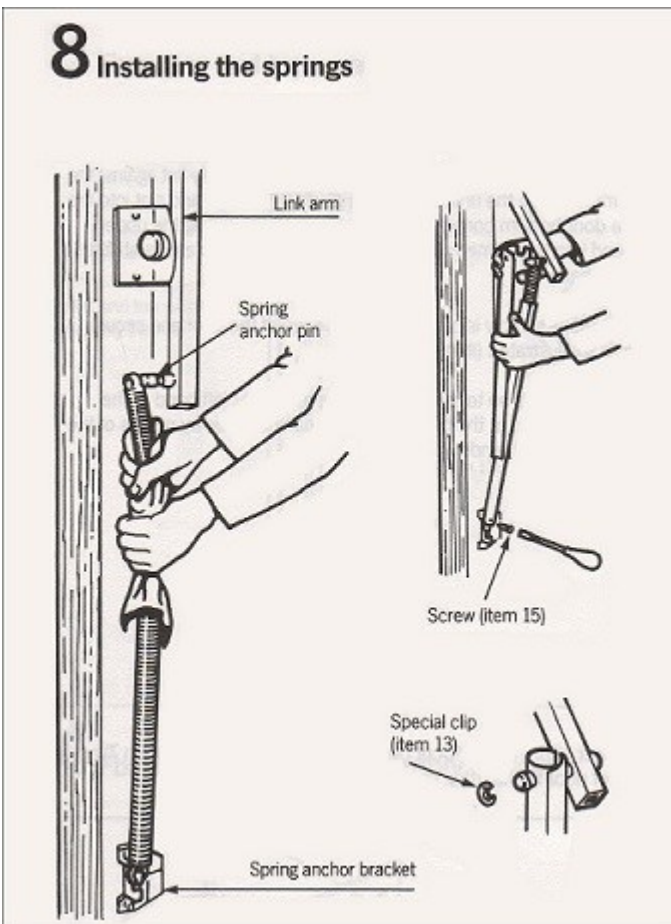

Finally, repeat the procedure for any additional springs, and ensure the door is operating correctly.