



- 1 Turn off feed water main before proceeding.
- 2 Mount the ELITE System to the wall. Ensure the system is leveled.
- Position the SF Tank approximately 8-10" from the ELITE System "OUT" port.
- 4 Lubricate the o-rings on the bypass and Elbow Fittings. (Fig 3.)
- **5** Connect the Bypass to the SF Head. (Fig 3.)
- 6 Connect the Elbows to the Bypass. (Fig 3.)
- **7** Connect the 1"x1" NPT adapater to the Elite System "OUT" port.
- 8 Connect a Flex hose (provided) from the "OUT" port of the ELITE System to the "UPFLOW INLET" elbow on the SF System.




Fig 2.

Fig 3.

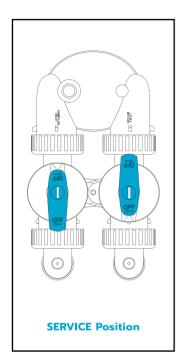

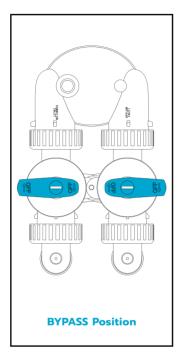

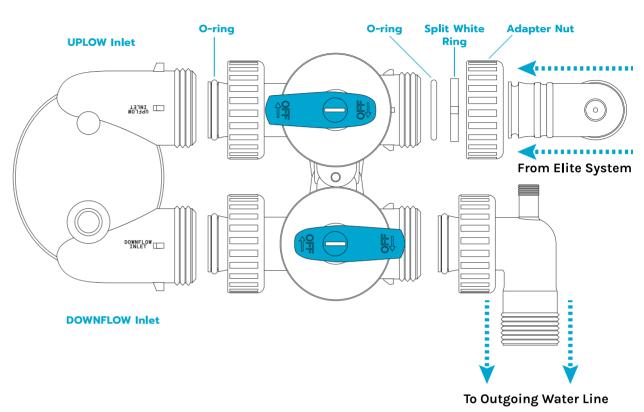

- 9 Connect the incoming water line to the "IN" port on the ELITE System. (Fig 1.)
- Connect the "OUT/DOWNFLOW INLET" port on the SF System to the pipe going into your home. (Fig 1.)
- 11 Ensure the Bypass is in "Service Position." (Fig 2.)
- 12 Slowly turn on your main feed water line.
- 13 Check for leaks. If any, turn off the main water and address the issue. Contact a licensed plumber if needed.
- 14 Locate the nearest faucet to the system, remove the screen, and open the cold water for 10-15 min.
- 15 Done Your system is now ready for use.

^{*}Installing a system shutoff valve and bypass is recommended for servicing.

^{*}Installing a ground jumper cable is also recommended to comply with your local electrical laws.

^{*}Install this system according to your local laws. It is highly recommended to have this unit installed by a licensed professional.

^{*}Outdoor and improper installation or usage voids the warranty.