

Get the most out of your appliance



For quick access to manuals, how-to guides, support and more through our photo registration visit electrolux.com/register



Electrolux

CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS	3
3. PRODUCT DESCRIPTION	6
4. PRELIMINARY CHECKS	6
5. USING THE APPLIANCE FOR THE FIRST TIME	7
6. TURNING ON AND HEATING UP.....	8
7. MAKING COFFEE USING COFFEE BEANS	8
8. CHANGING THE QUANTITY OF COFFEE IN THE CUP	9
9. ADJUSTING THE COFFEE MILL	10
10. MAKING ESPRESSO COFFEE WITH PRE-GROUND COFFEE (INSTEAD OF BEANS)	10
11. DELIVERING HOT WATER.....	11
12. CHANGING THE QUANTITY OF HOT WATER	11
13. MAKING CAPPUCCINO	11
14. CHANGING THE QUANTITY OF MILK AND COFFEE FOR CAPPUCCINO.....	12
15. MAKING A NUMBER OF CUPS OF COFFEE WITH THE JUG FUNCTION	13
16. CHANGING JUG FUNCTION PARAMETERS	14
17. CLEANING	14
18. CHANGING AND SETTING MENU PARAMETERS	17
19. TURNING THE APPLIANCE OFF	21
20. TECHNICAL SPECIFICATION.....	21
21. DISPLAYED MESSAGES	22
22. TROUBLESHOOTING	23

FOR PERFECT RESULTS

Thank you for choosing this Electrolux product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com/webselfservice



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For european markets only:

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazard involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children aged less than 8 years.

Children shall not play with the appliance

1.2 General Safety

Designated use: this appliance is designed and made to prepare coffee and milk based beverages and hot water. Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage deriving from improper use of the appliance.

The surface of the heating element remains hot after use and the outside of the appliance may retain the heat for several minutes depending on use.

Clean all the components thoroughly, taking particular care with parts in contact with the coffee and milk.

Cleaning and user maintenance shall not be made by children without supervision.

Never immerse the appliance in water.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent

This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If the plug or power cable is damaged, it must be replaced by customer services only to avoid all risk.

Appliances with removable cord: avoid splashes of water on the power cord connector or socket at the back of the appliance.

WARNING: Models with glass surfaces: do not use the appliance if the surface is cracked.

For european markets only:

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

When not in use and before cleaning, always unplug the appliance.



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

2. SAFETY INSTRUCTIONS



DANGER!

This is an electrical appliance, it is therefore important to respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never touch the plug with damp hands.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only.
- Never pull the power cable as you could damage it.
- To disconnect the appliance completely, place the main switch (A10) on the side of the appliance in the 0 position.
- If the appliance is faulty, do not attempt to repair.
- Turn it off using the main switch (A23), unplug from the mains socket and contact Customer Services.



IMPORTANT!

Keep all packaging (plastic bags, polystyrene foam) away from children.



DANGER OF BURNS!

This appliance produces hot water and steam may form while it is in operation.

Avoid contact with splashes of water or hot steam. Use knobs and handles.



IMPORTANT!

Do not grasp the coffee maker when it is out of the cabinet. Do not rest recipients containing liquids or inflammable or corrosive materials on top of the appliance. Place the accessories required to make the coffee (the measure for example) in the special holder. Do not rest large objects which could obstruct movement or unstable objects on the appliance.



IMPORTANT!

Do not use the appliance when

extracted. Make sure the appliance is inactive before extracting it.

The only exception is adjusting the coffee mill which must be done with the machine out (see the section "Adjusting the coffee mill").



Use original or manufacturer recommended accessories and spare parts only.

2.1 Designated use

This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper. This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance.

This appliance can be installed over a built-in oven if the latter is fitted with a cooling fan at the rear (maximum microwave power: 3 kW).

2.2 Instructions

Read these instructions carefully before using the appliance.

- Keep these instructions
- Failure to respect these instructions may result in burns or damage to the appliance.
- The manufacturer is not liable for damage deriving from failure to respect these instructions.



The appliance has a cooling fan. This comes on whenever coffee, steam or hot water is delivered. After several minutes, the fan goes off automatically.

2.3 Connecting the appliance



DANGER!

Check that the mains power supply voltage corresponds to the value indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional. To comply with safety directives, an omnipolar switch with a minimum contact distance of 3 mm must be installed.

Do not use multiple sockets or extensions.



IMPORTANT!

Safety cutout devices must be included in the mains power supply in compliance with the installation regulations in the country concerned.

3. PRODUCT DESCRIPTION



Please refer to the Quick Guide leaflet

3.1 Description of the appliance

- A1** Cup tray
- A2** Service door
- A3** Coffee guide
- A4** Waste coffee container
- A5** Brewing unit
- A6** Cup tray lights
- A7** ON/stand-by button
- A8** Control panel
- A9** Tray
- A10** Hot water and steam nozzle
- A11** IEC connector
- A12** Water tank
- A13** Coffee spout (adjustable height)
- A14** Drip tray
- A15** Bean container lid
- A16** Bean container
- A17** Grinding adjustment knob
- A18** Pre-ground coffee funnel door
- A19** Measure
- A20** Compartment for measure
- A21** Pre-ground coffee funnel
- A22** Power cable
- A23** Main switch

3.2 Description of the control panel



A light touch is enough to activate the icon.

- B1** Display: guides the user in using the appliance.
- B2** ☰ icon to activate or deactivate menu parameter setting mode
- B3** ☕ "jug" icon to make a certain number of cups of coffee directly in the jug in one shot
- B4** ☕ icon to select the coffee taste
- B5** ☕ icon to select the type of coffee (espresso, small cup, medium cup, large cup, mug)
- B6** ↵ icon to exit the selected mode
- B7** B8 < > icons to scroll forwards or backwards through the menu and display the various modes
- B9** OK icon to confirm the selected function
- B10** ☕ icon to deliver a cup of coffee
- B11** ☕ icon to deliver two cups of coffee
- B12** ☕ icon to deliver cappuccino
- B13** ☕ icon to deliver hot water

3.3 Description of milk container and accessories

- C1** Frothed milk regulator
- C2** Milk container handle
- C3** CLEAN button
- C4** Milk intake tube
- C5** Frothed milk spout
- C6** Milk frother
- C7** Hot water spout
- C8** Cleaning brush

4. PRELIMINARY CHECKS

4.1 Controls after transport

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact Customer Services.

4.2 Installing the appliance



IMPORTANT!

- Installation must be performed by a

qualified professional in compliance with legislation in force in the country of installation (see Built-in installation).

- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children.
- Do not install the appliance in rooms where the temperature may drop to 0°C or lower.
- Customise the water hardness as soon as possible following the instructions in the “Setting water hardness” section.

5. USING THE APPLIANCE FOR THE FIRST TIME

Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the mill.



Customise water hardness as soon as possible following the instructions in the “17.7 Setting water hardness” section.

1. Connect the appliance to the mains supply. Press the ON/stand-by button (A7) (fig. 7).
Set the required language.
2. To set the language, use the < > icons (B7 and B8) to choose the required language (fig. 2). When the message “PRESS OK TO CHOOSE ENGLISH” is displayed, press the OK icon (B9) (fig. 3) for 3 seconds until “ENGLISH INSTALLED” is displayed. If you set the wrong language, follow the instructions in the “Setting the language” section. If your language is not available, select one from those displayed. The instructions refer to the English version. Then follow the instructions displayed:
3. After 5 seconds, the appliance displays “FILL TANK”. Extract the water tank (fig. 4), rinse and fill with fresh water.
Replace and push as far as it will go.
4. Place a cup under the hot water spout (fig. 5). (If the hot water spout is not inserted, the appliance displays

“INSERT WATER SPOUT”. Attach it as shown in figure 6.

The appliance displays: “HOT WATER PRESS OK”.

Press the OK icon (B9) (fig. 6) and after a few seconds a little water comes out of the spout.

5. The machine now displays “TURNING OFF... PLEASE WAIT” and goes off.
6. Extract the appliance by pulling it out using the handles (fig. 9). Open the lid and fill the container with coffee beans, then close the lid and push the appliance in.
The coffee maker is now ready for normal use.



IMPORTANT!

Never introduce pre-ground coffee, freeze dried coffee, caramelised beans or anything else which could damage the appliance.



When using the appliance for the first time, you need to make 4-5 cups of coffee and 4-5 cappuccinos before the appliance gives satisfactory results.



Each time you turn the coffee maker on by the ON/OFF main switch (A23), it performs a SELF-DIAGNOSIS cycle and then goes off. To turn it on again, press the ON/stand-by button (A7) (fig. 7).

6. TURNING ON AND HEATING UP

Each time the appliance is turned on, it performs an automatic preheat and rinse cycle which cannot be interrupted. The appliance is ready for use only after completion of this cycle.



DANGER OF BURNS!

During rinsing, a little hot water flows from the coffee spouts.

To turn the appliance on, press the ON/stand-by button (A7) (fig. 7). The message “HEATING UP... PLEASE WAIT” is displayed.

When heating is complete, the message changes to “RINSING”;

The appliance is at temperature when the message “MEDIUM CUP NORMAL TASTE” is displayed.

If no icon is pressed within about 2 minutes, the time (if set, see the “Setting the clock” section) is displayed.

If the time has not been set, the appliance displays the last functions set.

When any icon is pressed, “MEDIUM CUP NORMAL TASTE” is displayed again. The appliance is ready to make coffee again.

7. MAKING COFFEE USING COFFEE BEANS

1. The appliance is preset to make coffee with a normal taste. You can also choose coffee with an extra-mild, mild, strong or extra-strong taste. There is also a pre-ground coffee option. To choose the required taste, press the ☉ icon (B4) (fig. 10) a number of times. The required coffee taste is displayed.
2. Place 1 cup under the spouts to make 1 coffee or 2 cups for 2 coffees. Lower the spouts as near as possible to the cup for a creamier coffee (fig. 10).
3. Press the ☒ icon (B5) (fig. 11) to select the type of coffee: espresso, small cup, medium cup, large cup, mug. Now press the ☐ icon (B10) if you want to make a coffee and the ☑ icon (B11) (fig. 13) if you want to make 2 coffees.
The appliance now grinds the beans and starts delivering the coffee into the cup. Once the set amount of coffee has been delivered, the machine stops delivery automatically and expels the exhausted waste coffee into the waste coffee container.
4. After a few seconds, the appliance is ready for use again.
5. To turn the appliance off, press the ON/stand-by button (A7) (fig. 7). (Before going off, the appliance per-

forms an automatic rinse cycle. Take care to avoid scalds).

NOTE 1: If the coffee is delivered a drop at a time or not at all, see the “Adjusting the coffee mill” section.

NOTE 2: If the coffee is delivered too fast and the cream is not satisfactory, see the “Adjusting the coffee mill” section.

NOTE 3: Tips for a hotter coffee:

- Proceed as described in the section “Changing and setting menu parameters”, “Rinse” function.
- Unless preheated, do not use excessively thick cups as they will absorb too much heat.
- Preheat the cups by rinsing them with hot water.

NOTE 4: Coffee delivery can be interrupted at any moment by re-pressing the previously selected icon which remains lit during the operation.

NOTE 5: As soon as delivery is finished, to increase the quantity of coffee in the cup, just keep pressing the previously selected icon within 3 seconds after delivery has finished.

NOTE 6: When the appliance displays “FILL TANK”, fill the tank with water or the appliance will not deliver coffee. (It is normal for there to be a little water left in the tank).


NOTE 7: Never extract the water tank while the machine is delivering coffee.

If it is removed, it will not be possible to make the coffee and the appliance will display “GROUND TOO FINE ADJUST MILL AND PRESS OK” and then “FILL TANK”.

i After about 14 single (or 7 double) coffees, the appliance displays “EMPTY WASTE COFFEE CONTAINER”.

i The appliance provides a frequent empty waste coffee container message.

Even if not full, the empty waste coffee container message is displayed 72 hours after the first coffee has been delivered. For the 72 hours to be calculated correctly, the machine must never be turned off with the main switch in the 0 position. To clean, open the service door on the front of the appliance by pulling the spout, extract the drip tray and clean. When cleaning, always extract the drip tray completely.

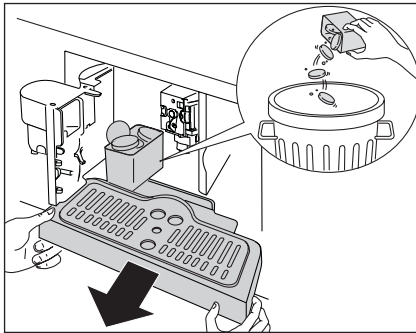

IMPORTANT!

When extracting the drip tray, the waste coffee container **MUST** always be emptied. If this is not done, the machine may be clogged.

NOTE 8: Never extract the water tank while the machine is delivering coffee. If it is removed, it will not be possible to make the coffee and the appliance will display “GROUND TOO FINE ADJUST MILL AND PRESS OK” and then “FILL TANK”.

Check the level of water in the tank and replace in the appliance.

To turn the appliance back on, press the OK icon (B9). “HOT WATER PRESS OK” is displayed.

Press the OK icon (B9) within a few seconds and deliver water from the cappuccino maker for about 30 seconds. When delivery stops, the basic modes are displayed again.



The coffee maker may request the operation to be repeated a number of times until the air is completely eliminated from the hydraulic circuit.










If this operation is not performed correctly or if the machine is turned off, the basic modes may be displayed, although the problem is in fact still present.

8. CHANGING THE QUANTITY OF COFFEE IN THE CUP

The appliance is set by default to automatically make the following types of coffee:

- espresso
- small cup
- medium cup
- large cup
- mug

To change the quantity, proceed as follows:

- Press the  icon (B2) to enter the menu. Press the   icons (B7) and (B8) (fig. 2) until “PROGRAM COFFEE” is displayed.
- Press the OK icon (B9).
- Select the type of coffee you want to change by pressing the   icons (B7) and (B8).
- Press the OK icon (B9) to confirm the type of coffee you want to make.
- Use the   icons (B7) and (B8) to

- change the quantity of coffee. The progress bar shows the quantity of coffee selected.
- Press the OK icon (B9) again to confirm (or the ↵ icon (B6) to cancel the operation).

- Press the ↵ icon (B6) twice to exit the menu.

The appliance is now reprogrammed with the new settings and is ready.


9. ADJUSTING THE COFFEE MILL

The coffee mill is preset in the factory and should not require adjusting. However, if after making the first few coffees you find that delivery is either too fast or too slow (a drop at a time), this can be corrected by adjusting the grinding adjustment knob (fig. 14).



IMPORTANT!


The grinding adjustment knob must only be turned when the coffee mill is in operation.

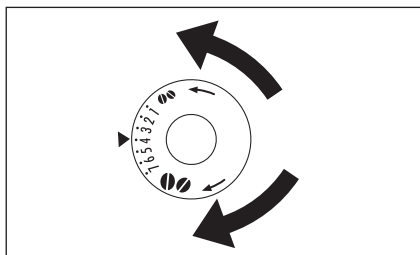

For slower delivery and creamier coffee,

turn one click anticlockwise (finer pre-ground coffee).

For faster delivery (not a drop at a time), turn one click clockwise (coarser pre-ground coffee).

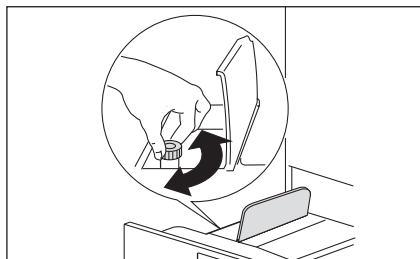

Only make small grinding adjustment.

The new setting only takes effect after the second cup of coffee.

10. PREPARING COFFEE WITH PRE-GROUND COFFEE (INSTEAD OF BEANS)

- Press the ☉ icon (B4) (fig. 7) and select the pre-ground coffee function.
- Extract the machine by pulling it outwards using the handles
- Lift the central lid, place one measure of pre-ground coffee in the funnel, push the appliance in then proceed as described in the section "Making coffee using coffee beans". N.B.: You can make just one coffee at a time by pressing the ☐ icon (B10).
- After using the machine with pre-ground coffee, to go back to making coffee using beans, deactivate the pre-ground coffee function by pressing the ☉ icon (B4).

NOTE 1: Never introduce pre-ground

coffee when the machine is off or it could spread through the inside of the appliance.


NOTE 2: Never add more than 1 measure, otherwise the appliance will not make the coffee.



NOTE 3: Use the measure provided only.

NOTE 4: Introduce only pre-ground coffee for espresso coffee machines into the funnel.

NOTE 5: If more than one measure of pre-ground coffee is used and the funnel clogs, push the coffee down with a knife then remove and clean the brewing unit and machine as described in the "Cleaning the brewing unit" section.

11. DELIVERING HOT WATER






- Always make sure the appliance is ready.
- Make sure the hot water spout is in place (fig. 21); position a container under the spout (fig. 22).
- Press the  icon (B13) (fig. 23) and hot water flows out of the hot water spout into the container.
You should not deliver hot water for more than 2 minutes at a time.

To interrupt, press the  icon (B13) or the  icon (B6). The appliance stops delivery once the set quantity is reached.

 
 
12. CHANGING THE QUANTITY OF HOT WATER

The machine is set by default to automatically delivery 200 ml of hot water.


To change these quantities, proceed as follows:


- Place a container underneath the hot water spout.
- Press the  icon (B2) to enter the menu or press the   icons (B7) and (B8) until "PROGRAM HOT WATER" is displayed.
- Press the OK icon (B9) to confirm.
- Select the required quantity of water by pressing the   icons (B7) and

(B8). The progress bar shows the quantity of water selected.

- Press the OK icon (B9) to confirm (or the  icon (B6) to cancel the operation.
- Press the  icon (B6) twice to exit the menu.
- The appliance is now reprogrammed with the new settings and is ready.


13. MAKING CAPPUCCINO


 Set the quantity of coffee you want to use to make the cappuccino in the "Program cappuccino" function in the menu.


- Select the taste of the coffee you want to use to make the cappuccino by pressing the  icon (B4).
- Remove the lid of the milk container.
- Fill the container with about 100 grams of milk for each cappuccino to be prepared (fig. 15). Never exceed the MAX level (corresponding to about 750 ml) marked on the container. You should ideally use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C).
- Make sure the intake tube is correctly inserted in the rubber washer (fig. 16) then replace the milk container lid.


- Position the frothed milk regulator (C1) between the words CAPPUCCINO and CAFFELATTE printed on the milk container lid.

The quantity of froth can be adjusted by moving the regulator towards the word CAFFELATTE for a denser froth. Moving it towards the word CAPPUCCINO obtains a less dense froth.

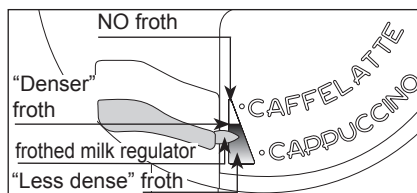

- Remove the hot water spout and attach the milk container to the nozzle (fig. 17).
- Position the milk spout as shown in fig. 18 and then place a sufficiently large cup under the coffee and milk spouts.
- Press the  icon (B12) (fig. 19). "CAPPUCCINO..." is displayed and after a few seconds, frothed milk flows out of the milk spout into the cup below. (Delivery stops automatically).
- The appliance delivers coffee.
- The cappuccino is now ready. Sweeten to taste and, if desired, sprinkle the froth with a little cocoa powder.

NOTE 1: While making cappuccino, the flow of frothed milk or coffee can be interrupted by pressing the  icon (B12).

NOTE 2: If the milk in the container finishes while delivering frothed milk, remove the container and add milk. Re-attach and press the  (B12) to request a cappuccino again.

NOTE 3: To ensure the complete cleanliness and hygiene of the milk frother, always clean the circuits in the milk container lid after making cappuccino.

"PRESS CLEAN!" flashes on the display.

- Place a recipient under the milk spout.




- Press the CLEAN button on the lid (C3) and hold down for at least 5 seconds (fig. 20) to start the cleaning function. The appliance displays the message "CLEANING!" above a progressive bar. You should not release the CLEAN button until the bar is complete indicating that cleaning is concluded. When the CLEAN button is released, the function stops. After cleaning, remove the milk container and place in the refrigerator. The milk should not be left out of the refrigerator for more than 15 minutes.





NOTE 4: To change the quantity of coffee or frothed milk the appliance delivers automatically into the cup, proceed as described in the section "Changing the quantity of coffee and milk for cappuccino".

14. CHANGING THE QUANTITY OF COFFEE AND MILK FOR CAPPUCCINO


 

The appliance is set by default to automatically deliver a normal cappuccino. To change these quantities, proceed as follows:

14.1 Changing the quantity of milk

- Fill the container with milk up to the maximum level indicated on the container.
- Press the  icon (B2) to enter the menu, then press the   icons (B7) and (B8) (fig. 2) until "PROGRAM CAPPUCCINO" is displayed.
- Press the OK icon (B9) to confirm. "PROGRAM MILK" is displayed.
- Press the OK icon (B9) again.

- Select the quantity of milk required by pressing the   icons (B7) and (B8). The progress bar shows the quantity of milk selected.
- Press the OK icon (B9) to confirm (or the  icon (B6) to cancel the operation.
- Press the  (B6) icon twice to exit the menu.


14.2 Changing the quantity of coffee


 

- Press the  (B2) icon to enter the menu (fig. 15), then press the   icons (B7) and (B8) (fig. 2) until "PROGRAM CAPPUCCINO" is displayed.

- Press the OK icon (B9) to confirm then the < > icons (B7 and (B8) (fig. 2) until “COFFEE FOR CAPPUCC.” is displayed.
- Press the OK icon (B9) again.
- Select the quantity of coffee required by pressing the < > icons (B7) and (B8). The progress bar shows the quantity of coffee selected.
- Press the OK icon (B9) to confirm or the ↵ icon (B6) to cancel the operation.
- Press the ↵ icon (B6) twice to exit the menu.

15. MAKING A CERTAIN NUMBER OF CUPS OF COFFEE WITH THE JUG FUNCTION



- Using this function you can automatically make a number of cups of coffee (4, 6) directly in a jug to keep the coffee hot.

 Please choose a jug with the right capacity.

- Place it under the coffee spout. The coffee spout (A13) must be fully raised to enable the jug to be inserted.
- Press the  icon (B3). “FILL BEAN CONT. AND WATER TANK, EMPTY WASTE CONT., PRESS OK” is displayed. Make sure the water tank is full, the bean container is full enough and the waste coffee container is completely empty.
- Press the OK icon (B9).
- Press the icon  (B2) to change the type of coffee, the taste, and the number of cups.
- Confirm by pressing the  icon (B3). The display shows a progress bar which indicates coffee making process. When the progress bar is complete, the appliance finishes the process.



IMPORTANT!

When the coffee beans are insufficient to complete the required function, the appliance stops the process and waits for the bean container to be filled again and the  icon (B3) to be pressed. For example, when you want to make 4 cups of coffee but the beans are insufficient, the appliance makes 2 cups then stops making coffee. Fill the bean container and press the  icon (B3). Once

the container has been filled, the appliance makes the 2 remaining cups only to reach the required number of 4 cups.

If there is not enough water in the tank to complete the required function or the waste coffee container is full, the appliance interrupts the process. After rectifying the problem, the programme must be started again. In this case, you must take the amount of coffee already delivered into account to avoid the jug overflowing.





 


16. CHANGING JUG FUNCTION PARAMETERS



The jug programme is factory set with default values.






These can be modified to suit your personal taste and saved.

You can select 5 different types of coffee from extra-mild to extra-strong and, with the aid of a graphic bar, 10 quantities of coffee.

To make these adjustments, proceed as follows:

 - Press the  icon (B2) to enter the menu. Press the   icons (B7) and (B8) until "PROGRAM JUG" is displayed.
- Press the OK icon (B9) and then the   icons (B7) and (B8) until "JUG COFFEE TASTE" is displayed.
- Press the OK icon (B9).
- Press the   icons (B7) and (B8) to select a different coffee taste from extra-mild to extra-strong.
- Confirm the required taste by pressing the OK icon (B9).
- To change the quantity of coffee, press

the   icons (B7) and (B8) until "JUG LEVEL" is displayed.

- Press the OK icon (B9) to confirm.
- A bar representing the quantity of coffee delivered for each cup is displayed and can be made shorter or longer. A completely full bar corresponds to the maximum quantity of coffee per cup.
- When the bar indicates the quantity of coffee required, press the OK icon (B9) to confirm.
- To change the quantity of cups, press the   icons (B7) and (B8) until "NR OF CUPS IN JUG" is displayed.
- Select the OK icon (B9) and then press the   icons (B7) and (B8) to select the number of cups required (4, 6). "JUG 4 CUPS" or "JUG 6 CUPS" is displayed.
- Press the OK icon (B9) to confirm.
- Press the  icon (B6) to exit the programming menu.

17. CLEANING

17.1 Cleaning the coffee maker

Do not use solvents or abrasive detergents to clean the coffee maker. A soft damp cloth will suffice.

Never wash any of the components of the coffee maker in the dishwasher.

The following parts of the machine must be cleaned regularly:

- Waste coffee container (A4).
- Drip tray (A14).
- Water tank (A12).
- Coffee spouts (A13)
- Pre-ground coffee funnel (A21).
- Inside of the machine, accessible after opening the service door (A2).
- Brewing unit (A5).

17.2 Cleaning the waste coffee container

When "EMPTY WASTE COFFEE CONTAINER" is displayed, the waste coffee

container must be emptied and cleaned.

To clean:

- open the service door on the front of the appliance (fig. 26), extract the drip tray (fig. 27) and clean.
- Clean the waste coffee container thoroughly (fig. 28). This can be done with the spatula on the brush (C8) provided.



IMPORTANT!

When extracting the drip tray, the waste coffee container must always be emptied.

17.3 Cleaning the drip tray



IMPORTANT!

If the drip tray is not emptied the water might overflow. This could damage the machine.

The drip tray is fitted with a level indicator (red) showing the level of water it

contains.

Before the indicator protrudes from the cup tray, the drip tray must be emptied and cleaned.

To remove the tray:

1. Open the service door (fig. 26).
2. Remove the drip tray and the waste coffee container (fig. 27).
3. Clean the drip tray (fig. 29) and waste coffee container (A4).
4. Replace the drip tray and waste coffee container (A4).
5. Close the service door.

17.4 Cleaning the water tank

1. Clean the water tank (A12) regularly (about once a month) with a damp cloth and a little mild washing up liquid.
2. Remove all traces of washing up liquid.

17.5 Cleaning the spouts

1. Clean the nozzles periodically using a sponge.
2. Check regularly that the holes in the coffee spout are not blocked.
If necessary, remove coffee deposits with a toothpick.

17.6 Cleaning the pre-ground coffee funnel

Check regularly (about once a month) that the pre-ground coffee funnel is not blocked. If necessary, remove coffee deposits with the brush (C8) supplied.



DANGER!

Before performing any cleaning operations, the machine must be turned off by pressing the main switch (A23) and unplugged from the mains power supply.
Never immerse the coffee maker in water.

17.7 Cleaning the inside of the coffee maker

1. Check regularly (about once a week)

that the inside of the appliance is not dirty.

If necessary, remove coffee deposits with the brush (C8) supplied and a sponge.

2. Remove the residues with a vacuum cleaner.

17.8 Cleaning the brewing unit

The brewing unit must be cleaned at least once a month.



IMPORTANT!

The brewing unit (A5) must not be removed when the appliance is on. Do not use force to remove the brewing unit.


1. Make sure the machine is correctly turned off (see "Turning the appliance off").
2. Open the service door (fig. 26).
3. Remove the drip tray and waste coffee container (fig. 27);
4. Press the two red release buttons inwards and at the same time pull the brewing unit outwards (fig. 31).



IMPORTANT!


Do not use washing up liquid to clean the brewing unit.
It would remove the lubricant applied to the inside of the piston.

5. Put the brewing unit under running water.

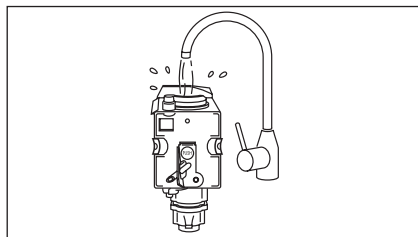


Use the brush (C8) to remove any coffee residues left in the unit.


6. After cleaning, replace the brewing unit (A5) by sliding it onto the internal support and pin at the bottom, then push the PUSH symbol fully in until it clicks into place.

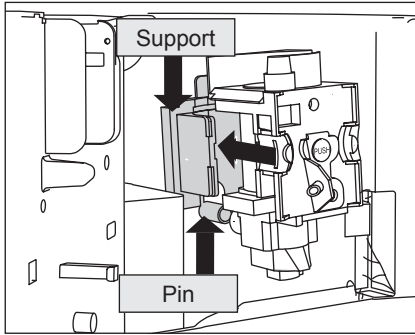

i If the brewing unit is difficult to insert, you must first adapt it to the right dimensions by pressing it forcefully from the bottom and top as shown in the figure.

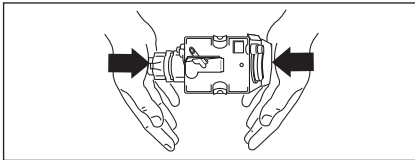

7. Once inserted, make sure the two red buttons have snapped out.

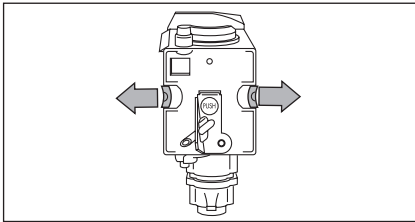

8. Replace the drip tray and waste coffee container.
9. Close the service door.




17.9 Cleaning the milk container

! IMPORTANT!
Always clean the tubes inside the milk container (C) when you prepare milk.

If there is still milk in the container, do not leave it out of the refrigerator for longer than strictly necessary.
Clean the container each time you pre-

pare milk as described in Note 3 in the section “Making cappuccino”.
All components can be washed in a dishwasher, placing them in the top basket of the dishwasher.

1. Turn the lid of the milk container clockwise then remove it.
2. Remove the milk spout and intake tube.

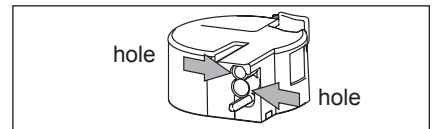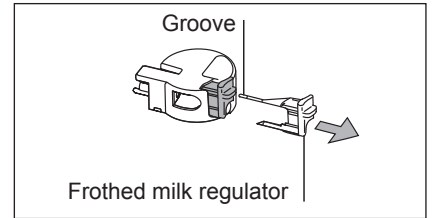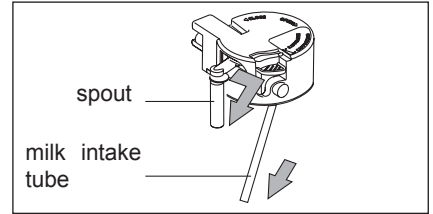

3. Remove the frothed milk regulator by pulling it outwards.
4. Wash all the components thoroughly with hot water and mild washing-up liquid.
Make sure there are no milk residues left inside the holes and the groove on the fine end of the frothed milk regulator.
5. Check that the intake tube and spout are not clogged with milk residues.
6. Replace the frothed milk regulator, milk spout and intake tube.
7. Replace the milk container lid.

 



18. CHANGING AND SETTING MENU PARAMETERS


When the appliance is ready, you can use the internal menu to modify the following parameters and functions:


- Choose language
- Rinsing
- Shut-off time
- Set clock
- Start time
- Auto-start
- Temperature
- Water hardness
- Program coffee
- Program cappuccino
- Program jug
- Program hot water
- Descale
- Reset to default
- Statistics
- Buzzer
- Contrast

18.1 Setting the language

To change the language on the display, proceed as follows:

 - Press the  icon (B2) to enter the menu. "CHOOSE LANGUAGE" is displayed.
- Press the OK icon (B9).
- Press the   icons (B7) and (B8) until the required language is displayed.
- Press the OK icon (B9) to confirm.
- Press the  icon (B6) to exit the menu.




 If you choose the wrong language, you can access the menu directly to modify the parameter.

- Press the  icon (B2) for at least 7 seconds until the appliance displays the various languages.
- Choose the required language as described in the section "Using the appliance for the first time".

18.2 Rinsing

This function enables you to obtain hotter coffee.

 





Proceed as follows:

- When you turn the appliance on, if you want to make a small cup of coffee (less than 60 cc), preheat the cup by rinsing it with hot water.
- If on the other hand more than 2/3 minutes have passed since the last coffee was made, before requesting another coffee, you must preheat the brewing unit by first pressing the  icon (B2) to enter the menu then the   icons (B7) and (B8) to select the "RINSING" function.
Press the OK icon (B9).
"RINSING... PLEASE CONFIRM" is displayed.
Press the OK icon (B9) again.
Deliver the water into the underlying drip tray or alternatively use this water to fill (and then empty) the cup to be used for the coffee to preheat it.






18.3 Changing the length of time the appliance remains on

The appliance is set by default to go off automatically 30 minutes after the last coffee has been made.

To change this interval (max. 120 min), proceed as follows:

- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "SHUT-OFF TIME" is displayed.
- Press the OK icon (B9) to confirm.
- Press the   icons (B7) and (B8) to set the time after which the appliance will go off (after 1/2 hour, 1 hour, 2 hours).
- Press the OK icon (B9) to confirm.
- Press the  icon (B6) to exit.



18.4 Setting the clock

- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "SET CLOCK" is displayed.
- Press the OK icon (B9).
- Use the   icons (B7) and (B8) to set the hour, then press the OK icon

- (B9) to confirm.
- Use the < > icons (B7) and (B8) to set the minutes, then press the OK icon (B9) to confirm.
- Press the ↵ icon (B6) to exit the menu.

18.5 Setting auto-start time

This function programmes the time the machine will come on automatically.

- Make sure the clock on the appliance has been set.
- Press the ≡ icon (B2) to enter the menu and then the < > icons (B7) and (B8) until "START TIME" is displayed.
- Press the OK icon (B9).
- Use the < > icons (B7) and (B8) to set the auto-start time, then press the OK icon (B9) to confirm.
- Use the < > icons (B7) and (B8) to set the minutes, then press the OK icon (B9) to confirm.
- Press the e< > icons (B7) and (B8) to activate the auto-start function until "AUTO START" is displayed.
- Press the OK icon (B9) to confirm. "AUTO START PLEASE CONFIRM" is displayed. Press the OK icon (B9).
The  symbol appears on the display.
- Press the ↵ icon (B6) to exit the menu.
- To disable auto-start, press the ≡ icon (B2), then the < > icons (B7) and (B8) until "AUTO START" is displayed. Press the OK icon (B9). "PLEASE CONFIRM" is displayed. Press ↵ (B6) to disable, the  symbol disappears.

18.6 Changing coffee temperature

To change coffee temperature, proceed as follows:

- Press the ≡ icon (B2) to enter the menu and then the < > icons (B7) and (B8) until "TEMPERATURE" is displayed.
- Press the OK icon (B9).

- Press the < > icons (B7) and (B8) to select the required coffee temperature from low, medium and high.
- Press the OK icon (B9) to confirm the temperature selected.
- Press the ↵ icon (B6) to exit the menu.

18.7 Setting water hardness

The operating period can be extended if required, making descaling less frequent by programming the machine on the basis of the real lime content in the water used.

Proceed as follows:

- remove the "Total Hardness Test" strip (attached to page 2) from its packaging then dip it fully in the water for a few seconds.
Then remove and wait about 30 seconds (until it changes colour and forms red squares).
- turn the appliance on by pressing the ON/stand-by button (A7).
- Press the ≡ icon (B2) to enter the menu and then the < > icons (B7) and (B8) until "WATER HARDNESS" is displayed.
- Press the OK icon (B9).
- Press the < > icons (B7) and (B8) until the number coincides with the number of red squares on the test strip (for example, if there are 3 red squares on the test strip, select the message "WATER HARDNESS 3" .
- Press the OK icon (B9) to confirm. The coffee maker is now programmed to provide the descale warning when actually necessary.

18.8 Programming coffee

For instructions on programming coffee, see the "CHANGING THE QUANTITY OF COFFEE IN THE CUP" section.

18.9 Programming cappuccino

For instructions on programming cappuccino, see the section "CHANGING THE QUANTITY OF MILK AND COFFEE

FOR CAPPUCCINO”.

18.10 Programming the jug

For instructions on programming the jug, see the section “CHANGING JUG FUNCTION PARAMETERS”.

18.11 Programming water

For instructions, see the “CHANGING THE QUANTITY OF HOT WATER” section.

18.12 Descaling



IMPORTANT! Descaler contains acids.

Respect the safety warnings provided by the manufacturer and given on the descaler pack.






Use the descaler recommended by the manufacturer only. (cod. **9029798718 M3BICD200** - Web-Shop Electrolux: www.electrolux.com/shop). Use of other descalers invalidates the guarantee. Failure to descale the appliance as described also invalidates the guarantee.

When the message “DESCALE 30 BEVERAGES LEFT” is displayed, the machine requires descaling.



It is nonetheless possible to serve another 30 beverages, after which the machine will display the message “DESCALE MACHINE BLOCKED”. Delivery is now no longer possible and the OK icon (B9) must be pressed to start descaling.

To run the descale cycle proceed as follows:

- make sure the machine is ready;
- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until “DESCALE” is displayed.
- Press the OK icon (B9) and the appliance displays “DESCALE PLEASE CONFIRM”.




- Press the OK icon (B9). The message “ADD DESCALER PLEASE CONFIRM” is displayed.
- Empty the tank of water, pour the contents of the descaler bottle into the tank respecting the instructions given on the descaler pack, then add water. Position a container with a capacity of about 2 litres under the hot water spout and deliver coffee.
- Press the OK icon (B9); Descaler flows out of the coffee spout and then from the hot water spout into the container below. The appliance displays the message “DESCALING”.
- The descale programme automatically performs a series of deliveries and pauses.
- After about 30 minutes, “RINSING FILL TANK” is displayed.
- Empty the water tank, rinse to eliminate descaler residues, then fill with clean water.
- Replace the tank full of clean water. “RINSING PLEASE CONFIRM” is displayed again.
- Press the OK icon (B9) again. Hot water flows out of the coffee spout and into the container below.
- After the first rinse, the message “RINSING FILL TANK” appears on the display again.
- Empty the water tank, rinse it and replace the tank full of clean water, then press the OK icon (B9).
- During the second rinse the water flows out of the water spout and into the container below.
- Wait until “RINSING COMPLETE PLEASE CONFIRM” is displayed.
- Press the OK icon (B9). The message “FILL TANK” appears on the display. Fill the tank again with clean water.
- The descale programme is now terminated and the appliance switches off. NOTE: If descaling is interrupted before completion, the process must be begun again from the beginning.



IMPORTANT! FAILURE TO DESCALING THE APPLIANCE REGULARLY INVALIDATES THE GUARANTEE







18.13 Resetting default values (reset)

If you change the original values, the default values can be reset as follows:

- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "RESET TO DEFAULT" is displayed.
- Press the OK icon (B9) and the appliance displays "RESET TO DEFAULT PLEASE CONFIRM".
- Press the OK icon (B9) to reset the default values;


18.14 Statistics

 


 

This displays statistics relating to the machine. To display, proceed as follows:

- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "STATISTICS" is displayed.
- Press the OK icon (B9).
- Press the   icons (B7) and (B8) to verify:
- How many coffees and cappuccinos have been made.
- How many times the machine has been descale
- The total number of litres of water delivered.
- Press the  icon (B6) once to exit the function or twice to exit the menu.

18.15 Buzzer






This activates or deactivates the buzzer emitted by the machine each time an icon is pressed or an accessory is inserted/removed.

 The buzzer is active by default.


- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "BUZZER" is displayed.
- Press the OK icon (B9). "BUZZER PLEASE CONFIRM" is displayed.
- Press the  icon (B6) to disable or the OK icon (B9) to enable the buzzer.
- Press the  icon (B6) to exit the menu.

18.16 Adjusting contrast

To increase or reduce the contrast of the display, proceed as follows:

- Press the  icon (B2) to enter the menu and then the   icons (B7) and (B8) until "CONTRAST" is displayed.
- Press the OK icon (B9).
- Press the   icons (B7) and (B8) until the required display contrast is reached.

The progressive bar indicates the level of contrast selected.

- Press the OK icon (B9) to confirm.
- Press the  icon (B6) once to exit the function or twice to exit the menu.

19. TURNING THE APPLIANCE OFF

Each time the appliance is turned off, it performs an automatic rinse cycle which cannot be interrupted.



DANGER OF BURNS! During rinsing, a little hot water flows from the coffee spouts.

Avoid contact with splashes of water.

To turn the appliance off, press the ON/stand-by button (A7).

The appliance performs the rinse cycle then goes off.



If the appliance is not used for an extended period, place the main switch on the back of the appliance in the 0 position (A23).

20. TECHNICAL SPECIFICATION

Voltage: 220-240 V~ 50-60 Hz max. 10A

Absorbed power: 1350W

Pressure: 15 bars

Water tank capacity: 1.8 litres

Size LxHxD: 594x 455x411

Weight: 23/24 kg



This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

21. DISPLAYED MESSAGES

Displayed message	Possible cause	Remedy
FILL TANK!	The water tank is empty or positioned incorrectly.	Fill the tank with water and/or insert it correctly, pushing it as far as it will go.
GROUND TOO FINE ADJUST MILL AND (alternating with) PRESS OK	The grinding is too fine and the coffee is delivered too slowly.	Turn the grinding adjustment knob by one notch toward number 7, then run a rinse cycle. The new setting will be effective starting from the second cup of coffee.
GROUND TOO FINE ADJUST MILL AND (alternating with) PRESS OK (then) FILL TANK!	The tank has been removed during delivery.	Insert the tank and press the OK icon (B9). "HOT WATER PRESS OK" is displayed. Press the OK icon (B9) again. The appliance is once again ready for use.
EMPTY WASTE COFFEE CONTAINER	The waste coffee container (A4) is too full or more than 3 days have passed since you last made coffee (this guarantees correct hygiene of the machine).	Empty the waste coffee container and clean, then replace. Important: when removing the drip tray, the waste coffee container MUST be emptied, even if it is not completely full. If this is not done, when you make the next coffees, the waste coffee container may fill up more than expected and clog the machine.
INSERT WASTE COFFEE CONTAINER	After cleaning, the waste coffee container has not been replaced.	Open the service door and insert the waste coffee container.
ADD PRE-GROUND COFFEE	The "pre-ground coffee" function has been selected without placing any pre-ground coffee in the funnel. The funnel (A21) is blocked.	Extract the appliance and place pre-ground coffee in the funnel. Empty the funnel with the help of a knife as described in the section "Cleaning the pre-ground coffee funnel".
PLEASE DESCALE!	The machine must be descaled.	The descaling procedure described in the "Descaling" section needs to be performed as soon as possible.
LESS COFFEE	Too much coffee has been used.	Select a milder taste or reduce the quantity of pre-ground coffee, then make the coffee again.


Displayed message	Possible cause	Remedy
FILL BEAN CONTAINER	The coffee beans have run out.	Fill bean container
INSERT BREWING UNIT	The brewing unit has not been replaced after cleaning.	Insert the brewing unit as described in the section "Cleaning the brewing unit".
CLOSE DOOR	The service door is open	Close the service door.
GENERAL ALARM!	The inside of the appliance is very dirty.	Clean the inside of the appliance thoroughly, as described in the section "Cleaning and maintenance". If the message is still displayed after cleaning, contact a customer services.

22. TROUBLESHOOTING

Problem	Possible cause	Remedy
The coffee is not hot	The cups were not preheated.	Warm the cups by rinsing them with hot water.
	The brewing unit has cooled down because 2/3 minutes have elapsed since the last coffee was made.	Before making coffee, preheat the brewing unit by selecting the RINSING function in the menu.
	The temperature set is too low.	Change the set temperature (see paragraph "Changing coffee temperature").
The coffee is not creamy enough	The coffee is ground too coarsely.	Turn the grinding adjustment knob one click anticlockwise towards "1" while the coffee mill is in operation.
	Wrong type of coffee	Use a type of coffee for espresso coffee makers.
The coffee is delivered too slowly or a drop at a time.	The coffee is ground too finely.	Turn the grinding adjustment knob one click clockwise towards "7" while the coffee mill is in operation. Continue one click at a time until coffee delivery is satisfactory. The effect is only visible after delivering two coffees.

Problem	Possible cause	Remedy
The coffee is delivered too quickly.	The coffee is ground too coarsely.	Turn the grinding adjustment knob one click anticlockwise towards "1" while the coffee mill is in operation. Avoid turning the grinding adjustment knob excessively otherwise when you select 2 cups, the coffee may be delivered a drop at a time. The effect is only visible after delivering two coffees.
Coffee does not come out of one of the spouts.	The spouts are blocked.	Clean the spouts with a toothpick.
The coffee does not come out of the spouts, but from around the service door (A2).	The holes in the spouts are clogged with dry coffee dust. The coffee guide (A3) inside the service door is blocked and cannot swing.	If necessary, remove coffee deposits with a toothpick, sponge or stiff bristled kitchen brush. Thoroughly clean the coffee guide (A3), particularly near the hinges.
Water comes out of the spouts instead of coffee.	The pre-ground coffee may be blocked in the funnel (A21).	Clean the funnel (A21) with a wooden or plastic fork, clean the inside of the machine.
The milk does not come out of the milk spout (C5).	The intake tube is not inserted or is inserted incorrectly.	Insert the intake tube (C4) in the rubber washer in the milk container lid (fig. 24).
The milk is not well frothed.	The milk container lid is dirty. The frothed milk regulator is not positioned correctly.	Clean the milk container lid as described in the section "Cleaning the milk container". Adjust following the instructions in the section "Making cappuccino".
The milk contains bubbles or squirts out of the milk spout.	The milk is not cold enough or is not semi-skimmed. The frothed milk regulator is incorrectly adjusted. The milk container lid is dirty.	You should ideally use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C). If the result is still disappointing, try another brand of milk. Move the frothed milk regulator slightly towards the word "CAFFELATTE" (see section "Making cappuccino"). Clean the milk container lid as described in the section "Cleaning the milk container".

electrolux.com/shop

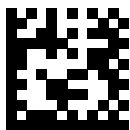

5713240351_02_0619

