



Google TV LEDTV

<mark>دل</mark>يل المستخدم

المودیل : ^ 50U5 55U5 65U5

الرج<mark>اء قراءة هذا الدليل بعناية قبل تشغي</mark>ل الجهاز ، واحتفظ به للرجوع إليه مستقبلاً

هذه التصافيم والمو<mark>اصفات عرضة للتغيير بهدف إدخال ت</mark>حسينات عليها وذلك دون إشعار فسبق





Google TV

User's Manual

Models:

▲ 50U5
▲ 55U5

▲ 65U5

Please read this manual carefully before operating your set. Retain it for future reference.

Designs and specifications are subject to change for improvement without prior notice.

1509001 CB





User Interface (UI) image seen here is for reference only. Actual UI may differ.

Models: 50U5 55U5 65U5

AUDIO

Dolby, Dolby Vision, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2021 DolbyLaboratories. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

IMPORTANT SAFETY INSTRUCTIONS



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

WARNING

1. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

2. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

3. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

4. Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

5. The mains plug/appliance couple is used as disconnect device, the disconnect device shall remain readily operable.

6. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

7. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

8.Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by manufacturer of the television set.

- Only using furniture that can safely support the television set.

- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and television set to a suitable support.

- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.

- Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and located, the same considerations are above should be applied.

9. No naked flame sources, such as lighted candles, should be placed on the apparatus.

10.Keep a minimum distance of 5 cm around all edges of the display for sufficient ventilation.

www.alhafidh.com

1

www.alhafidh.com

© مجموعة الحافظ للتجارة. 2024 fzco الأستنساخ كلياً أو جزئياً ممنوع منعاً باتاً

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product. All trademarks are the property of their respective owners and all rights are acknowledged.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



X

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Table of Contents

Chapter 1: Introduction

| Precautions | . 4 |
|--------------------------------|-----|
| Product | . 4 |
| Power and Plug | . 4 |
| Power Cord and Signal Cable | . 4 |
| Use Environment | . 4 |
| Cleaning | . 4 |
| Hanging the TV Set on the Wall | . 4 |

Chapter 2: General Operation

| Switching on | . 5 |
|--------------------|-----|
| Switching off | . 5 |
| Network connection | . 6 |

Chapter 3: Other Information

| Troubleshooting | 7 |
|-------------------|---|
| Base Installation | 7 |

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use. **Product**

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

- Unplug the set under the following conditions:
 If the set will not be used for a long period of time.
- If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Introduction

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

Hanging the TV Set on the Wall Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:

Illustrations within this publication are provided for reference only.

Chapter 2

Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

- Precautions on using batteries:
- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable FIRST to the television, THEN to a mains socket.

(Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

• If your TV is connected to an AC supply

Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

• If your TV is connected to a DC supply

Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.

4. When powered on, the TV will be turned on directly or be in standby.

Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the \mathfrak{O} button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet. Note: For some models, press the power button to switch off the TV set .

Network Connection

To access the internet, you must subscribe high speed broadband internet service from your internet service provider.

Your TV can be connected to your home network in two ways:

• Wired, using the RJ45 (LAN) connector on the back panel.

• Wireless, using the internal wireless or external wireless USB adapter and your home wireless network. Note: This function is not available for certain models. Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP (Internet Service Provider).

Moder

0 0 0 0 0

Connecting to a wired network

To connect to a wired network:

1. Ensure you have:

- An ethernet cable long enough to reach your TV
- A router or modem with an available Ethernet port
- A high-speed internet connection
- An Ethernet (LAN) port on the back of the TV



3. Use the Network Settings to configure the TV.

Connecting to a wireless network

To connect to a wireless network

1. Ensure you have:

- A router broadcasting a high-speed wireless signal
- A high-speed internet connection
- A wireless USB Adapter
- (not need for a built-in wireless connection).
- 2. The TV set with Wi-Fi Module.
- 3. Use the Network menu to configure the TV.

Note: Some models may have internal wireless module,

then the wireless USB adapter is unnecessary.

Some external wireless adapters cannot be campatible with the TV.



USB port on the

TV Set



Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list

No picture, no sound

 Check if the fuse or circuit breaker is working.
 Plug another electrical device into the outlet to make sure it is working or turned on.
 Power plug is in a bad contact with the outlet.
 Check the signal source.

No color

Change the color system.
 Adjust the saturation.
 Try another channel. Black-white program may be received.

Remote control does not work

Change the batteries.
 Batteries are not installed correctly.
 Main power is not connected.

No picture, normal sound

Adjust the brightness and contrast.
 Broadcasting failure may happen.

Normal picture, no sound

 Press the Vol+ button to increase volume.
 Volume is set to mute, press the mute button to restore sound.
 Change the sound system.
 Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Blank screen in VGA mode

Perhaps the TV can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the

reception.

 Adjust the position and orientation of the indoor/outdoor antenna.
 Check the connection of antenna.
 Fine tune the channel.
 Try another channel. Broadcasting failure may happen.

© Alhafidh Group Trading fzco. 2024 Reproduction in whole or in part is strictly prohibited

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed

1. Press the Power button to turn off TV, then press the

Power button again to reset TV.

2. Unplug the power cord, then press the Power button to reset TV. Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

To fix the double support base on the unit by screws, the installation is completed. Note: Illustrations below are provided for reference only and may differ from actual product appearance.



www.alhafidh.com

للوصول إلى الإنترنت، بحب الاشتراك في خدمة الإنترنت ذي النطاق الترددي عالي السرعة من موفر خدمة الإنترنت. بمكن توصيل التلفاز بالشبكة المنزلية بطريقتين:

• سلكى، باستخدام موصل LAN) RJ45) على اللوحة الخلفية.

• لاسلكّو،، باستخدام مهايئUSB اللاسلكوي الداخلي أو اللاسلكوي الخارجي والشبكة اللاسلكية المنزلية. ملاحظة: لا تتوفر هذه الـوظيفة في بعض الَّطرز. الإرشَّادات التاليةُ هي مجرَّد طرق معتادة لتوصيل تلفازك بالشبكة ا لسلكية أو اللاسلكية. قد تكون طرَّيقة التَّوصيل مُختلفة وفقًا لتَّكوينَّ الشَّبكة الْفَعلي إذا كاُنت لّديك أي أسئلة عن ا لشبكة المنزلية، فيرجى الرجوع إلى موفر خدمة الإنترنت).(ISP

> التوصيل بشبكة سلكية للتوصيل يشبكة سلكية: 1 . تأكد من أن لديك: •كابل إيثرنت طويل يشكل كاف للوصول إلى التلفاز • موجه أو مودم مزوّد بمنفذ إيثرنت •اتصال إنترنت عالى السرعة •منفذ إيثرنت LAN) (في الجزء الخلفي من التلفاز عم بتوصيل كابل الإيثرنت بالموجه ومنفذ الإيثرنت في الحزء الخلفي من التلفاز. 3 . استخدم إعدادات الشبكة ا لتكوين التلفاز



التوصيل بشبكة لاسلكية

للتوصيل يشبكة لاسلكية

). تأكد من أن لديك:

• موجه بيث إشارة لاسلكية عالية السرعة

•اتصال إنترنت عالبي السرعة

• مهايورًا USBلاسلخّى (ليس ضروريًا للاتصال اللاسلكون المدفج)

2. حهاز تلفاز مزود بوحدة Wi-Fi.

 استخدم قائمة الشبكة لتكوين التلفاز. <mark>ملاحظة: يمكن</mark> أن تحتوى بعض الطرز على وحدة اتصال <mark>لاسلكية داخلية، و</mark>من ثم يُكون مهايئUSB اللاسلكي غير <mark>ضروري. لا يمكن أن</mark> تكون بعض المهايئات اللاسلكية الخا رحية قتوافقة مع التلفاز.

www.alhafidh.com



الفصل 3

استكشاف الأخطاء وإصلاحها

يمكن إصلاح فعظم المشكلات التبي تواجهها فع تلفازك فن خلال الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية.

لا توحد صور، لا بوحد صوت

1. تحقق من عمل المصهر أو قاطع الدائرة الكهربائية. عم بتوصيل قابس جهاز كهربائي آخر بمنفذ الطاقة للتأكد من قابس الطاقة غير متصل جيداً بمنفذ الطاقة. 4. تحقق من مصدر الإشارة.

لا توجد ألوان 1. غيّرُ نظام الألوان. 2. اضبطُ تشبع الألوان

جربُ اختيار قناة أخرى. قد يجرى استقبال برنامج الأبيض والأسود.

وحدة التحكم عن نُعد لا تعمل 1. استبدل البطاريات. البطاريات غير فركبة بشكل صحيح. 3. مصدر الطاقة الرئيسي غير متصل.

> لا توجد صورة، الصوت طبيعي 1. اضبط السطوع والتباين. 2. قد يكون هناك فشل في البث.

صورة طبيعية، لا يوجد صوت

1. اضغط على الزر Vol+ لزيادة مستوى الصوت. عستوى الصوت فضبوط على وضع الكتم، اضغط على زر الكتم لاستعادة الصوت. 3. غيّرُ نظام الصوت. 4. قد يكون هناك عطل في البث.

شاشة فارغة في وضعVGA

ريما لم يتمكن التلفاز من التعرف على الدقة المُ حددة لجهاز ا لكمبيوتر. يوصى بالتغيير إلى أفضل دقة أو دقة قياسية أخرى على نظام التشغيل Windows .

فوحات غبر فنظمة تظهر على الصورة عادة ما يحدث ذلك بسبب تداخل محلى مثل السيارات أو المصابيح أو فجففات الشعر. اضبط الهوائي للحد فن التداخل.

نقاط بيضاء وتداخل

إذا كان الهوائي موضوعاً في منطقة هامشية يعيدة عن إشارة التلفاز فما يؤدى إلى ضعف الإشارة، قد تظهر النقاط على الصورة. إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائبي خاص لتحسين الاستقبال. 1. اضبط فوقع وتوجيه الهوائي الداخلي/ الخارجي. 2. تحقق من توصيل الهوائي. 3. اضبط توليف القناة. جرب اختيار قناة أخرى. قد يكون هناك فشل في البث.

تداخل الترددات اللاسلكية

الكهربائية أو أحهزة كهربائية أخرى.

الإشعال

الصورة الشبحية

إلى تحسين الاستقبال.

ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم

ظهور بقع سوداء أو خطوط أفقية، أو اهتزاز الصورة. يحدث ذلك

عادة بسبب تداخل نظام الإشعال أو مصابيح النيون أو المثاقب

تحدث الصورة الشبحية بسبب إشارات التلفاز التى تتخذ مسارين. أحدهم المسار المباشر والآخر ينعكس من المبانى الطويلة أو

التلال أو الأجسام الأخرى. قد يؤدى تغيير اتجاه الهوائي أو موقعه

فى حالة تعطل التلفاز

1. اضغط على زر الطاقة (Power) لإيقاف تشغيل التلفاز، ثم اضغط على زر الطاقة فرة أخرى لإعادة ضبط التلفاز. افصل سلك الكهرباء، ثم اضغط على زر الطاقة لإعادة ضبط. ملاحظة: إذا لم تنجح الطريقتان في حل المشكلة، اتصلُ بخدمة

ما بعد البيع لحل المشكلة.

تركبت القاعدة

www.alhafidh.com

بمجرد تثبيت قاعدة الدعم المضاعف على الوحدة بواسطة البراغي تكون قد انتهيتَ من تركيب القاعدة. ملاحظة: الرسم التوضيحي أدناه هو لغرض الاطلا<mark>ع فقط، وقد</mark> يختلف عن الشكل الفعلى للمنتج.



الاحتياطات

يُرجى قراءة جميع الإرشادات قبل تشغيل الجهاز. حافظ على هذه الإرشادات جيداً لاستخدامها في المستقبل.

المنتج

∙لا تسد فتحات التهوية الموجودة على الغطاء الخلفي أو تغطيها.

•لا تدفّع أغراض من أي نوع إلى داخل هذا الجهاز من خلا ل فتحات الهيكل حيث قد تلامس أجزاء توصيل التيار أو أجزاء دائرة القصر، مما ينتج عنه نشوب حريق أو التعرض لصدمة كهربائية أو حدوث تلف بالجهاز. • لا تحاول فتح الهيكل حيث قد يؤدي إلى حدوث تلف. لا توجد أي أجزاء داخل الجهاز يمكنك إصلاحها بنفسك. أعمال الخدمة.

. بلا تلمبس سطح الشاشة بأصابعك حيث قد يؤدي ذلك إلى خدشها أو ظهور علامات على شاشة التلفاز. •لا تُحمل على شاشة التلفاز بضغط كبير حيث قد يؤدي ذلك إلى تلف شاشة التلفاز بشدة.

الطاقة والتوصيل

•افصل الجهاز في ظل الظروف التالية: - عند عدم، استخدام، الجهاز لفترة طويلة من الوقت. - عند تلف سلك الطاقة أو قابس/مخرج الطاقة. - اتبع الإرشادات لتركيب الجهاز وضبطه. اضبط وحدات التحكم هذه التي يتم الإشارة إليها في إرشادات التشغيل هذه إلى حدوث تلف للجهاز. عند حدوث ذلك، افصل الجها ز واستشر مو</mark>ظف خدمة.

<mark>- إذا تعرض ال</mark>جهاز لحمل أو سقط وتلف الهيكل.

سلك الطاقة وكابل الإشارة

• لا تسمح بأي شيءً يتواجد أو يلتف على سلك الطاقة وكابل الإشارة.

• احمر سلك الطاقة وكابل الإشارة من أن يتم سحقهما. •لا تزيد الحمل بشكل زائد على سلك الطاقة أو مأخذ الطاقة.

• لا تُعرض سلك الطاقة وكا<mark>ب</mark>ل الإشارة إلى الرطوبة.

www.alhafidh.com

مقدمة

• لا تضع هذا التلفاز على عربة أو حامل أو منضدة غير مستقرة.

 ضع الجهاز في مكان يسمح بالتهوية الجيدة للجهاز.
 لا تستخدم الجهاز بالقرب من المناطق الرطبة والبا ردة. احم الحهاز من الحرارة الزائدة.

ردة. اختار الجهار من الحرارة الرائدة. • حافظ على التلفاز بعيداً عن ضوء الشمس المباشر. • لا يديد أبيات منفر الروحان الم قطانية العلم أواليلار م

 لا يجب أن يتعرض الجهاز إلى قطرات الماء أو البلل، و لا يجب وضع أغراض ممتلئة بالسوائل مثل الزهريات، على الجهاز.

•لا تستخدم الجهاز بالقرب من أماكن الأتربة.

التنظيف

ىىئة الاستخدام

 أزل الغبار من على الجهاز من خلال مسح الشاشة وا لهيكل باستخدام قطعة قماش ناعمة ونظيفة أو بعض المنظفات السائلة الخاصة.

لا تضغط بشدة على الشاشة أثناء التنظيف.
 لا تستخدم الماء أو منظفات كيميائية أخرى لتنظيف.

• لا للسحدم الماء او فلصفات حيميانية احرى للنصيف الشاشة حيث قد يؤدي ذلك إلى تلف سطح شاشة ا لتلفاز.

تعليق جهاز التلفاز على الحائط تحذير: تتطلب هذه العملية شخصين.

للتأكد من التركيب السليم، اتبع ملاحظات السلامة ا لتالية:

 تحقق من أن الحائط يتحمل وزن جهاز التلفاز و مجموعة حامل الحائط.

اتبع تعليمات التركيب المقدمة مع حامل الحائط.
 يجب تركيب جهاز التلفاز على حائط رأسى.

• تَأْكُد مَنْ استخدام البراغي المناسبة فقَّط لمادة ا لحائط.

•تأكد من وضع كابلات جهاز التلفاز في أماكنها لتجنب خطر التعثر فيها. كما تنطبق جميع تعليمات السلامة ا لأخرى الخاصة بأجهزة التلفاز هنا.

ملاحظة:

تُستخدم الرسومات التوضيحية في هذا الكُتيب كمرجع فقط.

.

التشغيل

اتبع التعلّيمات الموجودة على هذه الصفحة حول كيفية تشغيل جهاز التلفاز ووحدة التحكم عن بُعد قبل المتابعة إلى الصفحات الصفحات الصفحات الصفحات الصفحات الصفحات التعليم

1 . أدخل بطاريتين في وحدة التحكم عن بُعد.

الاحتياطات الخاصة بأستخدام البطاريات:

- استُخدم أنواع البطارية المحددة. تأكيم أناء تستخدما المحددة.

- تأكد من أنك تستخدم القطب الصحيح. - لا تقم بخلط البطاريات الحديدة بالمستعملة.

- لا تمتم بخلط البصاريات الجديدة بالمسلع - لا تستخدم بطاريات قابلة لاعادة الشحن.

د مستحدم بيعاريك عبنه يعده المسحن. - لا تُعرض البطاريات للحرارة الزائدة مثل أشعة الشمس أو النار أو ما شابه أو رميها في النيران أو إعادة شحنها أو محاولة فتحها، لأن ذلك بمكن أن بسبب التسريب أو الانفحار.

- أزل البطاريات من وحدة التحكم عن يُعد إذا لم تكن تستخدمه لفترة زمنية طويلة.

2 . وصل كابل الطاقة أولاً بالتلفاز، ثم بمقبس التيار الكهربائي.

(ملاُحظة: إذا تم توصيلُ كبل الطاقة بالتلفاز، يُرجقُ توصيلُ كَابِل الطاقة بمقبس الطاقة فقط.)

إذا كان تلفازك فتصلاً بمصدر إفداد بالتيار المتردد.

ينبُغي توصيلُ جهاز التلفاز بمصُدر تيار مترددُ. لا يجُب توصيله بمصدر تيار مستمر. إذا تم فصل القابس من الكابل، فلا تقم، تحت أي ظرف، بتوصيله بمقبس الطاقة، تجنبًا للتعرض لخطر صدمة كهربائية.

• إذا كان تلفازك فتصلاً بمصدر تيار فباشر

يجب توصيل جهاز التلفاز الخاص بك بمصدر إمداد بالتيار المباشر فقط. ولا يجب توصيله بمصدر إمداد بالتيار المتردد. إذا تم فصل القابس من الكابل، فلا تقم، تحت أي ظرف، بتوصيله بمقبس الطاقة، تجنبًا للتعرض لخطر صدمة كهربائية. 3 . وصل الهوائق الخارجي بمقبس ANTENNA IN الموجود على ظهر حهاز التلفاز.

4 . عند التوصيل بالطاقة، فإنه سيتم تشغيل التلفاز مباشرة أو في وضع الاستعداد. ملاحظة: في بعض الطرز، يتم تشغيل التلفاز من خلال الضغط على زر الطاقة.

إذا أضاء مؤشر الطاقة، فسيكون جهاز التلفاز في وضع الاستعداد. اضغط على الزر & الموجود على وحدة التحكم عن بُعد أو على جهاز التلفاز لتشغيل التلفاز.

إيقاف التشغيل

. • لتحويل وضَّع التلفاز إلى وضع الاستعداد، اضغط على الزر ٥ - الموجود على وحدة التحكم، عن بُعد أو على <mark>التلفاز، و</mark> سيخلل جهاز التلفاز متصلاً بالطاقة، ولكن مع استهلاك طاقة منخفض.

• لإيقافُ تشُغيل جُهاز التلفاز، افصل مأخَذ التيار الكهربائي من مخرج التيار الكهربائي. ملاحظة: في بعض <mark>الطرز، اضغط</mark> على زر الطاقة لإيقاف تشغيل جهاز التلفاز.

ملاحظات للتخلص من البطارية

تحتوى البطاريات المستخدمة مَّع هذا الجهاز على مواد كيميائية ضارة بالبيئة. للحفاظ على بيئتنا، تخلص من البطاريات المستَّعملة وفقاً للقوانين واللوائح المحلية.

لا تتخلص منُ البطارياُت مَّعُ النَّفايات المنزَّلية العادية. للحصول على مزيد من المعلومات، يرجى التواصل مع الجهة المحلية المعنية في بلدك أو بائع التجزئة الذي اشتريت منه المنتج.



هذا الجهاز من الفئة الثانية أو جهاز كهربائي مزدوم العزل. وتم تصميمه بطريقة لا تتطلب توصيلة أمان بطرف التأريض الكهربائي.



Å لمنع انتشار الحريق، لا تضع بالقرب من الجهاز شموع أو أي مصادر أخرى للحرارة.

www.alhafidh.com

الطريقة الصحيحة للتخلص من هذا المنتج: تشير هذه العلامة إلى أنه ينبغي عدم التخلص من هذا المنتج مع النفايات المنزلية الأخرى في دول الاتحاد الاوروبي. ولمنع وقوع الضرر المحتمل على البيئة أو صحة الانسان الناتج 🛁 عن التخلص مُنَّ النفايَات بشَّكُلٌّ غير صحيحُ، قَمَّ بإعادة تَدُويرُ الْمنتج بَشكل مسْؤولٌ لتُساعدُ على إعادة اسْتخدام الموارد بشكّل فستدامً. ولإرجاع جهازُك المُستعملُ، يرجى أتبَّاع أنظمُة الإرجاع والتُجميع، أو تواصلٌ فع بائع التجزئة الذي اشتريت فنه المنتج، حيث بمكنهم أخذ المنتج لإعادة تدويره يطريقة آفنة على البيئة.

جدول المحتويات

الفصل 1 : مقدمة

| 4 | الاحتىاطات |
|---|---|
| 4 | المنتج |
| 4 | الطاقة والتوصيل |
| 4 | سلك الصاقة وكابل الاشار |
| 4 | ىىئة الاستخدام |
| 4 | ي. التنظرف |
| Z | العصيف تعليق جهاز التلفاز على الحائط |

الفصل 2: التشغيل العام

| 5 | التشغيل |
|---|---------------|
| 5 | إيقاف التشغيل |
| 6 | اتصال الشبكة |

الفصل : 3 معلومات أخرى

| 7 | استكشاف الأخطاء وإصلاحها |
|---|------------------------------|
| | |

تعليمات السلامة المهمة



يستخدم, رمز الـوميض البارق ذو رأس الـسهم, بداخل الـمثلث متساوي الأضلاع لتنبيه الـمستخدم, إلـى وجود "جهد كهربي خطر" غير معزول داخل حاوية الـمنتج، وقد يكون ذا مجال كافِ بحيث يشكل خطر الصدمة الكهربائية.

حذير

1 . ليُحد من خطر التعرض الصدمة الكهربائية، لا ترفع الغطاء)أو الجزء الخلفي(فلا توجد أجزاء بالداخل قابلة للصيانة من قبل المستخدم، واستعن بالأشخاص المؤهلين للصبانة.

2 . تُستخدم علامة التعجب الموجودة بداخل المثلث لتنبيه المستخدم إلى وجود تعليمات تشغيل وصيانة مهمة في ا لأوراق المرفقة بالجهاز.

3 ـ لا تثبت هذا الجهاز في مساحة ضيقة أو محاطة ببناء كمكتبة أو أي وحدة مشابهة، ويجب أن يظل في ظروف تهوية جيدة في مكان مفتوح. لا يجب إعاقة فتحات التهوية من خلال تغطيتها بالأغراض، مثل الجرائد، أو مفارش الطاولات، أو ا لستائر، أو ما إلى ذلك.

4. يرجى الرجوع إلى المعلومات الموجودة على الجزء السفلي للعبوة للتعرف على معلومات السلامة والمعلومات ا لكهربائية قبل تركيب الجهاز أو تشغيله.

5 . يُستخدم قابس التيار الكمربائي/قارنة الجهاز كجهاز للفصل، ويمكن أن يظل الجهاز المفصول جاهزًا للتشغيل 6 . للحد من خطر نشوب حريق أو التعرض لصدمة كمربائية، لا تعرض هذا الجهاز للمطر أو الرطوبة، يجب عدم، تعريض ا

لجهاز للقطرات أو الرذاذ، ولا يجب وضع تلك الأجسام، المملوءة بالسوائل، مثل الزهريات على الجهاز. 7 . بحب ألا تتعرض البطارية (البطارية أو البطاريات أو محموعة البطارية(إلى حرارة شديدة مثل ضوء الشمس المباشر، أو

ار . پیب از معروض انبیاریه)، بیناریه (بابیاری) و میکونه (بیناری) و میکونه (بیناری) و می مرد از معنی می می اس حرق، او شیء مشابه. مرد انبیار از مانیا که است از مانیا می است از مانیا از اینان از مانیا و از می می می می از می

8 . لا تضع جهاز التلفاز أبداً في مكان غير ثابت. قد يسقط جهاز التلفاز مسببًا إصابة شخصية أو حدوث وفاة. ويمكن تجنب الكثير من الإصابات وخاصة للأطفال، من خلال اتخاذ الاحتياطات البسيطة التالية:

- استخدام خزائن أو حوامل موصى بها من قبل الشركة المصنعة لجهاز التلفاز.

- استخدام الأثاث الذي يمكن أن يدعم جهاز التلفاز بشكل آمن فقط.

- عدم، وضع جهاز التلفّاز على أثاث مرتفع)على سبيل المثال الدواليب أو خزائن الكتب(دون تثبيت كل من الأثاث وجهاز ا لتلفاز بدعامة مناسبة.

- عدم وضع جهاز التلفاز على قماش أو مواد أخرى يمكن أن توضع بين جهاز التلفاز وأثاث الدعم.

- تثقيف الأطفال حول مخاطر التسلق على الأثاث للوصول إلى جهاز التلفاز أو أجهزة التحكم. به، في <mark>حالة الاحتفاظ بجها</mark> ز التلفاز الحالي وتغيير مكانه، بحب تطبيق الاعتبارات نفسها الواردة أعلاه.

> 9 . يجب عدم وضع أي مصادر لهب مكشوف على الجهاز، مثل الشموع المضاءة. 10. أبق مسافة 5 سم على الأقل حول حواف شاشة العرض لتوفير تهوية كافية.

> > صورة واجهة المستخدم الظاهرة للاطلاع فقط، قد تختلف واجهة المستخدم الفعلية.



تعد کل من: علامات تجایل فضنغ بموج AUDIO

تعد کل من و Dipy, Dolby, Okuby Vision Dolby, Vaudio, Dolby, Atmos, تعناب تحرایه خاصه بشرکه Toppration به تعناب تحریله خاصه تصافع بموجب ترخیص من و Dolby Laboratories Licensing Corporation اعمال سیط فی میشرود، حقوق النشر ۵۵ Licensing کال الحقوق محفوظه

> نع مصطلحا التجاري MI التجاري MI التجاري MI التجاري MI

> > www.alhafidh.com

نُعد مصطلحات HDMI High-Definition Multimedia Interface و HDMI ، والمظهر التجاري HDMI ، وشعارات HDMI ، علامات تجارية أو علامات تجارية مسجلة لشركة HDMI، النوصية

© Alhafidh Group Trading fzco. 2024 Reproduction in whole or in part is strictly prohibited

© مجموعة الحافظ للتجارة. 2024 fzco الأستنساخ كلياً أو جزئياً ممنوع منعاً باتاً