



**R8 balanced diaphragm 1st stage (yoke)**

No.	Part No.	Description
1	YK01	Yoke knob
2	MR8-02	Yoke (Max. 232 BAR)
3	MR8-03	Dust cap
4	MR8-04	Saddle
5	MR8-05	C clip
6	MR8-06	Mesh filter
7	MR8-07	NBR O-RING 9.0X1.5 N90
8	MR8-08	Gas inlet / yoke nut
9	MR8-09	NBR O-ring AS568-011 N90
10	MR8-10	Main housing
11	MR8-11	Diaphragm lifter
12	MR8-12	Diaphragm
13	MR8-13	Diaphragm washer
14	MR8-14	Main spring seat
15	MR8-15	Plastic shim
16	MR8-16	Main spring
17	MR8-17	Diaphragm cap
18	MR8-18	I.P. adjustment cap
19	MR8-19	NBR O-ring AS568-024 N70
20	MR8-20	Swivel turret
21	MR8-21	H. P. Seat
22	MR8-22	H. P. Spring
23	MR8-23	NBR O-ring AS568-006 N90
24	MR8-24	NBR O-ring AS568-013 N90
25	MR8-25	Thrust washer
26	MR8-26	NBR O-ring AS568-019 N70
27	MR8-27	H. P. valve housing / turret bolt
28	MR8-28	NBR O-ring AS568-012 N90
29	MR8-29	H. P. port plug
30	MR8-30	NBR O-ring AS568-011 N70
31	MR8-31	L. P. port plug

**R8 1st STAGE (DIN) - less yoke parts (MR8-01 ~ MR8-09)**

No.	Part No.	Description
D1	MR8-D1	NBR O-ring AS568-112 N90
D2	MR8-D2	DIN gas inlet
24	MR8-24	NBR O-ring AS568-013 N90
D3	MR8-D3	DIN mesh filter
D4	MR8-D4	NBR O-ring S-8 N90
D5	MR8-D5	DIN hand wheel
D6	MR8-D6	DIN inlet post
D7	MR8-D7	NBR O-ring 9.0X1.5 N90
3	MR8-03	Dust cap
4	MR8-04	Saddle

**R8 1st STAGE ANTI FREEZE KIT - additional parts**

No.	Part No.	Description
17N	MR8-17N	Anti-freeze kit adaptor - <b>replace MR8-</b>
32	MR8-32	Pressure transmittor
33	MR8-33	Anti-freeze seal
34	MR8-34	Anti-freeze seal cap

**R8 1st STAGE SERVICE KIT**

	Part No.	Description
	MR8-100	Servicing kit for R8 with YOKE connector
	MR8-101	Kit for R8 first stage with YOKE & anti fr
	MR8-102	Servicing kit for R8 with DIN connector (
	MR8-103	Kit for R8 first stage with DIN & anti free