

ELECTRIC AROMA DIFFUSER USER MANUAL

INCLUDED

- Diffuser 120 ml
- AC Adapter Plug
- User Manual


MOVING AND STORAGE INSTRUCTIONS

- DO NOT move your diffuser while it's in use, or the unit can break if any water spills out of the reservoir
- Thoroughly clean diffuser before storing
- DO NOT carry the unit from the top, reservoir lid or decorative enclosure

Operation

How to Use

LIGHT		MIST	
1	Rotation	1	Continuous
2	Stay On 1 Color	2	10 Sec Cycle
3	Change Color	3	1 hr
Hold	Off	4	2 hrs

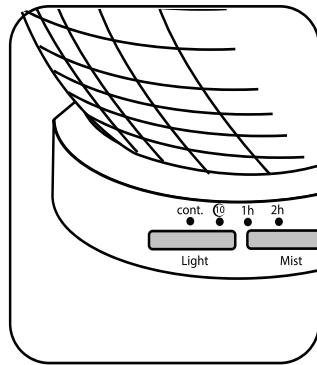

OPERATION

- Remove cover and reservoir lid
- Fill reservoir with water. For maximum run time, fill to max fill line-120ml. Use water under 45°C (113°F) and avoid getting water into the air outlet
- Add 2 to 3 drops of essential oil into full tank(120 ml) of water
 - For stronger scent add more drops of oil
- DO NOT add more than 2 drops of oil for every 20ml of water
 - Over use of oils WILL shorten the life of your diffuser
- DO NOT overfill diffuser unit with water
- Reattach your reservoir lid and ensure the position is correct
- You may now turn on your diffuser

DIFFUSER SETTINGS

- Press the mist button on the right side and then set the desired runtime
- Press once for cont working
- Press 2 times for 10 sec cycle
- Press 3 times for 1 hour
- Press 4 times for 2 hours
- The diffuser will turn OFF automatically if waterless or the time is up

CARE AND MAINTENANCE

- Always turn OFF the diffuser during cleaning and maintenance
- Clean the water reservoir before switching to a new fragrance oil
- Clean the water tank with a soft cloth or extremely soft brush
- Clean ultra-high sonic disc with a soft cloth
- DO NOT use metal or hard abrasives to scrape the ultra-high sonic disc
- If the sonic disc builds up excessive residue, it may be necessary to clean the unit repeatedly to remove the buildup
- Wipe dry and allow to air dry fully (minimum of 3 hours)
- DO NOT use vinegar or other corrosive cleaning agents
- Avoid water getting into air outlet
- Periodically wipe off the fan intake on the bottom of the unit with a dry soft cloth to prevent dust build-up

WARNING !!!

- DO NOT block off the bottom of the unit or use on or near flammable substances, heat sources or open flames
- DO NOT use the diffusers on any surface that would damage the unit (or surface)
- DO NOT use the diffusers if the cord or plug is damaged
- DO NOT use your diffuser if it's not operating normally. Turn your diffuser off immediately and contact support.
- DO NOT use the diffusers outdoors
- DO NOT touch the sonic disc with bare fingers or scrape it with metal tools. This CAN and WILL break your diffuser and avoid any warranty
- Keep your diffuser away from children and pets
- Use the diffusers on a dry surface ONLY - Using electronics on wet surfaces can result in electric shock
- Always put your essential oil into the water in the water reservoir first, never add oil to the reservoir first
- DO NOT leave the unit with power on or keep it unattended overnight
- DO NOT put any acid essential oils into the water reservoir with water, or it would affect the lifetime of the unit

LIGHT SETTINGS

- Press the light button on the left side to switch between colors
- There are 7 light settings
- Press once for color changing rainbow mode, changing colors will be Red-Yellow-Green-Sky Blue-Deep Blue-Purple-White
- Press twice to stay on one color
- Press three times to change into another color