

Cheap Spy Pen Video Camera Instruction Manual

1. Insert the Micro SD Memory Card

Gently, but firmly, slide the micro SD card into your pen slot. You should feel solid resistance when the SD card is fully inserted into the pen. About 1/8" of the SD card will show when it's inserted correctly. You are now ready to use your pen.

Note: The Cam Pen will not include the micro SD memory card. All recordings/photos are stored on the SD card.

2. Power On

--Power up your pen by pressing the On/Off Button on the top of the pen for 2 - 3 seconds.

--Check the indicator light to ensure the pen has powered up properly. A SOLID YELLOW indicator light will show the pen is on and in READY MODE.

▲ Red indicator light blink 3 times then go off, it means no memory card or Memory card not be recognized.

▲ Red indicator light blink 9 times then go off, it means the memory card remaining capacity is insufficient.

▲ Both red and yellow light go on then shut off, it means low battery.

3. Take Picture

--In standby mode, short press on/off button, yellow light blink 1 time, it means take 1 picture and successfully saved.

--If red light blink 1 time, it means take picture failed.

4. Video Recording

--In standby mode, press on/off button and hold it until the yellow light blink, then release it;

--After yellow light blink 3 times, it will start taking video.

Note: When yellow start to blink, release the on/off button. If not, the pen will be shut off.

▲ In the process of recording, yellow light blink every 2 seconds, it means the pen is taking video.

▲ In the process of recording, short press on/off button, it stops recording video and saves file, then machine go back to standby mode and the yellow light keep on.

▲ In the process of recording, long press on/off button for 2-3 seconds, it stops recording video and saves file, then machine shut off.

▲ In the process of recording, if memory card remaining capacity is insufficient, the machine will save file automatically the shut off.

▲ In the process of recording, if battery is lower than 5%, machine will stop recording and save file, then shut off.

5. Power Off

--In standby mode, long press on/off button , when yellow light blink still hold the button, after yellow light blinking 3 times, it will be shut off.

--In standby mode, it will be shut off automatically if no any operation in 30 seconds.

6. Charging

Use USB cable to connect the pen to computer, or use other 5V charger to get charged.

--Red light blink slowly, it means it's charging.

--Solid red light means the battery has a fully charged.

7. Reset time

- Connect the pen to the computer via USB cable;
- Open the removable disc folder and you will find the “time.txt”.
- Revise the time and date in this file “time.txt” and save it. Next time, it will show the correct time when you take video/photos.