

Note: Do not allow children to play or use this electronically operated furniture unsupervised. Due to the risk of injury, make sure that there is nothing underneath the footrest when it is returned to the closed position. When not in use, leave the chair in an upright and closed position. Keep hands and feet clear of mechanism and only the occupant should operate the mechanism to avoid injury.

Questions? Give us a shout at info@nurtureand.com

Back

Nurture& The Glider

INSTRUCTION MANUAL






 


Cover

Hi. Hello!

Congratulations on your Nurture& purchase - we are so excited for you to join the #madeforsharedmoments community, and enjoy THE GLIDER with your growing family.


Parts List

No.	Description	Sketch	Qty.
A	Seat		1 pc.
B	Back		1 pc.
C	Connector #1		1 pc.
D	Connector #2		1 pc.
E	Power Cord		1 pc.
F	Transformer		1 pc.

- To avoid injury, use care when assembling
- Adult supervision required when used by children
- Assemble and use on level surface
- Maximum load: 150 kg /330 lbs. Exceeding this weight may damage product and cause potential injury

Before you assemble: check for damaged or missing parts (email info@nurtureand.com for help), use the carton as a working surface to prevent product damage before assembly, and gather all parts prior to assembly.

- Slide the back (part B) onto the seat (part A) aligning the two brackets.
- Guide the bracket on the back into the sleeve on the chair, and press the top of the back (part B) down firmly (you'll hear a noise!).
- Connect the connectors (part C and D) between chair back and seat.

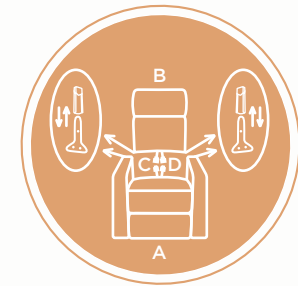

Plug in the two components of the power cord (part E and F), and connect to the back of the chair. Plug into a wall outlet.

Enjoy the Glider - use the buttons to adjust the headrest, recline and sit the chair up, and the USB port to power your USB device!



Questions? Give us a shout at info@nurtureand.com

Inside