

LED LIGHT INDICATORS:

1. Blue Light: Blinks when the speaker is waiting for a connection, and turns blue when Bluetooth is connected to your device
2. Red Light: Turns solid red when speaker is charging, and turns off after battery is fully recharged.
3. Yellow Light: Is a pairing indicator. Slow flash is entering pairing mode. Long bright led means pairing is successful.

MICRO SD /AUX MODE:

1. Reads a 64MB Micro SD Card. Insert any Micro SD Card into the port and the speaker will begin playing music automatically.
2. Insert the 3.5mm audio cable provided and the speaker will automatically shift into AUX mode.

FEATURES

- Built-In LOCKON Magnet(Patent Pending)
- 10 Hours of Playing Time
- 10 Watts of Power
- Rapid Charge - 2 Hours
- IPX7 Waterproof - 3 Feet of Water
- Range Open Area 80 Feet
- Battery Save Auto Off
- DuraBuilt Rubber Casing
(Drop Tested at 6 Feet)



www.UPSIDE-INC.com



©2019 Upside, Inc., all rights reserved. UPSIDE Golf is a registered trademark of UPSIDE Inc. All other trademarks are property of their respective owners. Patent pending.

Invented by a PGA Professional
Designed in United States.

MANUFACTURED IN CHINA

SUPERX7

HIGH-FIDELITY SPEAKER

MODEL: LOCKON-RF100

UPSIDE[®]

OPERATION MANUAL



1. POWER ON/OFF/TWS
2. PLAY/PAUSE/ANSWER OR REJECT CALL
3. (-) VOLUME/PREVIOUS TRACK
4. (+) VOLUME/NEXT TRACK
5. CHARGING PORT
6. MICRO SD
7. AUX IN

OPERATING INSTRUCTIONS



ON / OFF / STEREO CONNECT

1. TURN ON: press button for 1 second. (You will hear 3 escalating tones)
2. TURN OFF: press button for 3-4 seconds (You will hear 3 deescalating tones)
3. RESET: press button for 8 seconds
4. STEREO CONNECT: (See instructions)



PLAY / PAUSE

1. Press once when music is playing/ pause / answer phone call/ hang up
2. Press and hold for 2 seconds to reject call
3. Hold for 3 seconds to disconnect bluetooth



VOLUME (-) / PREVIOUS TRACK

1. Press once to decrease volume
2. Hold for 2 seconds for previous track



VOLUME (+) / NEXT TRACK

1. Press once to increase volume
2. Hold for 2 seconds for next track

BLUETOOTH PAIRING

CONNECT TO 1 SPEAKER: Press the power button for 1 second to turn on speaker. The blue LED light will blink. In your bluetooth function connect to **UPSIDE100**. When connected you will hear 2 tones.

STEREO CONNECT: SC is true wireless stereo. It allows for two speakers to be wirelessly synced to play music from 1 device.


HOW TO PAIR 2 SPEAKERS:

Step 1: Be sure that both speakers are disconnected from your bluetooth function before you turn on.

Step 2: Turn on both speakers.

Step 3: Double tap the (#1) power button on any speaker. You will here a 2 tone that signals its looking for other speaker to pair.

Step 4: Wait a few seconds and your will hear 1 long tone that means they are paired. Or your phone may prompt you depend -ing on the model this message:

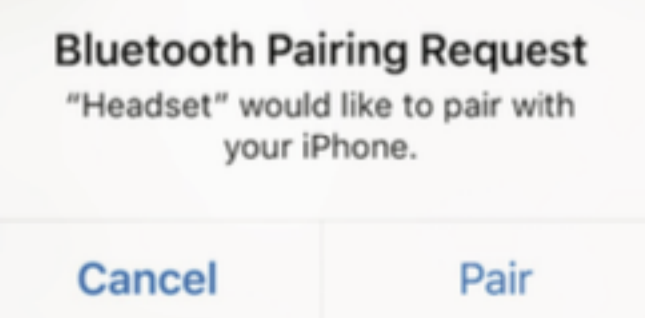

Once the speakers are connect they will always stay connected and will not have to repair again. When turning off both will shut off simultaneously. When you turn back on you need to turn both on. Then they will pair once more.