


1

Setting

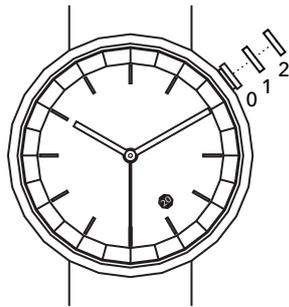

Crown Position:

- 0 - Normal
- 1 - Date Setting
- 2 - Time Setting

<Setting the time>

1. Pull the crown out to the 2nd click (Time setting position).
2. Turn the crown to set the time.
3. The second hand will start clicking after the crown is firmly pushed back into its normal position.

<Setting the calendar>

1. Pull the crown out to the 1st click (Date setting position).
2. Set the date by turning the crown counter-clockwise.
3. When the correct date is set, be sure to press the crown back to its normal position.

Note: The watch movement is 24 hour based, it should be adjusted differently according the actual timing (noon or midnight). Make sure to set the date in corresponding am/pm.

2

Care & Maintenance

1. Be sure the crown is in the normal operating position.
2. Clean the watch regularly using a soft cloth and blot up the dust and moisture from the strap with a dry cloth.
3. Rinse the watch in fresh water and leave it to dry only after exposure to salt water.
4. The case and strap contact skin directly, if you have any skin reactions (e.g. itchiness, rashes, allergy), please stop wearing the watch and consult doctor immediately.
5. Periodic inspection is recommended.

3

Water Resistance

1. 3 bar water resistance watch.
2. The watch is splash proof only.
3. Do not use it in water and wearing the watch while showering, swimming, diving or taking a bath.
4. Do not pull out the crown under water or when the watch is wet, this may allows water enter the watch.

4

Handling Instructions

1. Do not expose the watch directly to the sunlight.
2. Do not leave the watch in a high temperature location or a cold place for a long time.
3. Do not drop the watch from a high place.
4. Do not hit the watch with a hard object.
5. Do not leave the watch in strong vibration area.
6. Do not leave the watch close to strong magnetic field. (e.g. microwave ovens, loudspeakers, magnetic clasps on handbags or bracelets, digital tablets...)
7. Do not expose the watch to chemicals and gases (e.g. benzene, thinner, gasoline, manicure remover, cleaners and adhesives.)

5

Battery

1. Keep the battery away from children or infants.
2. Keep the battery away from fire.
3. Do not recharge the battery.
4. Once the battery has run out, please replace a new one by watch professionals.
5. Do not leave the exhausted or dead battery in the watch for a long time, as it may cause malfunction due to battery leakage.
6. The battery is inserted in the watch at the factory for monitoring the functions. The battery may run out before the specified period after the day of purchase.
7. Movement Specifications:
 - 3 Hands Date Quartz Movement
 - Accuracy: ± 20 seconds per month
 - Battery: Silver oxide SR621SW battery with approximately 2 years life

6

Warranty

The Polygon watches are warranted to the original purchaser for 12 months from the date of purchase. The warranty covers only material and manufacturing defects under normal use. This limited warranty does not cover any damage resulting from an accident, negligence or improper handling.

The warranty does not cover:

- Normal wear and tear and aging (e.g. scratched crystal, glass, watch cases; alteration of the colour and/or material of non-metallic straps and chains, such as leather, plastic, textile; peeling of the plating).
- Battery
- Straps, bracelets, bands, crystals and glasses
- Damages caused by accidents or negligence
- Damages due to contact with moisture / water