

Jog Dial

Music Track Forward/Backward

Answer/End/Reject Phone Call

Change LED Light Color + B Button

Power On/Off + A Button

Volume Up/Down

Music Play/Pause

Save Radio Stations

Activate Siri/S-voice

FM Band Scan Up/Down

Redial Last Phone Number

A Button

Power On/Off + Jog Dial

Enter Bluetooth Pairing Mode

Cycle Select Saved Stations

Factory Reset + B Button

Battery Life Check

Start/End Intercom

FM Radio On/Off

FT4



Intercom

Intercom

Music

GPS

Navigation

FM Radio

LED Trim Light

Universal

Pairing

Last Number Called

15

(HOLD

35

TAP

HOLD

35

2S

HOLD

35

(HOLD

35

(HOLD

35

TAP `

/HOLD

HOLD)

TAP \setminus

one and two

one or two

one and two

two and three

one

two

one and two

three and four

two and three

one

two and three

2

1

2

3

HOLD

25

Then

Then

Then

two

Then

Then

Then (

one or two

three or four

two or three

Rotate

Rotate

Rotate

Rotate

Follow the unit instruction to

enter pairing mode

 TAP

Non-LEXIN /

Other LEXIN Headsets

one or two

one or two

two or three

TAP

TAP

 TAP

TAP

Voice Command

Disable & Enable

2-Way Intercom

(Unit one, two)

3-Way Intercom

(Unit one, two,

Start Intercom

End Intercom

4-Way Intercom

(Unit one, two,

Start Intercom

End Intercom

Play/Pause

Track Forward

Track Backward

GPS Pairing

FM Radio On/Off

Scan Up

Scan Down

Save 6 Stations

Cyde Select Saved Stations

Change Blue, Red, Purple,

Flashing, Bluetooth Indicator

Red Flashing, Purple

Bluetooth Pairing

Start Intercom

End Intercom

three, four)

Pairing

Start/End Intercom

(Siri/S-Voice)

Auto Answer

Pairing

Pairing

three)