




 





 








 

 









## MULTIMEDIA KEY FOR MAC

Mac System: Press **Fn+S**

 <b>F1</b>	Display Brightness -
 <b>F2</b>	Display Brightness +
 <b>F3</b>	Back to Desktop
 <b>F4</b>	Mission control
 <b>F5</b>	Backlight Brightness -
 <b>F6</b>	Backlight Brightness +
 <b>F7</b>	Last Song
 <b>F8</b>	Play/Pause
 <b>F9</b>	Next Song
 <b>F10</b>	Mute
 <b>F11</b>	Volume -
 <b>F12</b>	Volume +
 <b>Fn + Home</b>	Voice Typing (Only support Apple M1 chip)
 <b>Fn + Ins</b>	Emoji
 <b>Fn + Del</b>	Screen Shot

## MULTIMEDIA KEY FOR WINDOWS

Windows System: Press **Fn+A**

 <b>Fn + F1</b>	Display Brightness -
 <b>Fn + F2</b>	Display Brightness +
 <b>Fn + F3</b>	Back to Desktop
 <b>Fn + F4</b>	Mission control
 <b>Fn + F5</b>	Backlight Brightness -
 <b>Fn + F6</b>	Backlight Brightness +
 <b>Fn + F7</b>	Last Song
 <b>Fn + F8</b>	Play/Pause
 <b>Fn + F9</b>	Next Song
 <b>Fn + F10</b>	Mute
 <b>Fn + F11</b>	Volume -
 <b>Fn + F12</b>	Volume +
 <b>Fn + Home</b>	Voice Typing
 <b>Fn + Ins</b>	Emoji
 <b>Fn + Del</b>	Screen Shot
 <b>Fn + Win</b>	Win Lock

# LTE

## NIMBLEBACK **NB-981** QUICK GUIDE

### BASIC CONTROL

 + 	 Backlight On/Off
 + 	 Backlight Modes Switch
 + 	 Backlight Speed +
 + 	 Backlight Speed -
 + 	Long Press to Restore Factory Mode