



Thank you for choosing our bakeware by Prestige. To assure a long and pleasant experience, please read this information before first use and retain it for future reference. These instructions are for your general safety, use and care to avoid injury and damage to your bakeware.

It is highly recommended that you follow these Use and Care instructions for continued outstanding performance and to preserve your guarantee rights.

USE AND CARE INSTRUCTIONS

Before use remove packaging and hang tag, wash in warm soapy water and dry thoroughly.

For best results when baking, grease before each use.

Suitable for oven use to temperature 220°C/425°F/Gas Mark 7.

Suitable for use in refrigerator and freezer. Always ensure that the chilled/frozen bakeware is placed into a cold oven allowing the bakeware and oven to heat together. Food should be thoroughly heated before serving.

Use caution when handling hot bakeware and always use an oven glove.

Do not use non-stick sprays. They burn at low temperatures and may accumulate on your bakeware over time.

Baking foods with high oil or acidic content may permanently stain your bakeware.

Do not use bakeware in the microwave.

Not suitable for use over direct heat or under grills.

Do not use metal utensils or abrasive cleaners as this will scratch the non-stick surface

After each use, wash in warm soapy water, rinse and dry thoroughly before storage

Your bakeware is dishwasher safe, however hand washing is recommended. In time the cumulative effects of strong agitation and harsh detergent will affect the appearance of your bakeware, possibly causing dulling and discolouration, although the performance will not be affected. Always follow dishwasher manufacturer's instructions carefully.

5 YEAR GUARANTEEYour item is guaranteed by Prestige to be free from defects in materials and workmanship under normal household use within the guarantee period of 5 years. This guarantee does not cover damage caused by normal wear and tear, accident, misuse, abuse or commercial use. Stains, discoloration or damage from overheating, use of metal/sharp edged utensils or discolouration caused by dishwasher use are not covered by this guarantee. Incidental or consequential damages are expressly excluded from this guarantee. This guarantee does not affect your statutory rights. Should you have a problem under the guarantee please return the item to the retailer from where it was purchased, along with proof of purchase. If this is not possible please contact us at www.prestige.co.uk.