



IMPORTANT SAFETY, USE & CARE INFORMATION

Thank you for choosing Prestige® Moments Cast Aluminium Non-Stick Cookware. To assure a long and pleasant experience, please read this information before first use and retain for future reference. If you have any further questions about your product, please contact Customer Support at www.prestige.co.uk

Your cookware is suitable for use on all cooker types including Induction.
Dimensions given refer to the rim diameter or the diagonal if not round.
Before first use remove all labels, wash the pan with detergent and dry thoroughly

Stove Top Cooking

Use low to medium heat when cooking. High intensive heat may discolour and damage the cookware.
Always try to match the size of pan to the heating element or gas burner.
Pans should not be filled to more than two-thirds capacity.
When deep frying, fill the pan no more than one third full of oil. Do not leave hot oil unattended and never use a lid.
The use of cooking sprays is not recommended for use on non-stick cookware as cooking sprays burn at lower temperatures and can damage the non-stick coating of your product.
Do not allow handles to extend over hot burners or the front of the hob.
The handles may get hot during use. For your safety please use oven gloves.
Do not leave an empty pan on a hot burner or allow the pan to boil dry. If the pan is allowed to boil dry the heat must be turned off and the pan left to cool before moving.
When filled, some pans can be very heavy. Be careful when moving the pan if it contains hot oil or other hot liquids.

Gas Hobs

Always take care to position the pan at the centre of the pan supports and have the handle in line with the main pan supports. Some gas hobs require the use of an additional trivet on the pan supports to ensure cookware is stable.

Glass Top Hobs (All Heating Types)

Lift the cookware - Do not slide since this will scratch the glass.
Check that the glass hob is free of food deposits before and during cooking. These can harden and cause cosmetic scratching on the glass surface. Your guarantee does not cover damage to cooktops.

Induction Hobs

When matching cookware to ring size please follow the hob manufacturer's guidelines. They may mean the size of the pan magnetic base and not the rim diameter. Please check with them if you have a problem. Do not leave a pan unattended when preheating since heat up is very rapid on Induction.

Oven Cooking

Your cookware is oven safe up to Gas 3, 160°C, 325°F. Do not place under a grill, or close to the heat source in an oven nor in a microwave oven. Always use oven gloves when removing cookware from the oven.

Utensils

Your cookware is metal utensil safe however we recommend that you use wooden or heat resistant plastic utensils, the use of sharp edged metal utensils can damage the non-stick.

Lids

When supplied, always use a lid to help to preserve nutrients, flavour, minimise cooking time and fuel used. Glass lids will mist at the start of cooking, but will clear as they become warm. Do not place glass lids directly on a hot burner, or place hot lids in cold water as this will reduce their break resistance.

Care of Fittings

Periodically check that all fittings are secure and re-tighten as appropriate. To avoid accidents or injury do not use cookware with loose or insecure fittings.

Cleaning

Your cookware is dishwasher safe. However hand washing is recommended since dishwasher detergents will dull the interior/exterior surfaces. Do not use steel wool or coarse scouring pads or powders.

Staining

Staining occurs even with normal use but is not considered a defect. Most stains can be removed or lessened by cleaning with lemon juice or white vinegar.

Storage

To avoid scratches or chips on the cookware, place paper towels between pans when storing.

5 YEAR GUARANTEE

Your item is guaranteed to be free from defects in materials and workmanship under normal household use for 5 years.

This guarantee does not cover damage caused by normal wear and tear, accident, misuse, abuse or commercial use.

Stains/discolouration/damage from overheating, or discolouration caused by dishwasher use or use of sharp metal utensils are not covered by this guarantee. Incidental or consequential damages are expressly excluded from this guarantee.

Should you have a problem under the guarantee you should return the item to the retailer from where it was purchased, along with proof of purchase. If this is not possible, please contact us at www.prestige.co.uk