



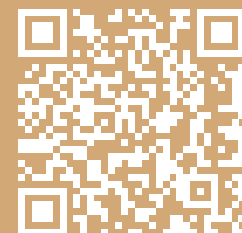

20-Nozzle Oscillating Sprinkler

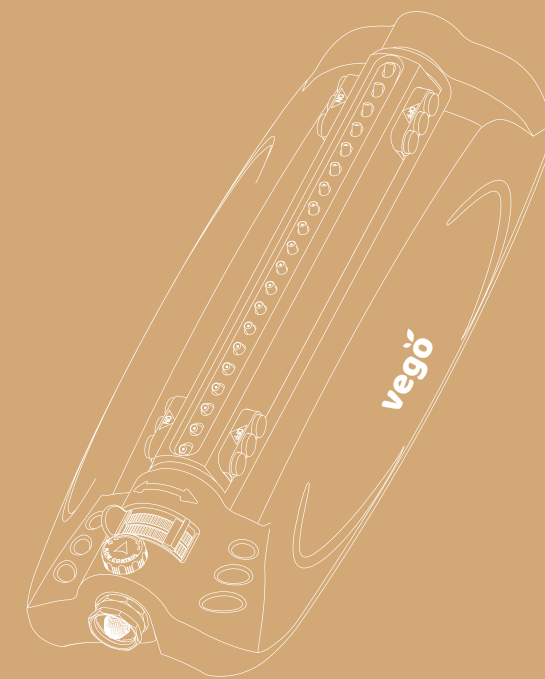


Video User Guide
www.vegogarden.com/assembly

Caution

- For outdoor use. Cold water only.
- Do not use near electrical connections.
- When not in use, rinse the tool with water to remove any remaining dirt; dry the device and store indoors.
- Avoid letting water freeze in the sprinkler during winter.


Parts

1. Metal base
2. Oscillator tube
3. Spray nozzle
4. Nozzle buttons (ON/OFF)
5. Range sliding tabs
6. Flow control
7. Hose connection
8. Inlet filter
9. Cleaning pin

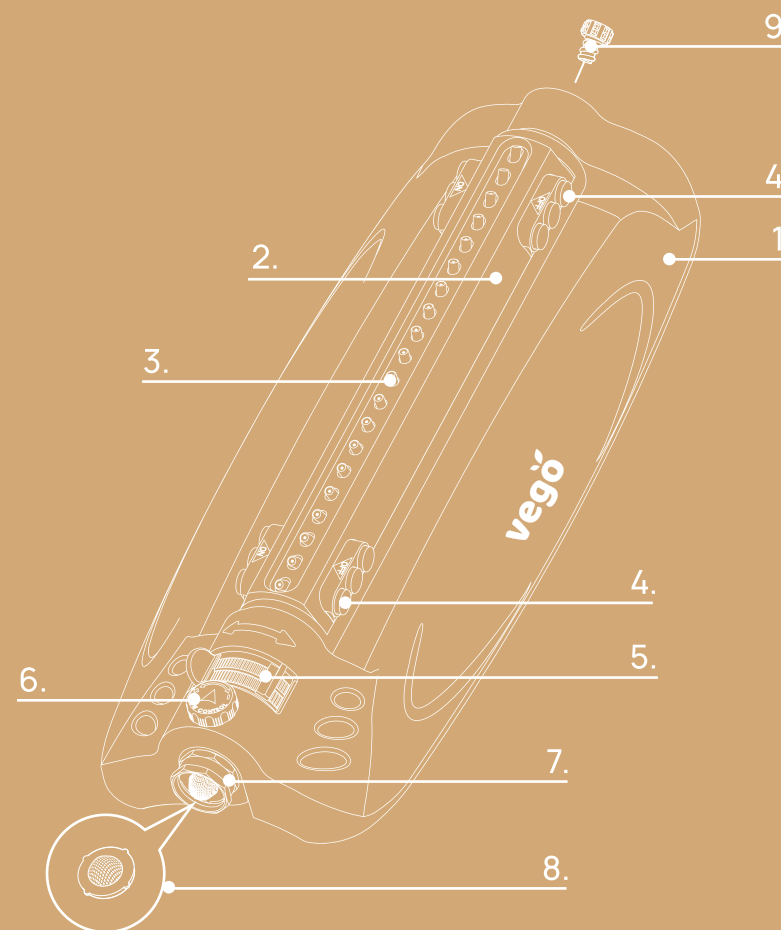


Instruction and Usage


- Attach the garden hose to the sprinkler.
- Adjust the range sliding tabs to select a desired watering area.

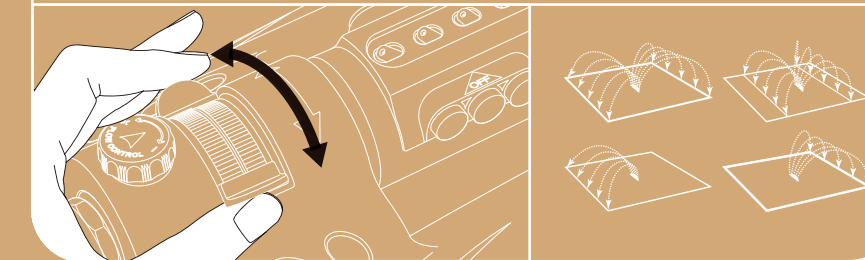

- Turn the water flow control knob to adjust water pressure.

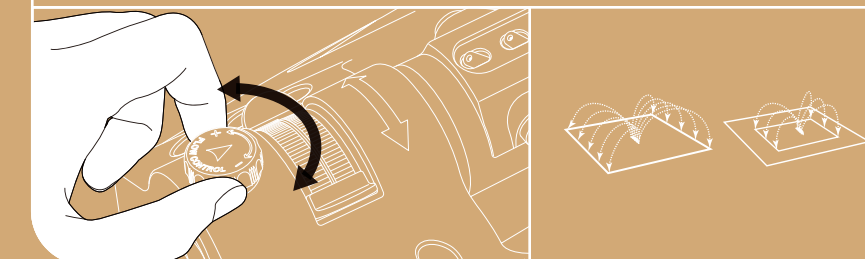


- Press the ON/OFF nozzle buttons to set a wider or narrower spray path.
- Turn on the faucet and check the working coverage. Make adjustments as required to suit your watering needs.

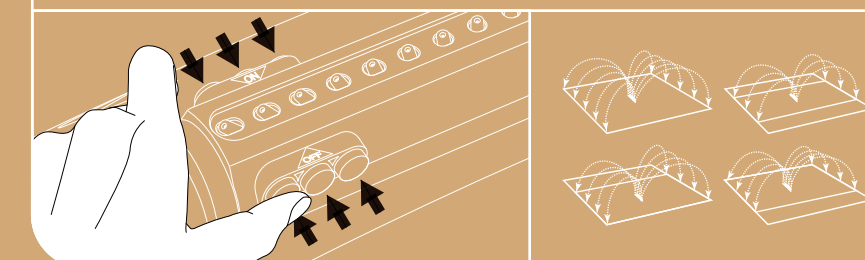

Maintenance and Care


If the sprinkler begins to display irregular water pressure or is clogged due to build up of debris, please follow these maintenance procedures.

- 1 Remove the hose from the sprinkler, and you will notice a small inlet filter from the hose-end of the sprinkler. Pry it up and remove it, rinse the filter with water to remove any remaining dirt.

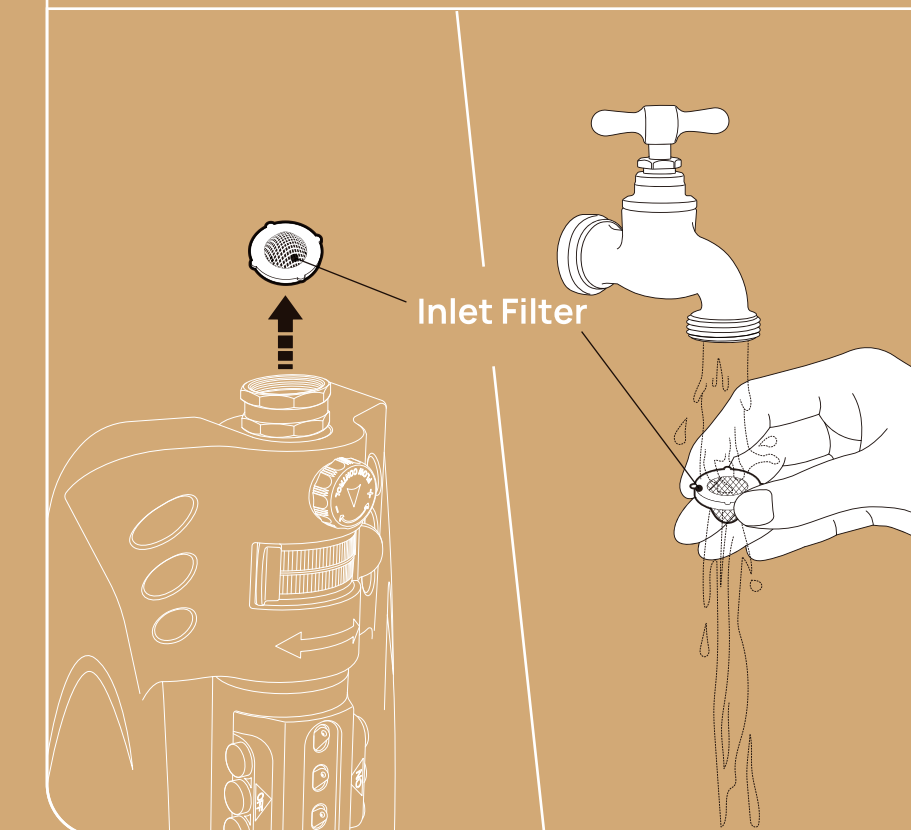


Maintenance and Care

- 2** To flush, connect the sprinkler to a faucet. Turn on the faucet, and spin the tube gently back and forth under running water for a few seconds.

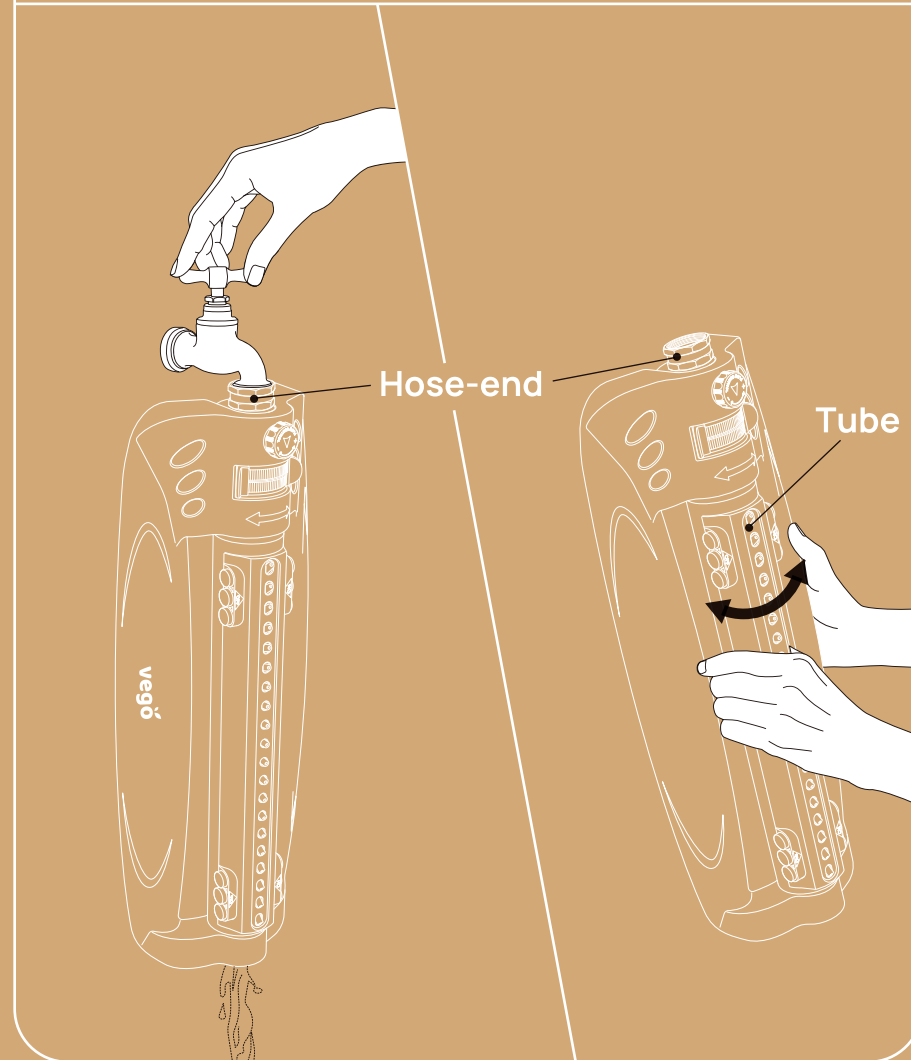

Maintenance and Care


- 3** Remove the cleaning pin from the opposite end of the sprinkler.

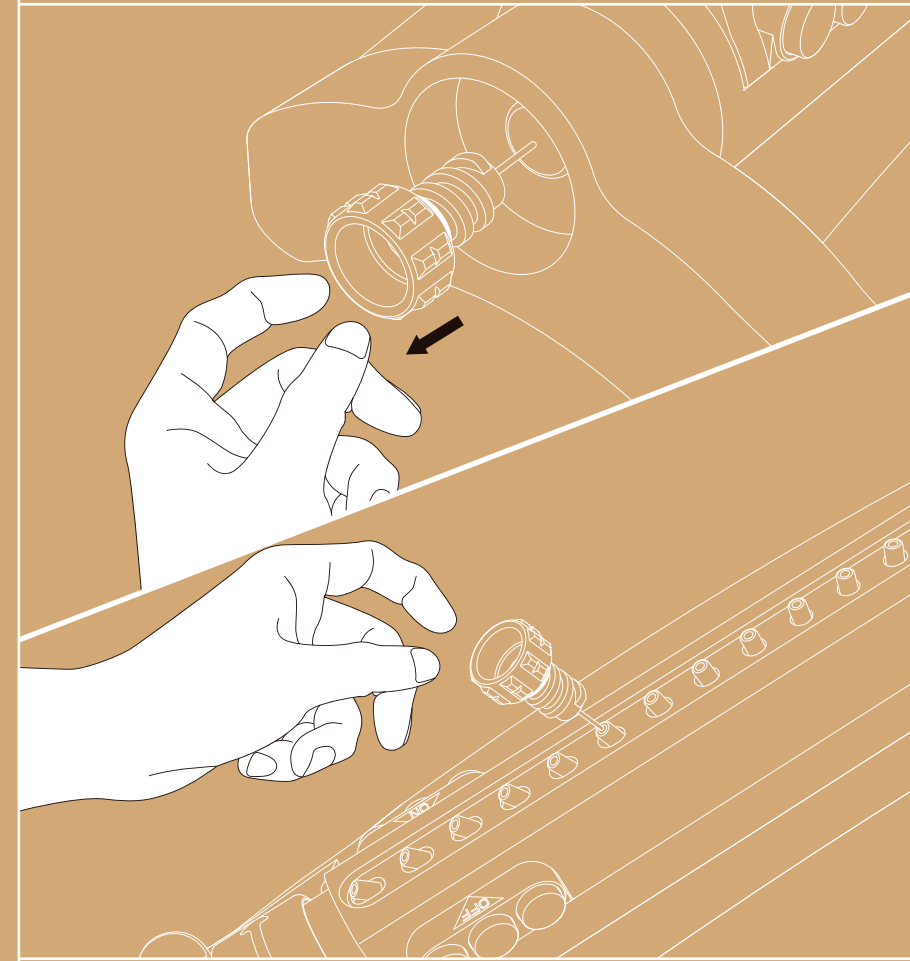

- 4** Use the cleaning pin provided to unclog the spray nozzles under running water as in step 2.

Storage

- Drain and dry the sprinkler after use. This will give your device a longer life.
- Store out of direct sunlight and indoors.
- Avoid letting water freeze in the sprinkler.

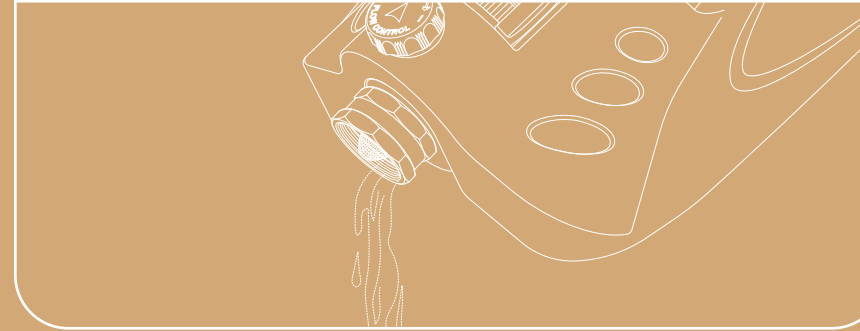

Specifications

MODEL NO.	VWOS20V1GR
Plastic nozzle heads	20
Maximum coverage	4973 sq.ft (462m2) Based on 40PSI
Water flow control	Yes
Range control	Yes
Width control	Yes


Tips

- Before you position the sprinkler in your preferred location, consider the best coverage for your watering needs without wasting water.
- Water only when necessary, preferably in the morning to minimize water loss through evaporation.
- To ensure deep root growth, water deeply but do not water too often. Watering every second day will help you achieve better water coverage.
- Using a timer can be helpful in reducing waste.
- Monitor your water application to avoid water run-off.

Warranty and Service

Your oscillating sprinkler comes with a 24-month warranty from the date of its purchase.

Contact Us

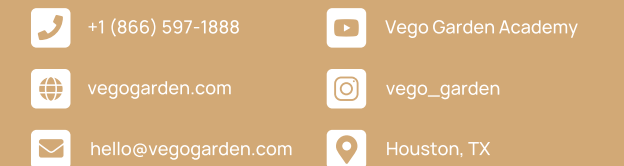

Video User Guide