



4U Rack Slide Rails Installation




Rack Slide Rails Installation Guide



OSS
ONE STOP SYSTEMS


www.onestopsystems.com

Remove the Rack Slide Rail from the carton.

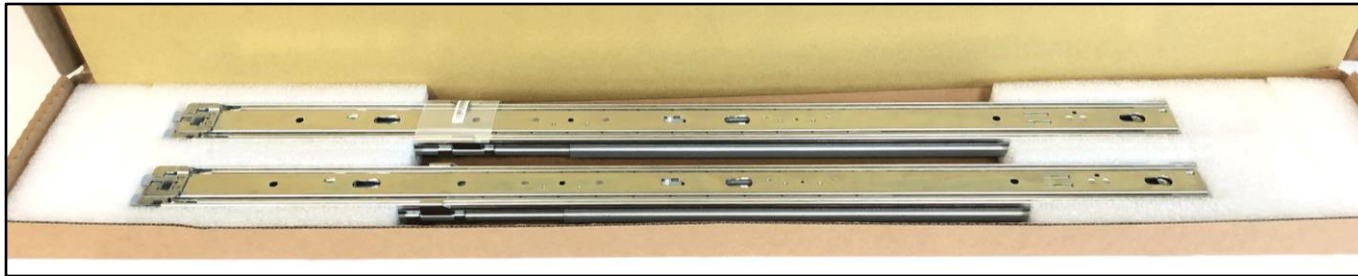


Separate Inner Rails



Locate the front-end of the rail and extend the "Inner rail" all the way out.

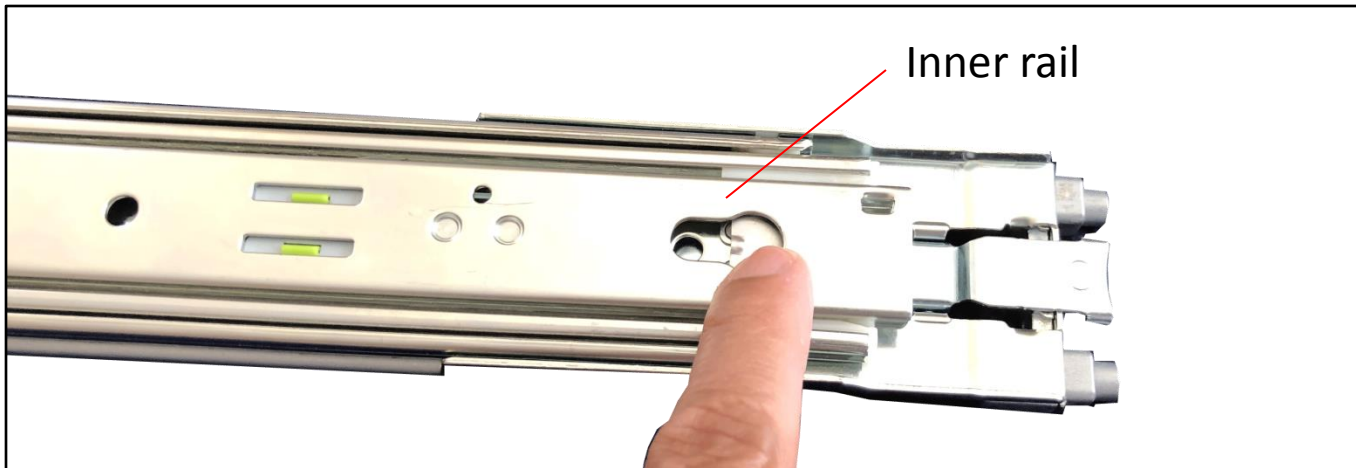

Using your index finger, hold the key-hole on the “Inner rail” and slowly slide the rail out.

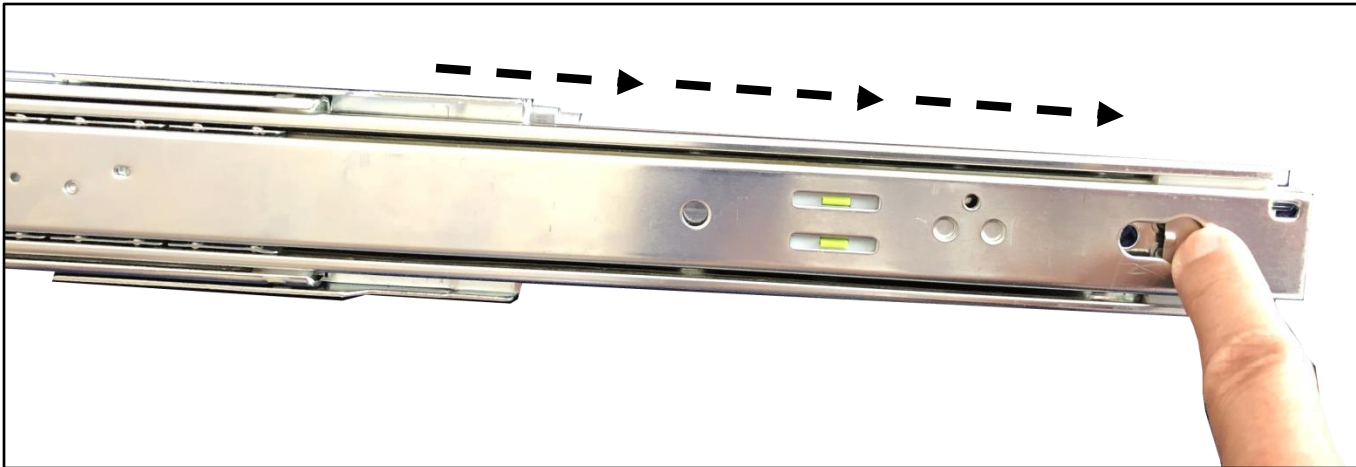


Showing the "Inner rail" fully extended and still attached to the "Middle rail", see photos below.

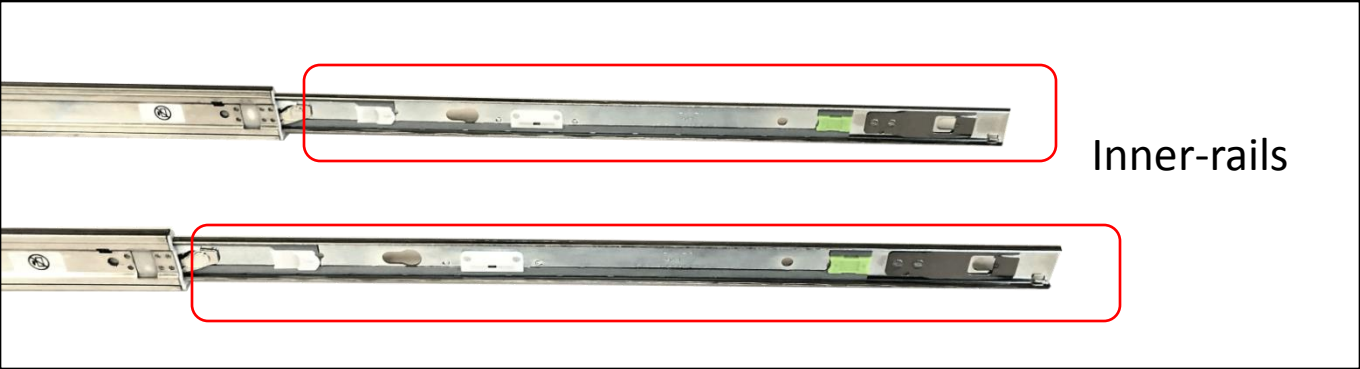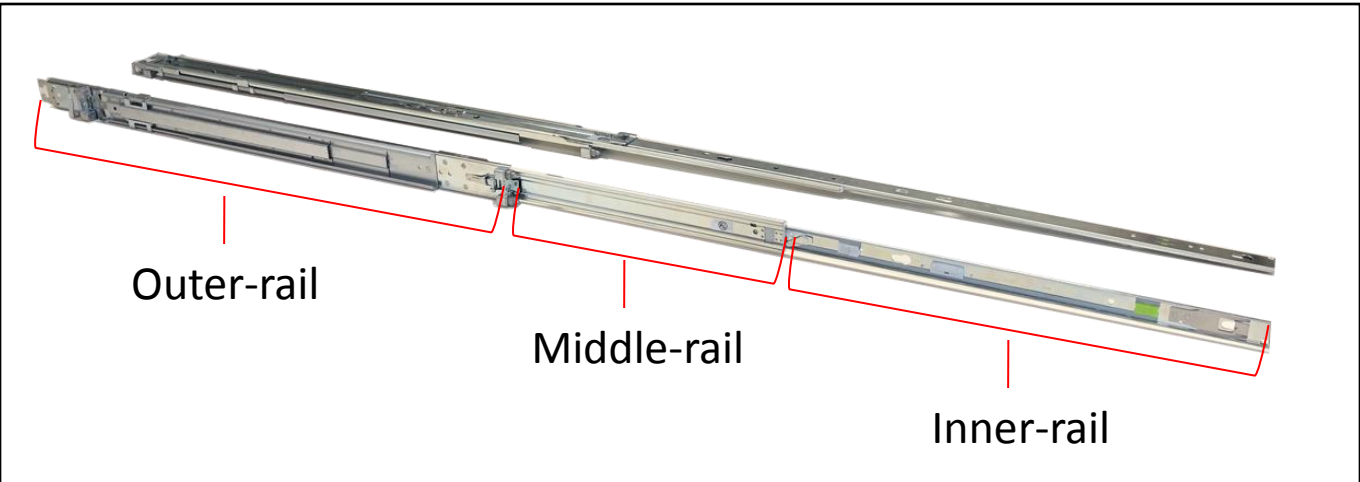


Press, hold and pull the white plastic tab to detach the “Inner rail”.



Press and hold the tab, slowly slide the Inner rail out, separating it from Middle rail.

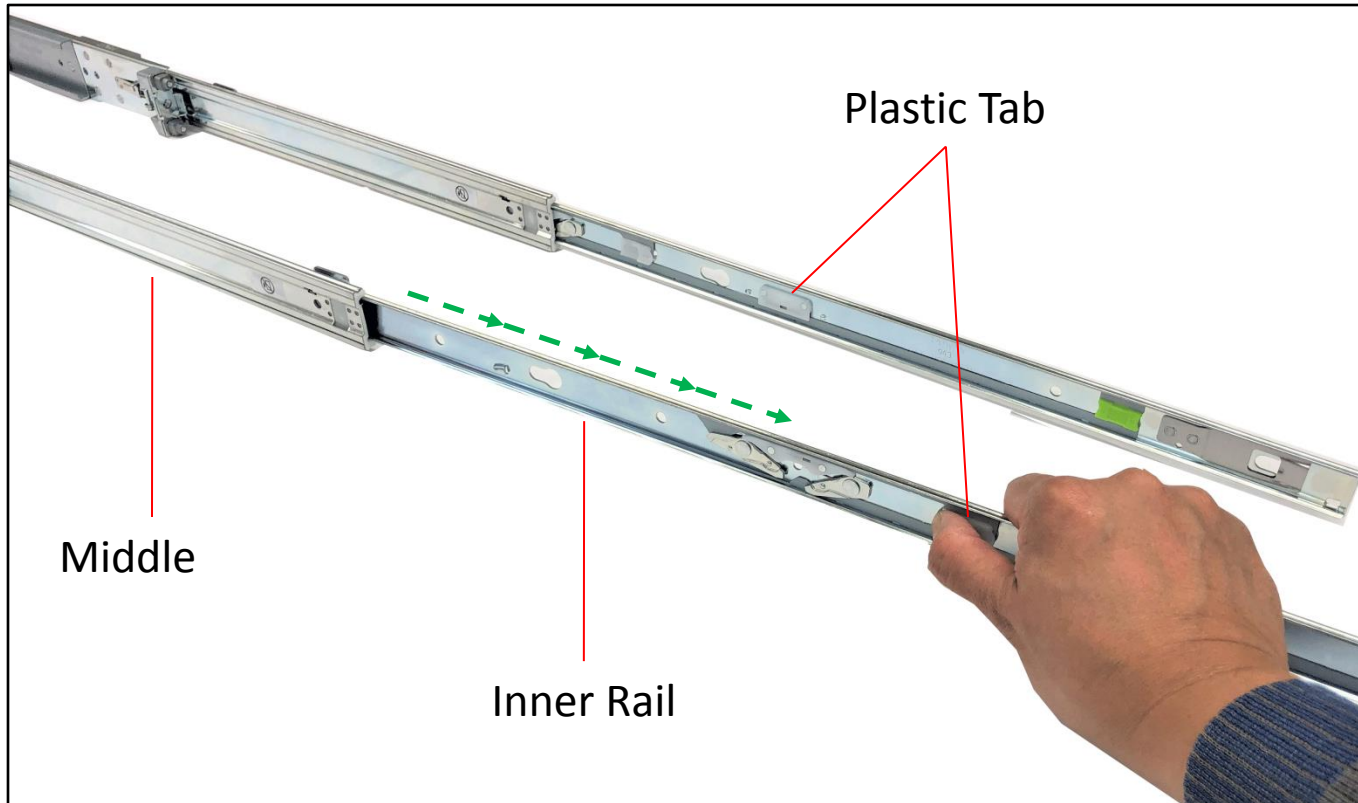


Inner rails are fully separated from the Middle rails.

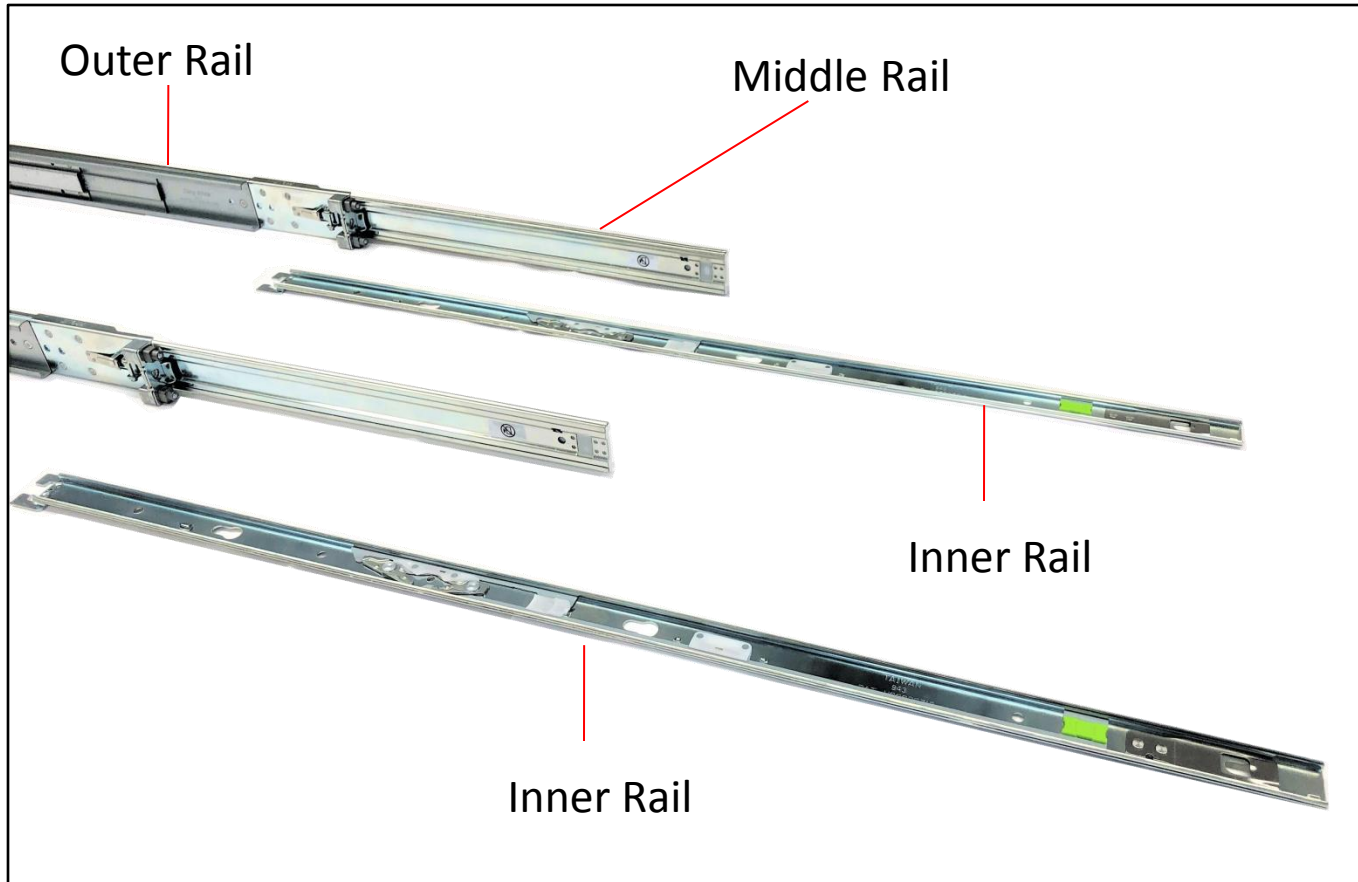


Inner Rails Installation


Place the Inner rail next to the side panel of the enclosure.

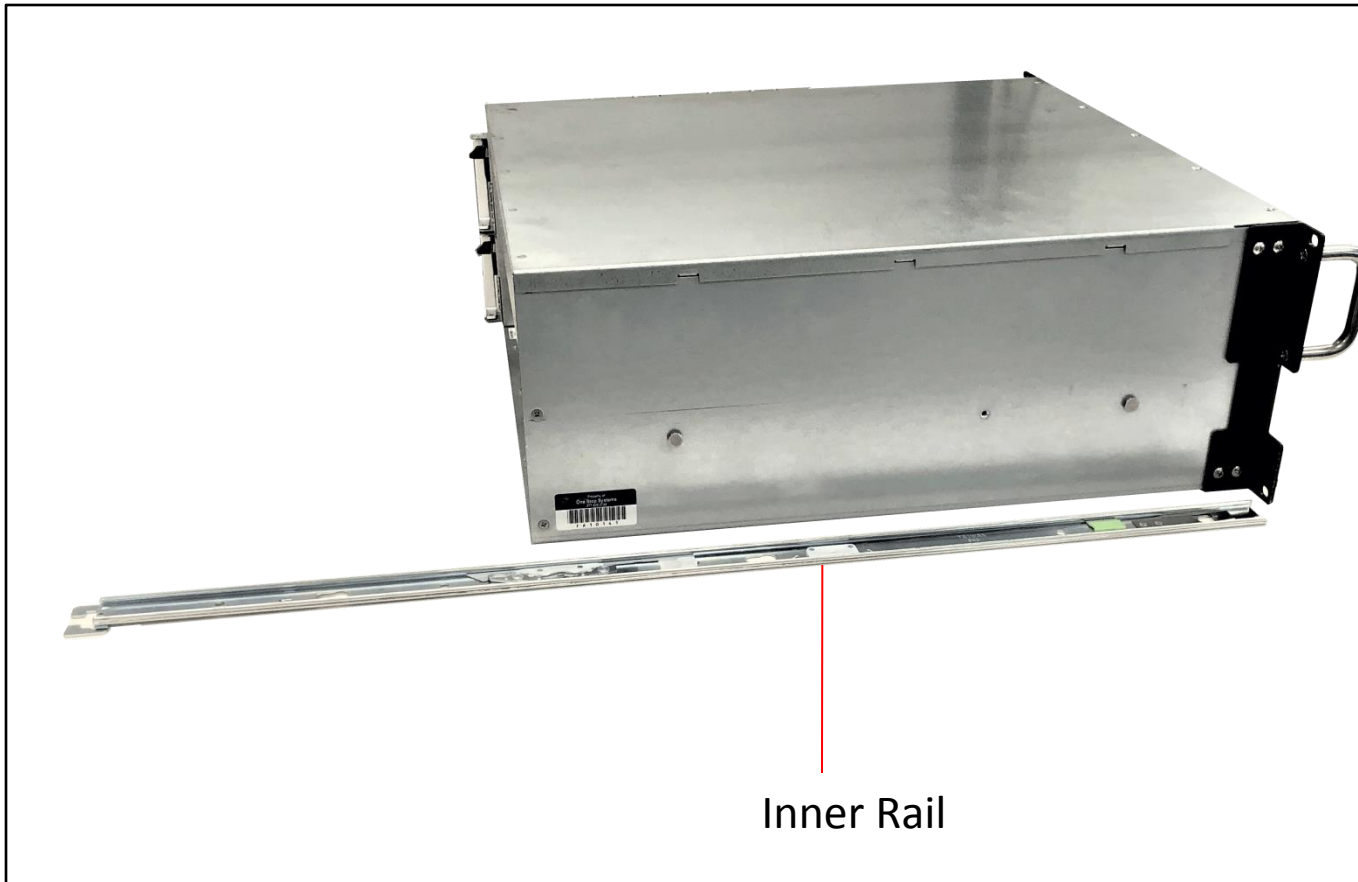


Align the Inner rail mounting holes to the side panel standoffs.

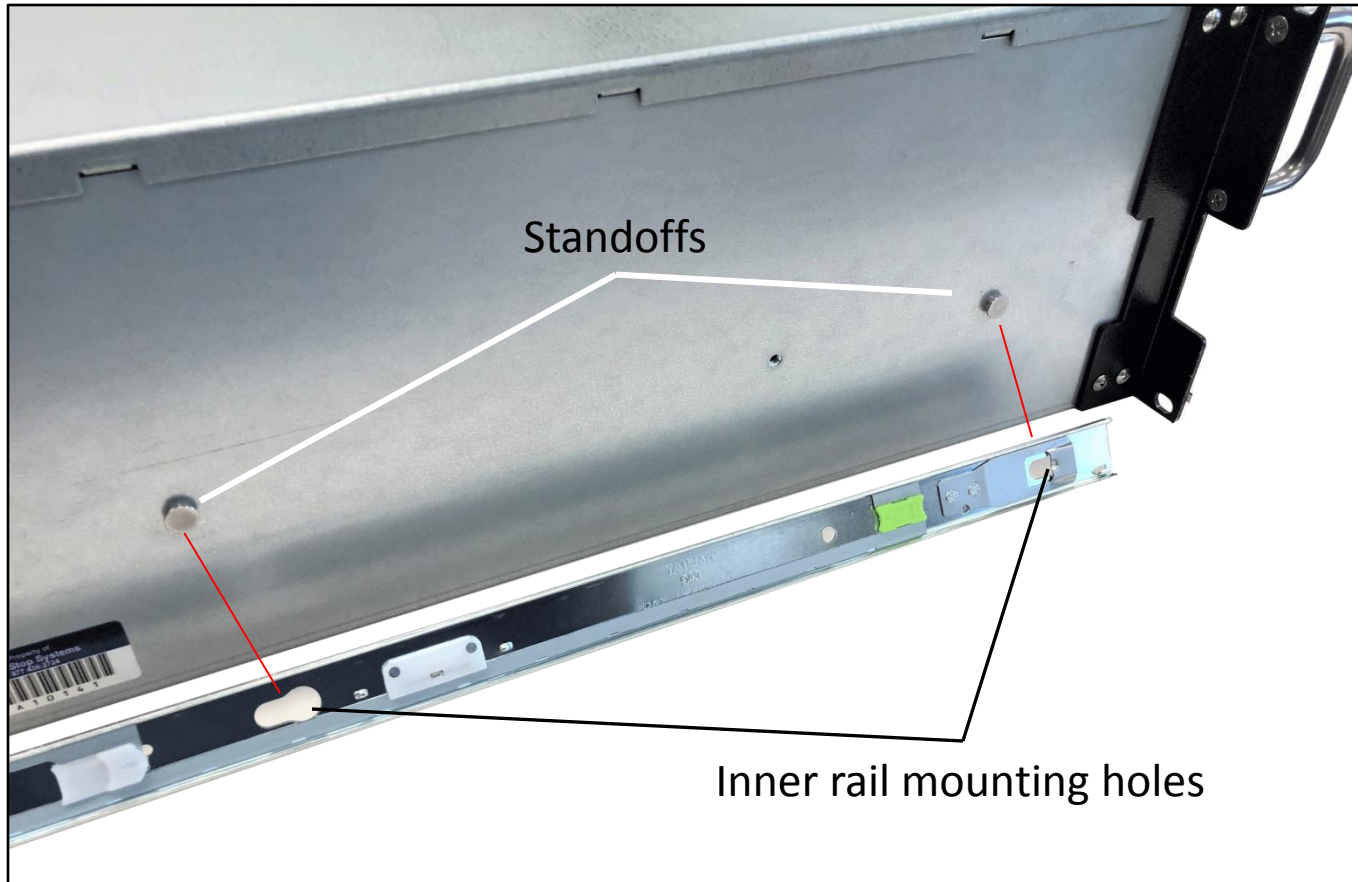


Attach or slip the rail Inner piece on to the chassis standoff, slide and lock.

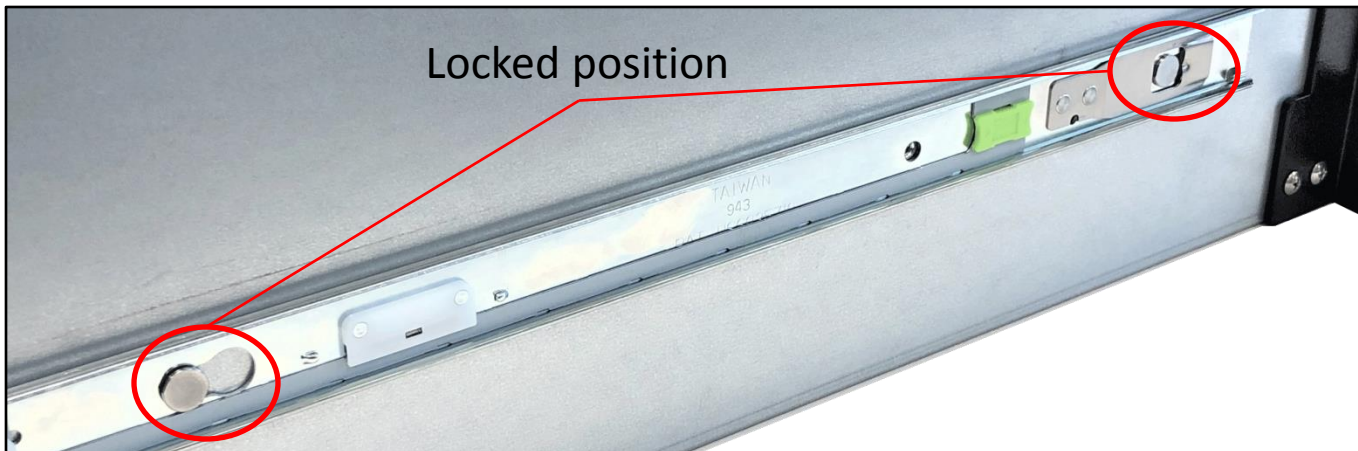

Perform the same methods on the other side panel of the unit.

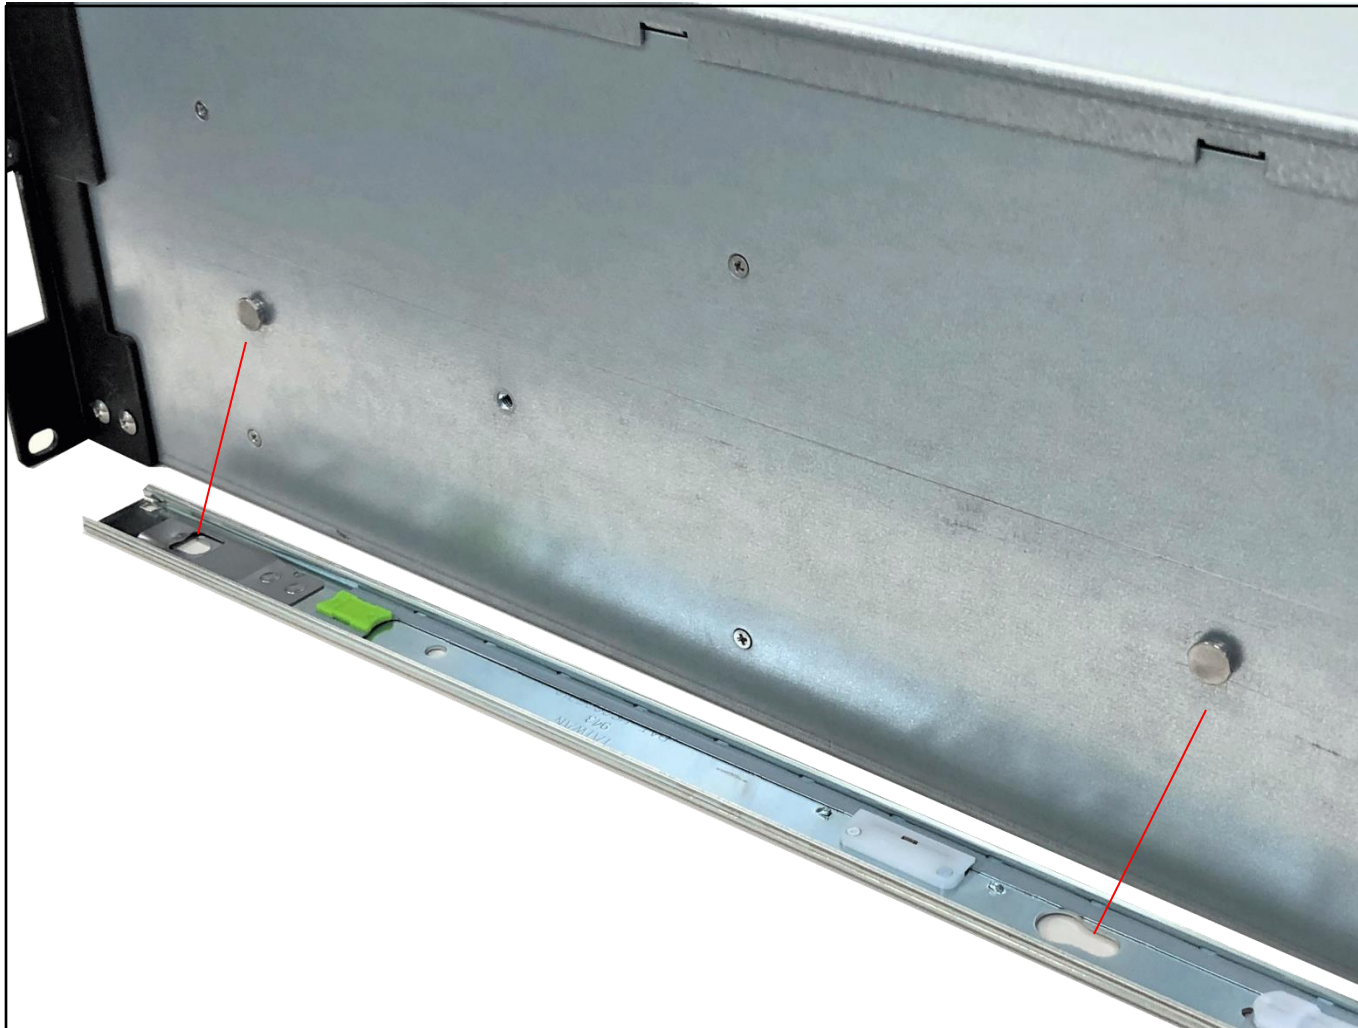


Attach or slip the rail Inner piece on to the chassis standoff, slide and lock.

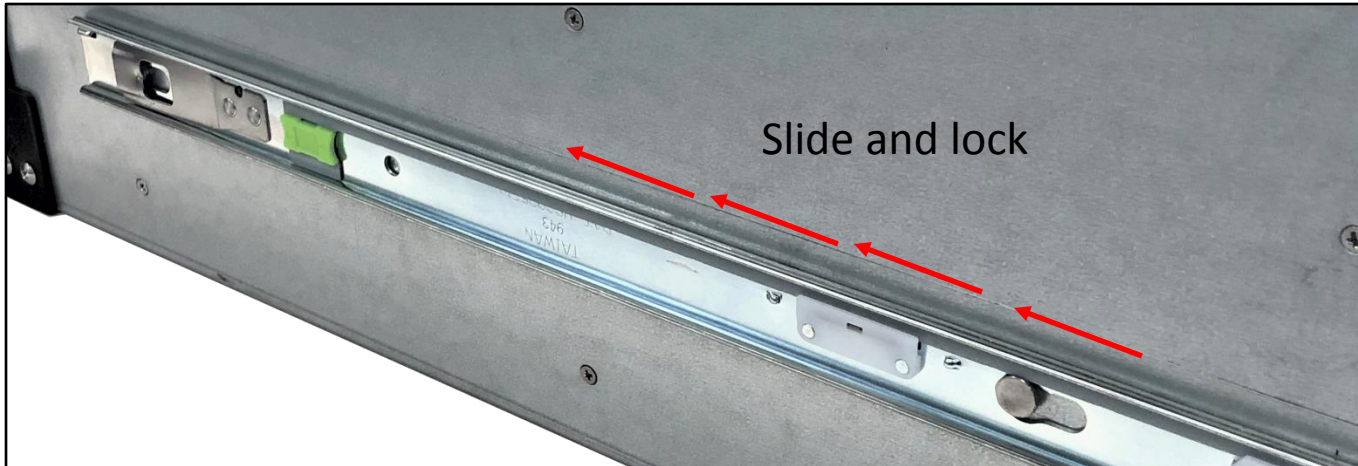


Outer Rails Installation


The outer pieces of the rail are mounted in the rack post.

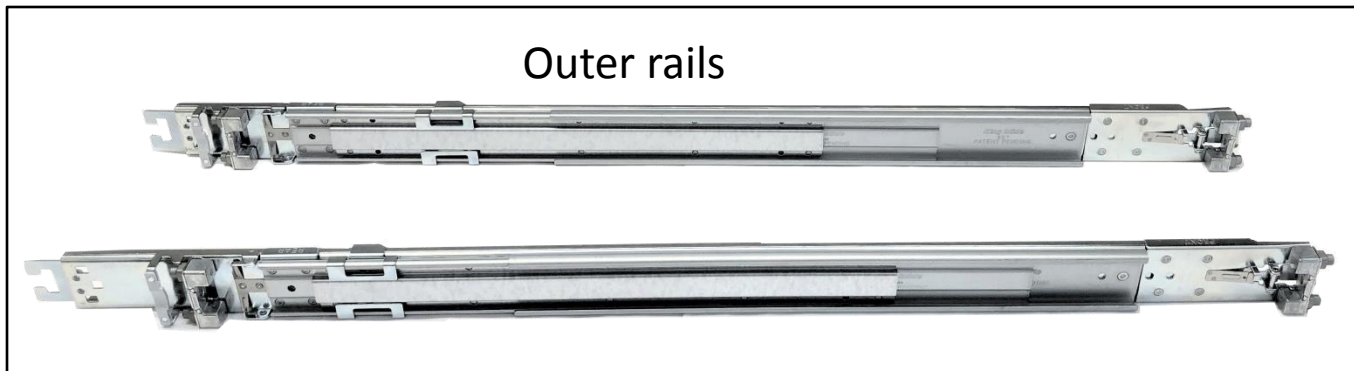


Mount the “front-end” of the Outer rail.

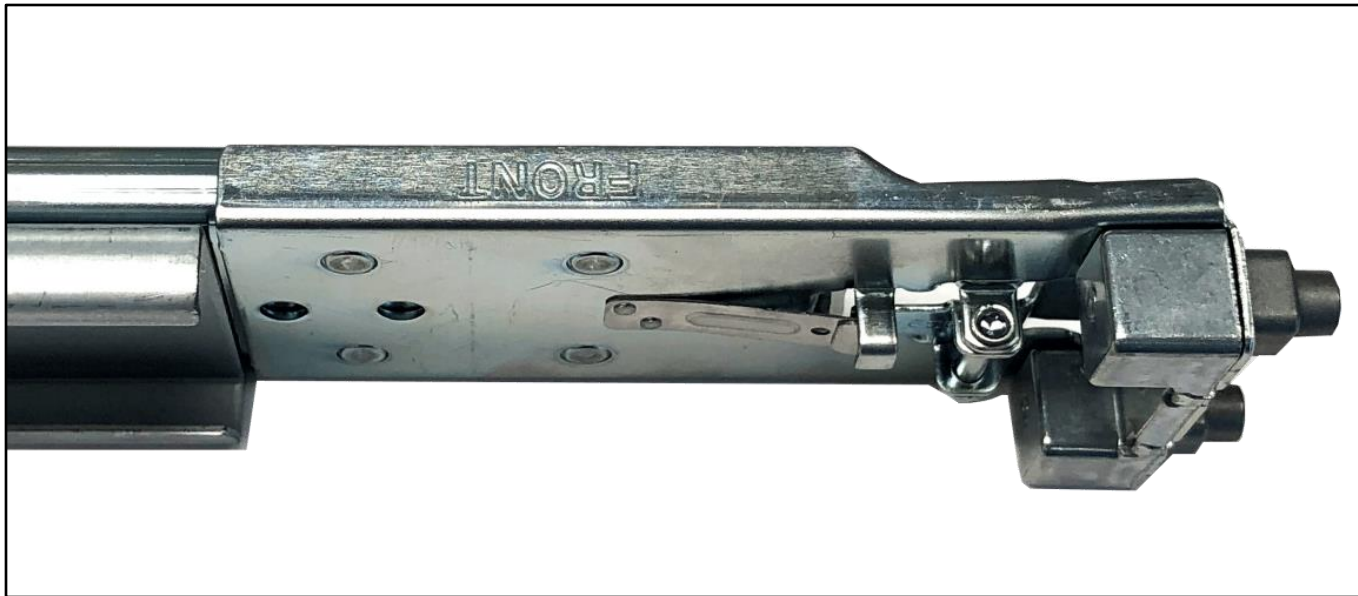

Front-end area of the Outer rail, see photos below.

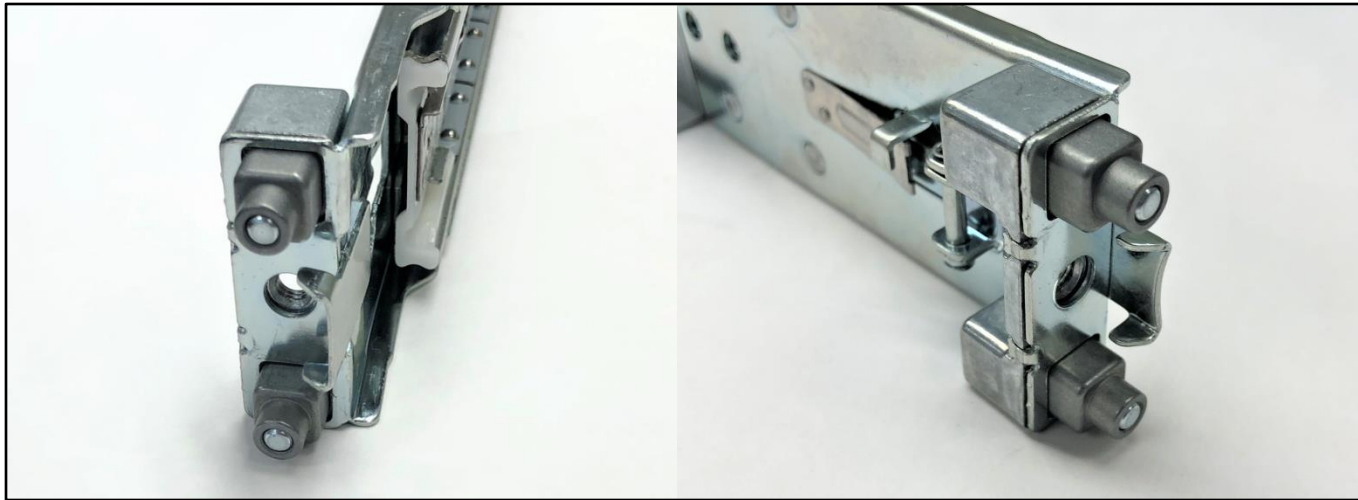


Push the rail front guide pins into rack square hole and latch in place.

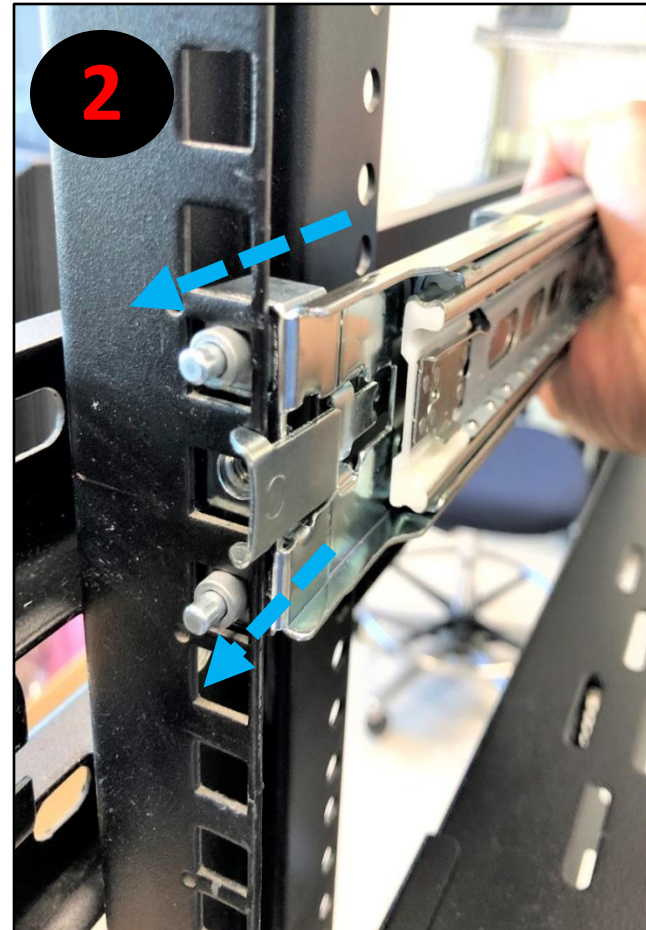


Front-end rail in “locked position”.




Mount the “**rear-end**” of the Outer rail.

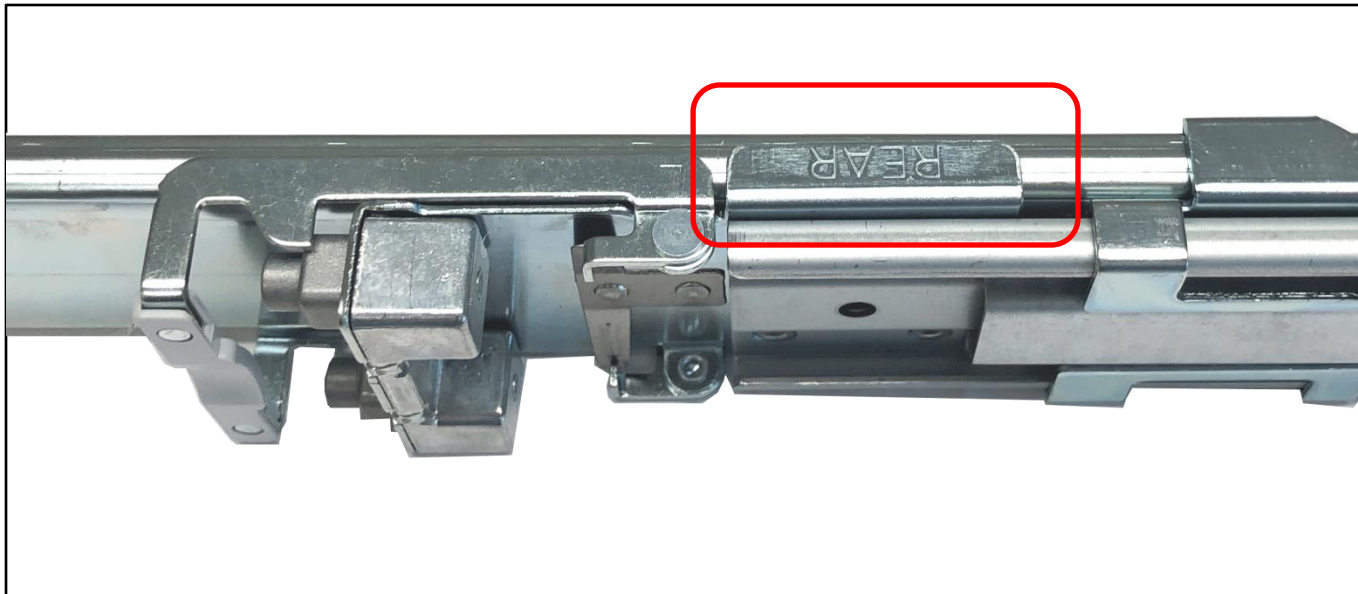


Rear-end area of the Inner rail, see photos below.

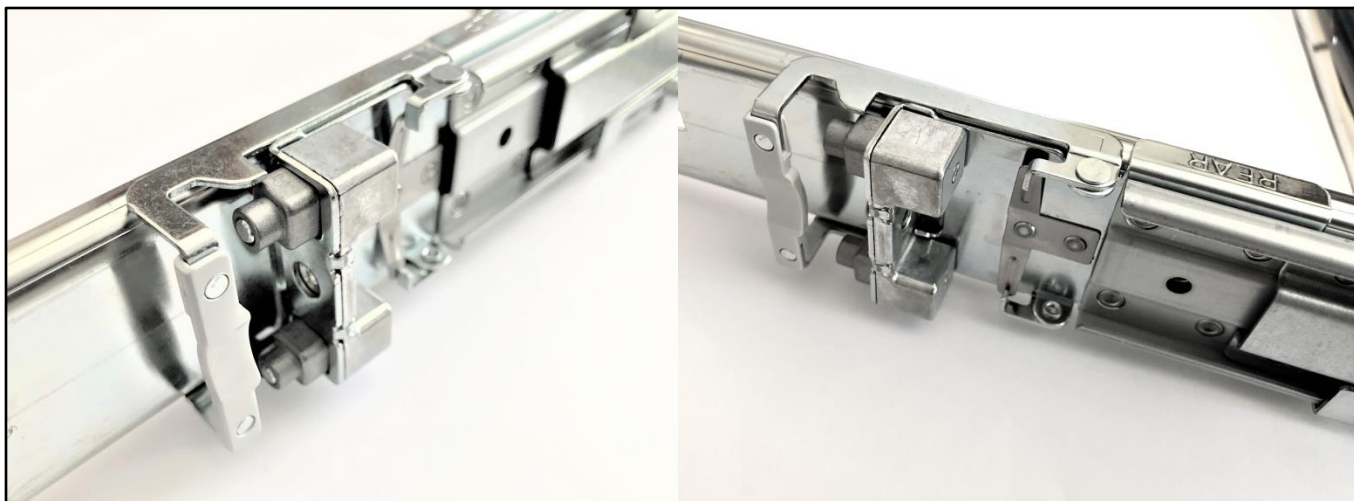

Align and push the rail rear guide pins into rack square hole and latch in place.


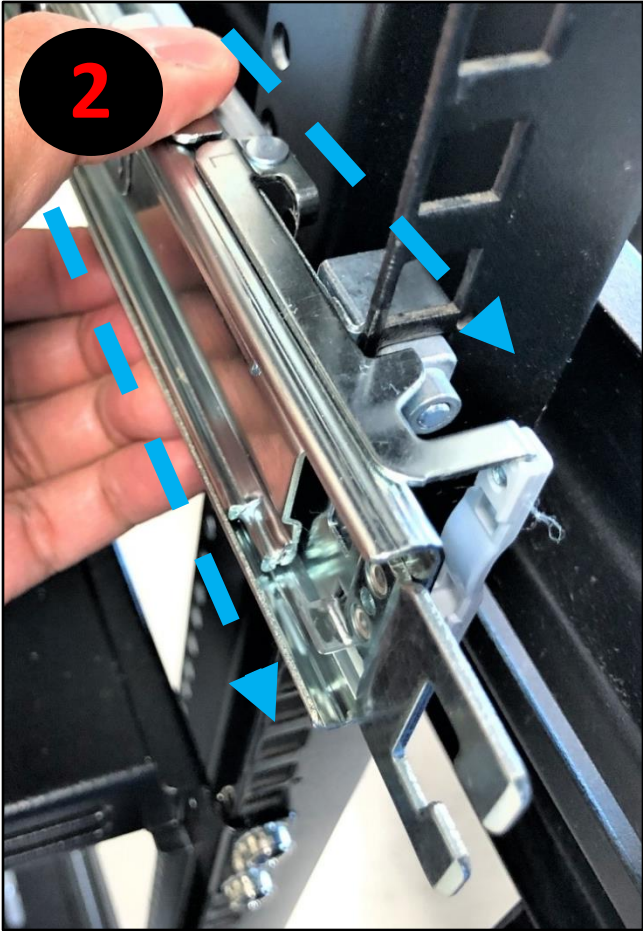


Rear-end rail in “locked position”.

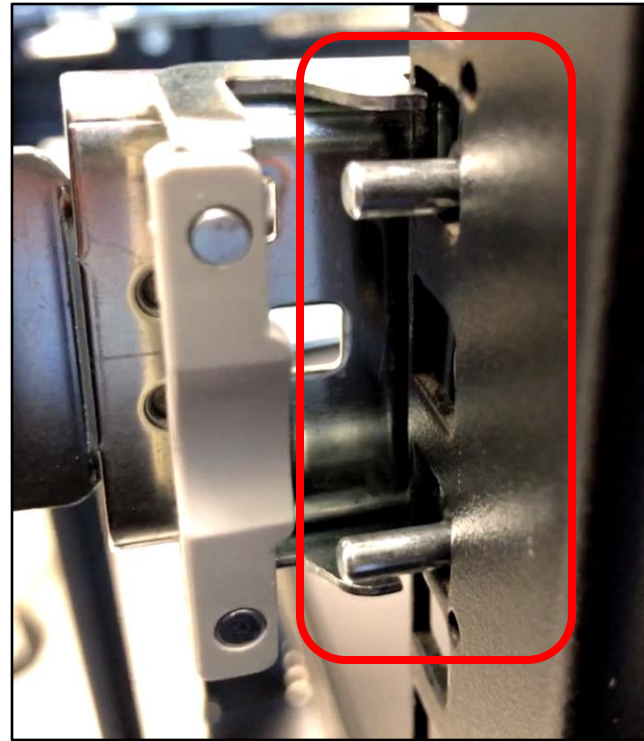


Install the Enclosure


Extend the Middle rail by sliding it out from the Outer rail.

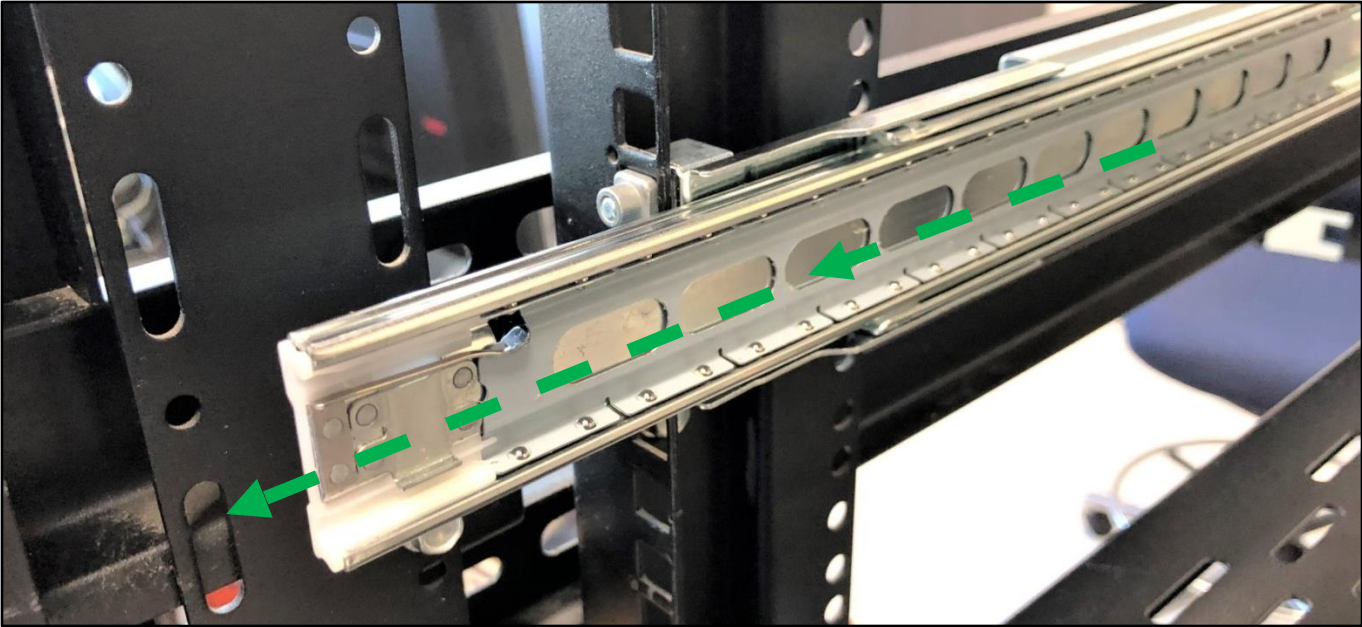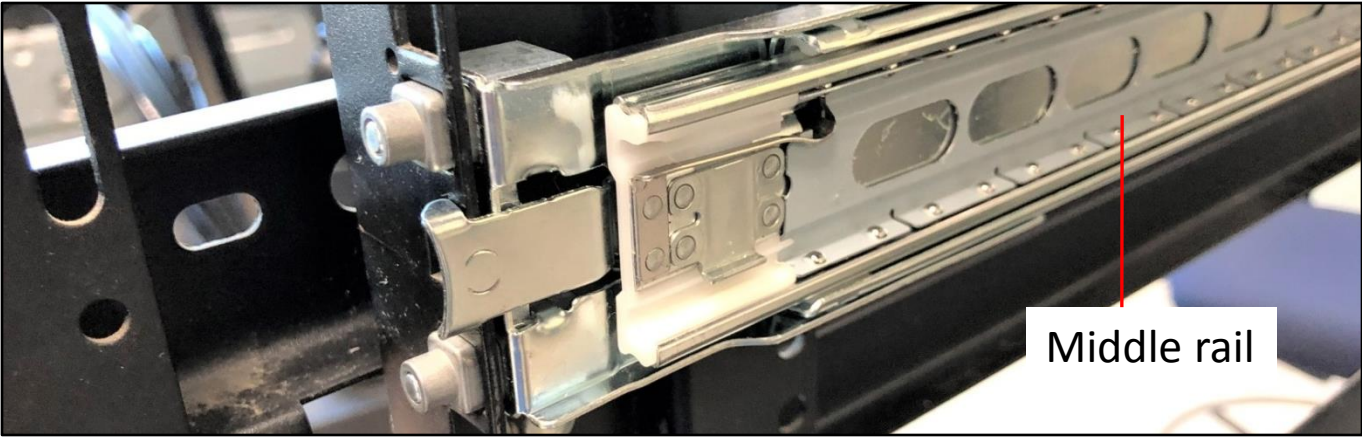


Middle rails are fully extended.

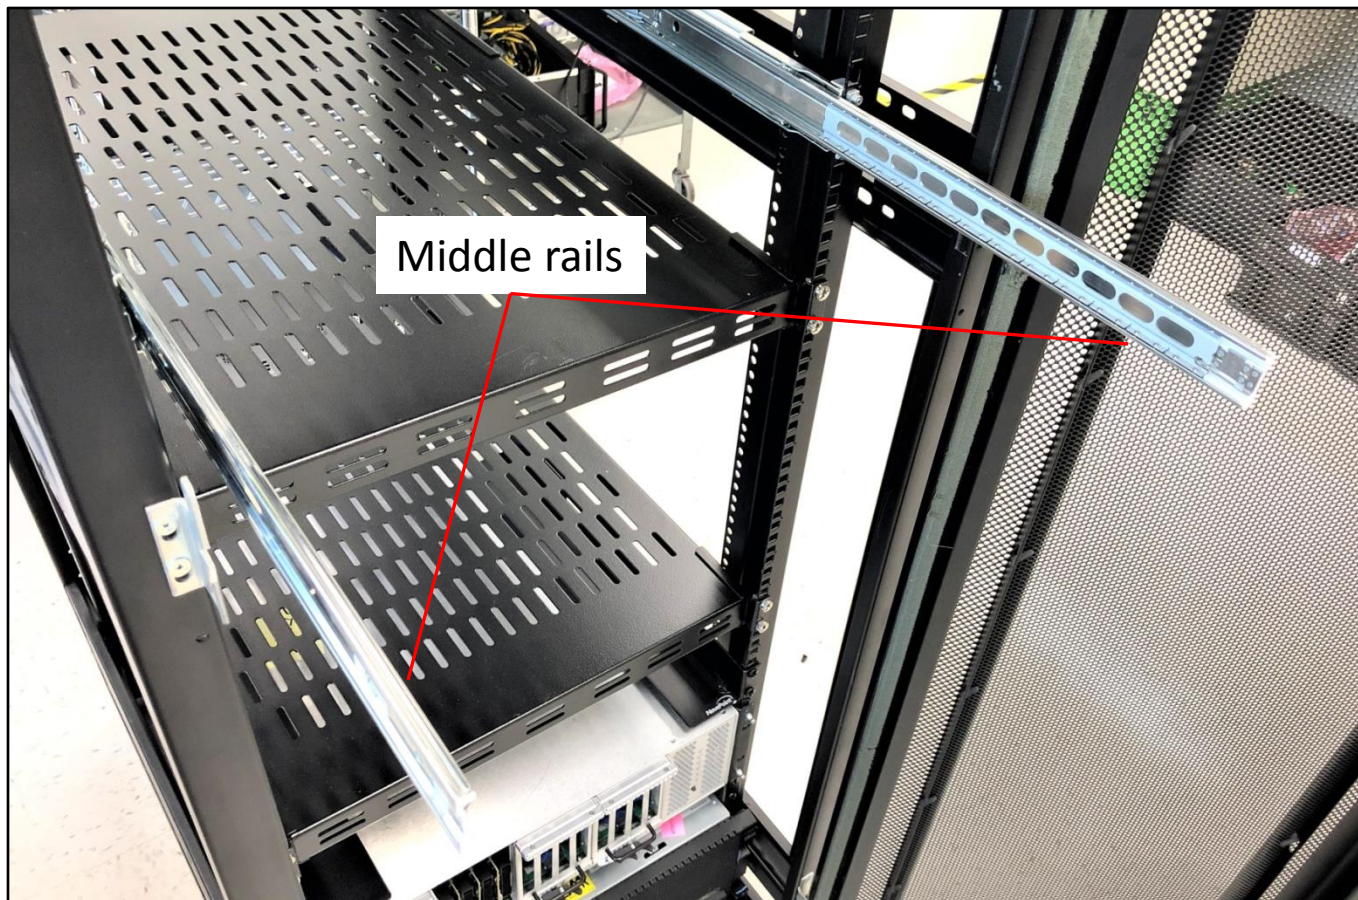


After extending the Middle rails, you can now mount the chassis enclosure.
Align the back-end Inner rails from the chassis to the Middle rails.

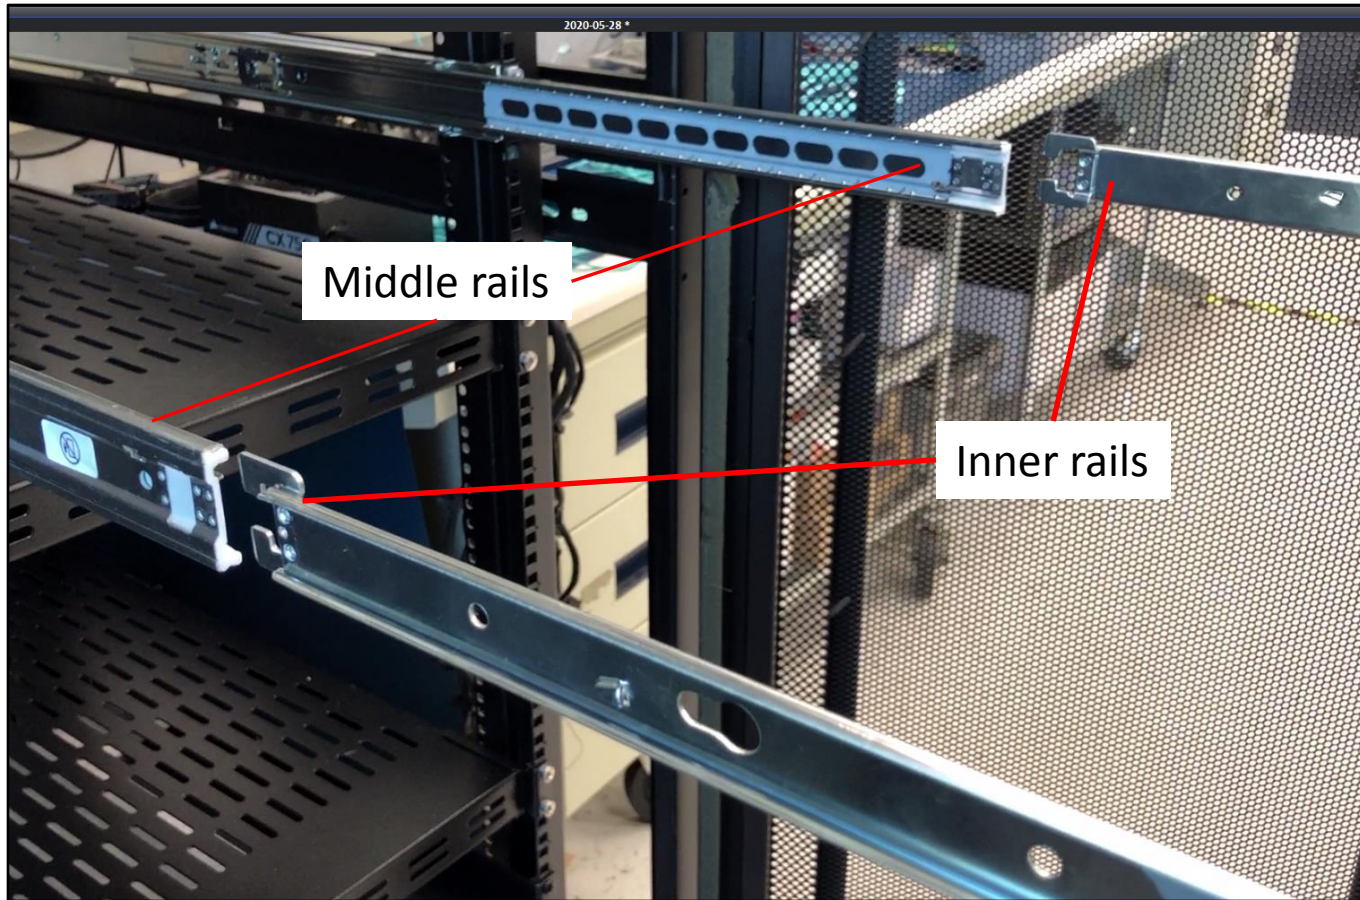


Slowly push the back-end Inner rail from the chassis to the Middle rail until both rails are mated properly.

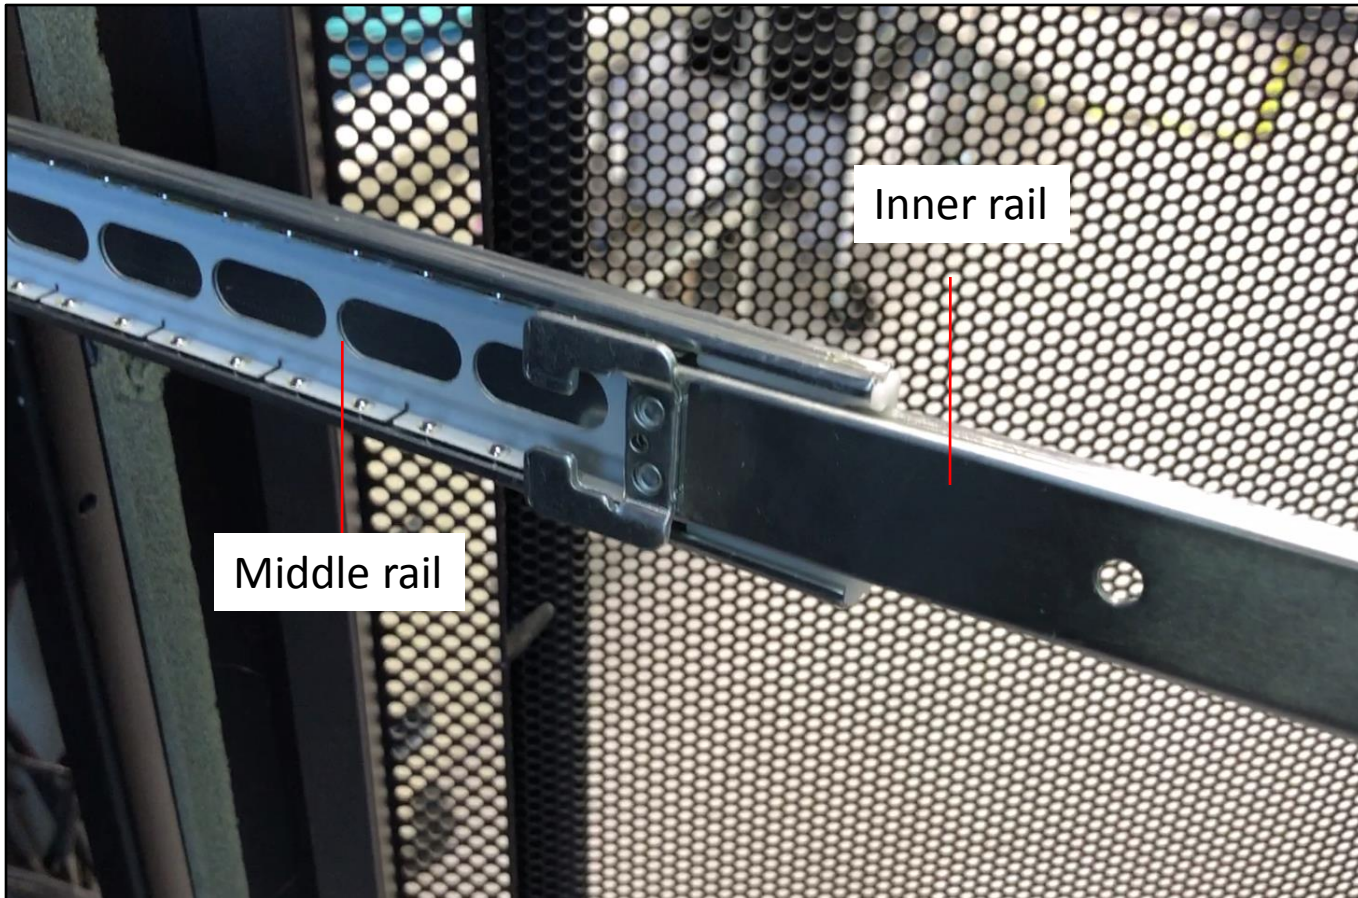

Pull and hold the green plastic tab (both sides) and slowly push the chassis enclosure.


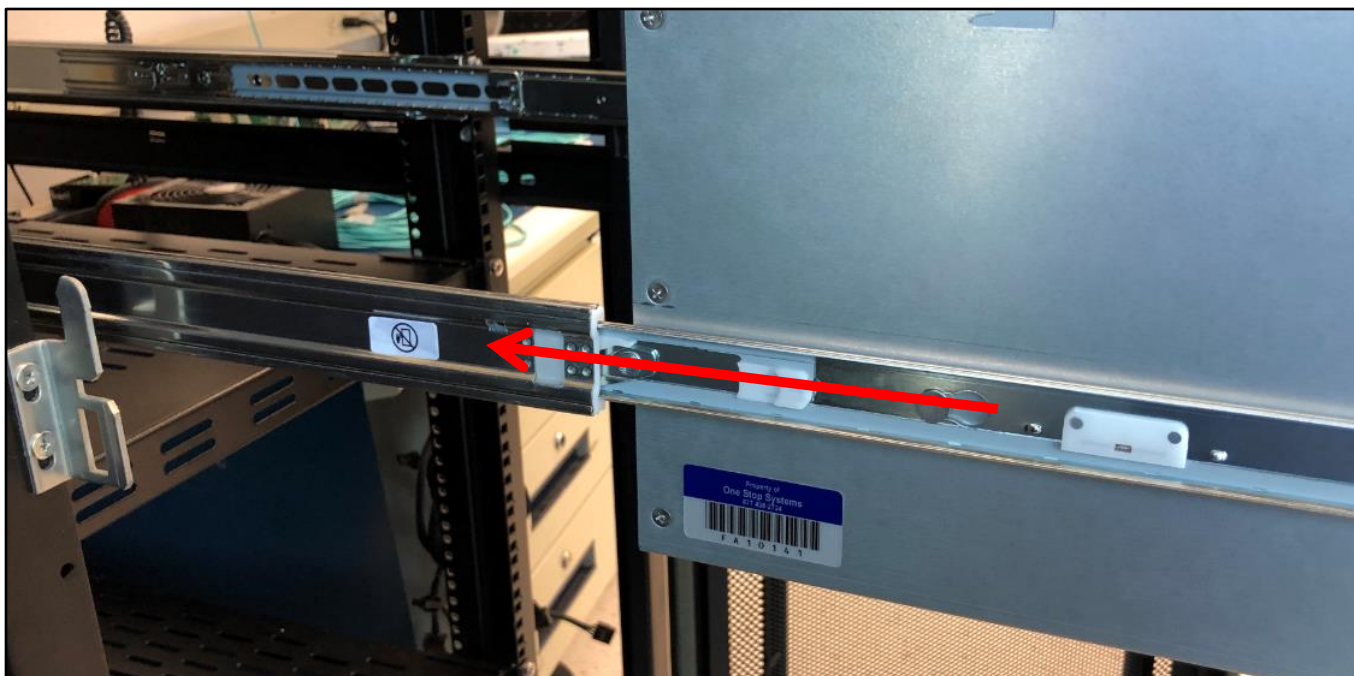


Chassis enclosure / expansion unit is now mounted on the rack cabinet.

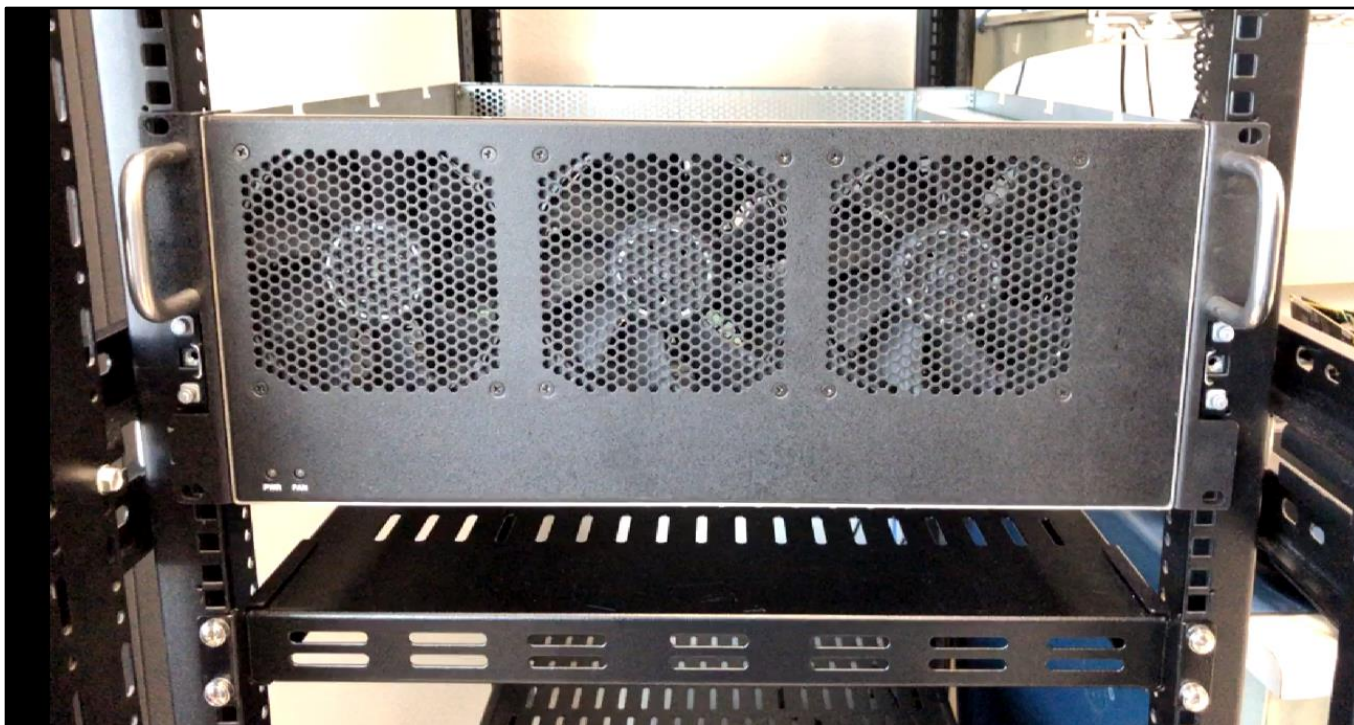



Removing the Chassis

To remove the 4UV chassis from the rack cabinet, simply pull and hold the plastic tab on both “Inner rails” (left and right sides) and slide the chassis out.

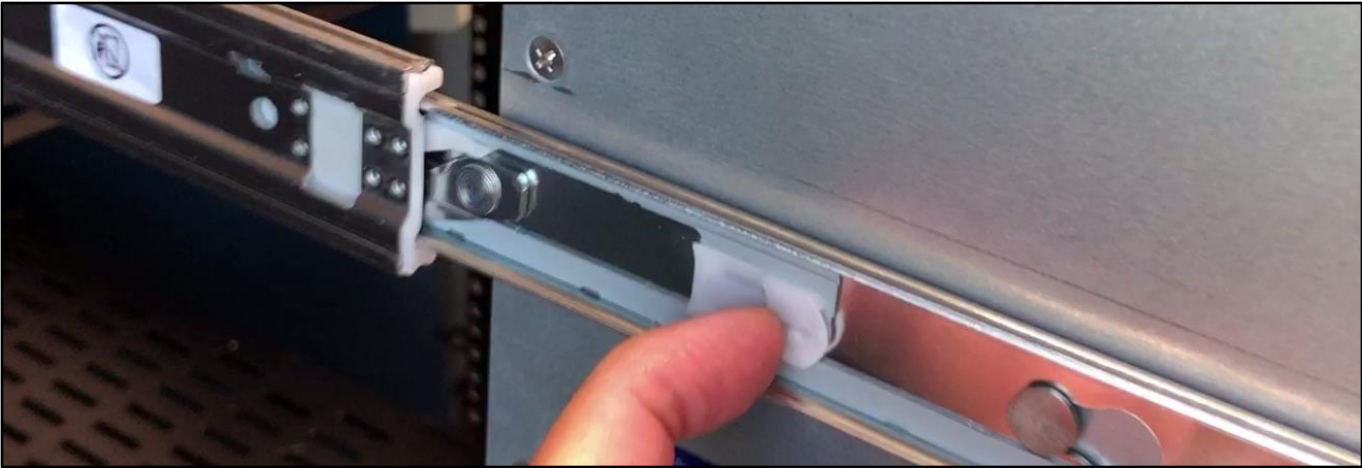
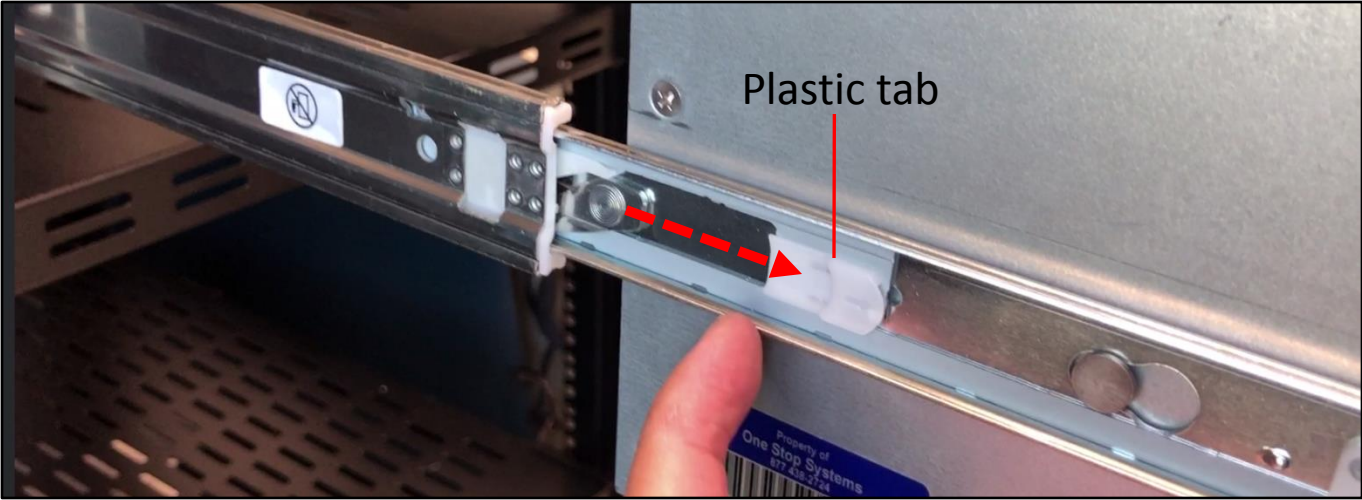


Detaching Outer Rails

To detach the rear- end Outer rail, push the locking mechanism plastic tab.

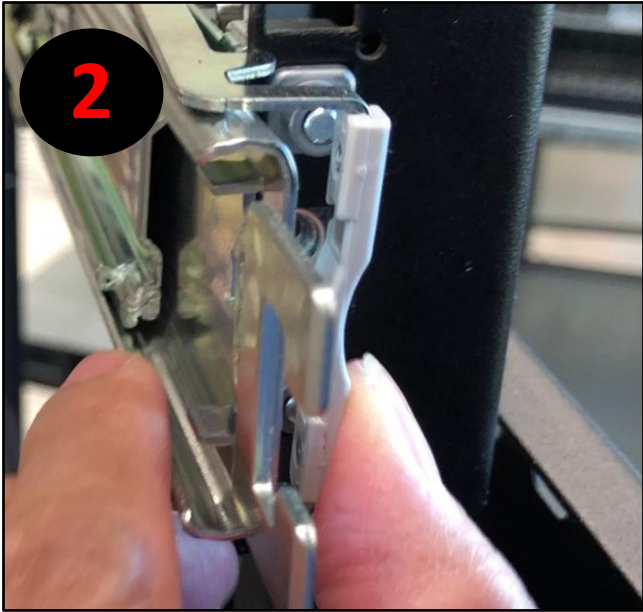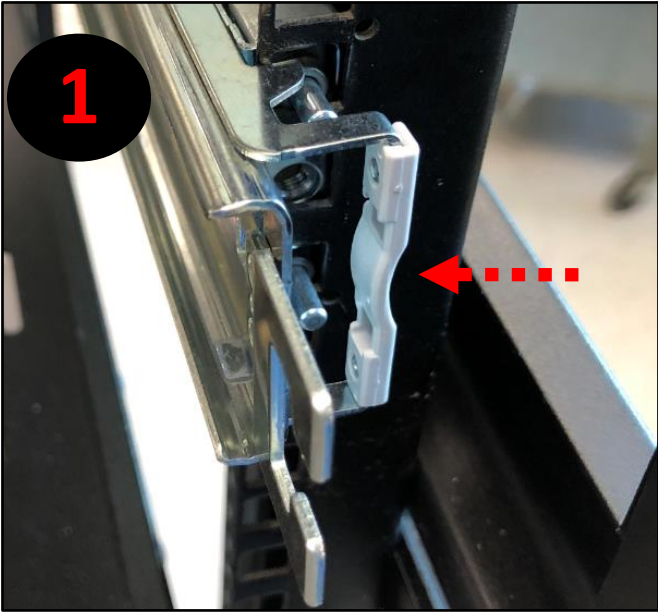

To detach front- end rail, push the locking metal tab.

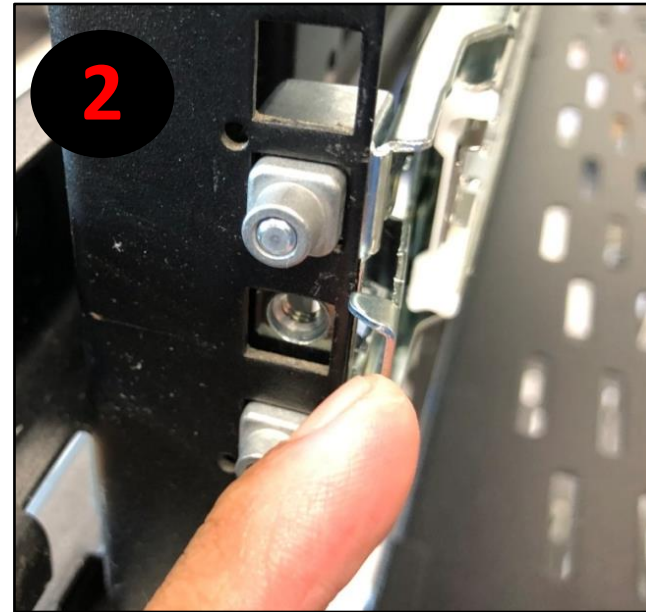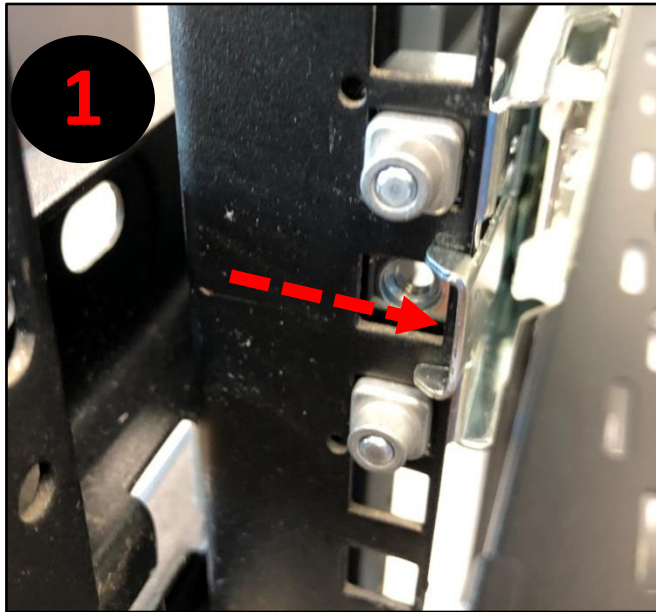


Detaching Inner Rails

To detach the “Inner rail” from the enclosure, push and pull the metal tab, slide and unlock.



Once the inner rail is unlocked, you can now detach it.

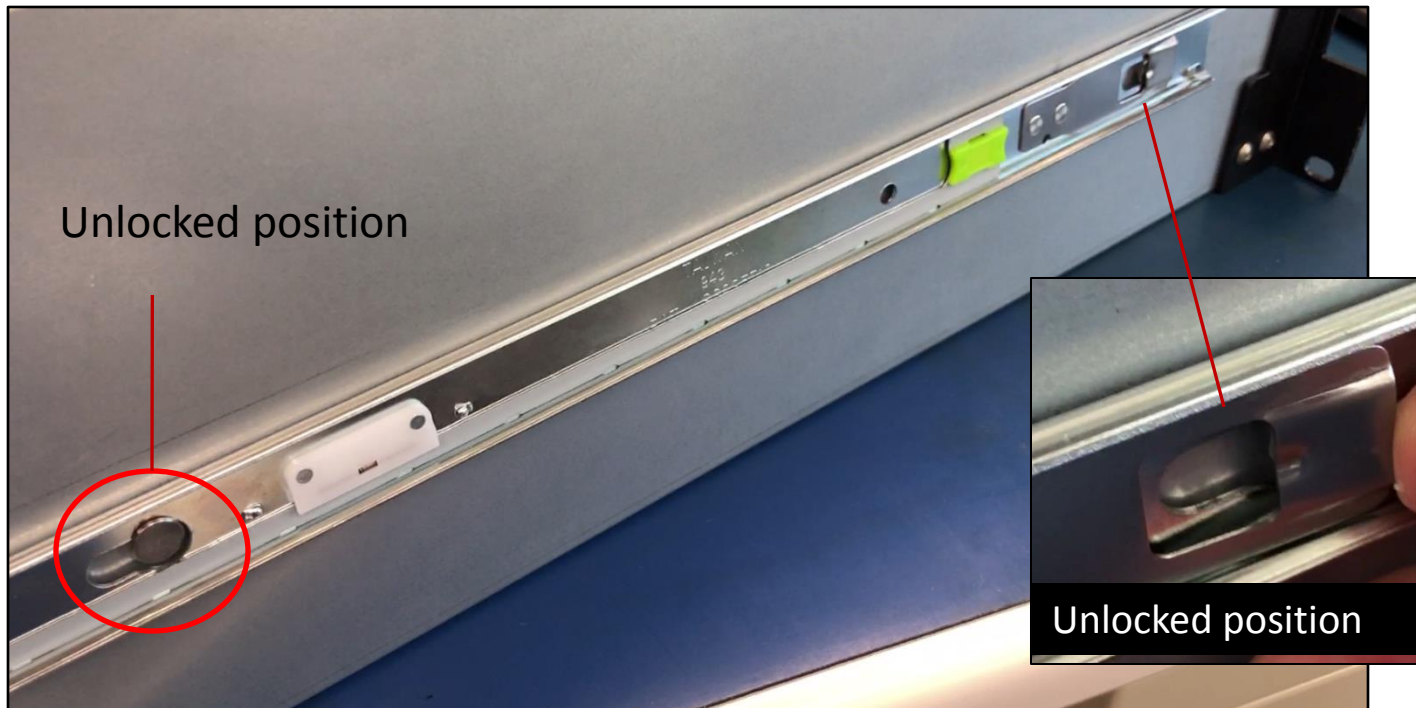



OSS
ONE STOP SYSTEMS

2235 Enterprise Street, Suite#110, Escondido CA 92029

Toll-Free : +1(800)285-8900 US • Main: +1 (760) 745-9883 • Fax: +1 (760) 745-9824

www.onestopsystems.com