




BIOMETRIC HANDGUN HANGER SAFE LOCK INSTRUCTIONS

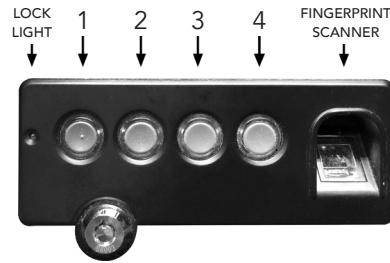

Your Electronic Lock is currently set with the default combination of:
1-2-3-4-1-2


OPENING THE SAFE:



STEP 1: Twist key **LEFT** (counter-clockwise) to open door for the first time.

KEYS LOCATED IN FOAM CUTOUT IN SAFE PACKAGING. MAKE SURE TO CHECK ALL SIDES OF PACKAGING FOR KEYS.

INSERT BATTERY OR POWER CABLE:

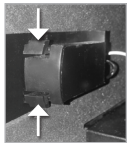

STEP 2: Pinch tabs together and slide out the battery tray from the battery compartment.



STEP 3: Insert a 9V battery into the battery tray & slide the tray back into the battery compartment.

CHANGE YOUR COMBINATION:

BUTTON 1



DEFAULT COMBINATION:
1-2-3-4-1-2

STEP 4: Hold down **BUTTON 1** until green light turns on - lock will beep twice.

STEP 5: Enter your **current 6-digit combination** - lock will beep twice.

***WHEN OPENING THE SAFE FOR THE FIRST TIME, USE THE FACTORY DEFAULT COMBINATION: 1-2-3-4-1-2**

STEP 6: Enter your **NEW 6-digit combination** - lock will beep 3 times.

STEP 7: Re-enter your **NEW 6-digit combination** - lock will chime.

Your new combination is now installed.

*If lock beeps 5 times, combination was not installed successfully. Restart from STEP 4.

IMPORTANT! Test your new combination several times with the door open to ensure new combination is properly set before closing and locking safe.


RECORD NEW COMBINATION HERE:

□ - □ - □ - □ - □ - □

BIOMETRIC FINGERPRINT SCANNER:

THIS SAFE WILL OPEN WITH ANY FINGERPRINT UNTIL THE FIRST FINGERPRINT IS SUCCESSFULLY REGISTERED.

If it's still opening with every fingerprint you have **NOT** yet successfully registered your fingerprint. You can register up to 31 different fingerprints by following the steps listed below.

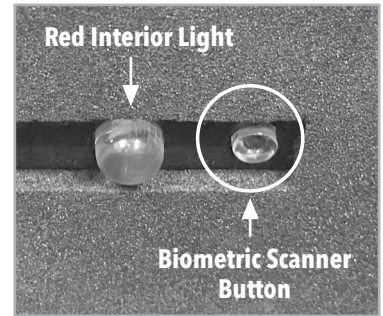

STEP 8: Press **ONCE** (do **NOT** hold) biometric scanner button - lock will beep twice / lock light and finger scanner will illuminate green.

STEP 9: Position finger fully on biometric scanner - hold until lock chimes.



Your Fingerprint is Now Installed Successfully.

*If lock beeps 5 times, lock light flashes red, and fingerprint scanner stays green, fingerprint was not installed successfully. Restart from Step 8.

SILENT MODE:

Press and hold **Button 4** for 5 seconds until lock light flashes and your safe is now in silent mode. To turn off silent mode, simply hold **Button 4** for 5 seconds until you hear a beep.

BATTERY LIFE:

If you see a continuous red light on - replace battery.

OPERATING INFORMATION:

- Lock will go into standby after 10 seconds of inactivity.
- Lock will go into lockout mode for 5 minutes after 5 wrong combination attempts.

RESET LOCK:

- Hold down biometric scanner button until lock beeps 5 times.
- Lock will reset to the default code: 1-2-3-4-1-2 and erase all registered fingerprints.