

NL ELECTRONIC LOCK INSTRUCTIONS

GENERAL LOCK INFORMATION:

LED LIGHT: The keypad is equipped with an LED to illuminate the keypad when necessary. Press the light button located on the lower left-hand side of keypad to enable the LED.

LOW BATTERY: A series of signals indicates that the battery is weak and must be replaced. Use only 9V batteries! The battery compartment is located at the bottom of the unit.

LOCKOUT: Manipulation protection: Entry of four consecutive invalid codes results in a 5 minute lockout. During this period, the LED flashes every 10 seconds and any key pressed causes a long signal. After 5 minute period, entry of two or more invalid codes restarts 5 minute lockout.

CHANGING DEFAULT COMBINATION:

NOTE: The following instructions are for changing the combination for the first time from the set default combination.

- **Enter default combination** to unlock the safe: **1-2-3-4-5-6**
- **Open the door and extend the bolts**
- **Press and HOLD [0] on keypad until double signal.** LED light will remain on during next steps:
- **Enter DEFAULT combination: 1-2-3-4-5-6 [double signal]**
- **Enter NEW combination: six-digit code [double signal]**
- **Re-enter NEW combination [double signal]**
- Your new combination is now set

IMPORTANT: Make sure you test your new combination several times with the door open before closing the safe to ensure your new code was set properly.

REPLACING USER COMBINATION:

- **Enter existing user six-digit combination** to unlock the safe
- **Open the door and extend the bolts**
- **Press and HOLD [0] on keypad until double signal.** LED light will remain on during next steps:
- **Enter existing user combination [double signal]**
- **Enter NEW combination: six-digit code [double signal]**
- **Re-enter NEW combination [double signal]**
- Your new combination is now set
- **Test new combination several times before closing the door**