

eureka

*SINCE 1909*

eureka

# Owner's Guide

---

Thank you for purchasing your new Eureka machine! Please read this Owner's Guide carefully before operating, and keep it properly.



Cordless spray spin mop **FC3**



# CONTENTS

---

Safety Precautions .....	3
Product Introduction .....	4
Operation Guide .....	6
Maintenance Instruction .....	11
Specification .....	12
Trouble Shooting .....	12
Warranty .....	13

## SAFETY PRECAUTIONS

 
TO AVOID ELECTRIC SHOCK, FIRE OR INJURY, PLEASE READ THE USER MANUAL CAREFULLY BEFORE USING THE APPLIANCE AND KEEP IT FOR FUTURE REFERENCE.

---


1. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. This appliance is for household use only. Do not operate or touch the appliance with wet hands.
4. The appliance has rotating parts at the bottom. Please keep power cord away from the appliance during the using.
5. If the appliance is to be disposed of, the batteries must first be removed. The appliance must be disconnected from the supply mains when removing the battery. Dispose of the batteries safely. Used batteries should be taken to a recycling station and not disposed of with household waste. To remove the batteries, please contact the professional organizations to do the dismantling.
6. The appliance is used for cleaning or waxing various flat surface such as ceramic tile, marble, wooden floor only. Do not use the appliance on walls, windows, upright grass or uneven floors.
7. Never immerse the appliance in water or other liquids.
8. Always turn off the appliance before lifting it off the ground. Never lift the appliance off the ground during the running to avoid danger.
9. This appliance is for floor mopping and waxing, users must decide and be responsible for the usable places and safety.
10. For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

# PRODUCT INTRODUCTION

## PRODUCT OVERVIEW

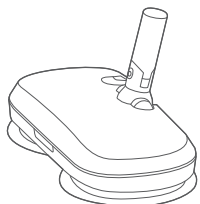

Main unit

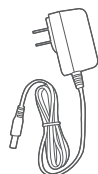 

Adaptor



 
Aluminum tube\*2




Plastic tube



Handle(contain screw)

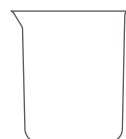

 Water measuring cup  
(contain screwdriver\*  
battery back cover)

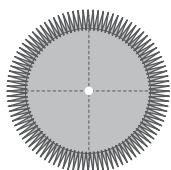


Wiping mop\*4



User manual

# PRODUCT INTRODUCTION
 
## PRODUCT COMPONENTS

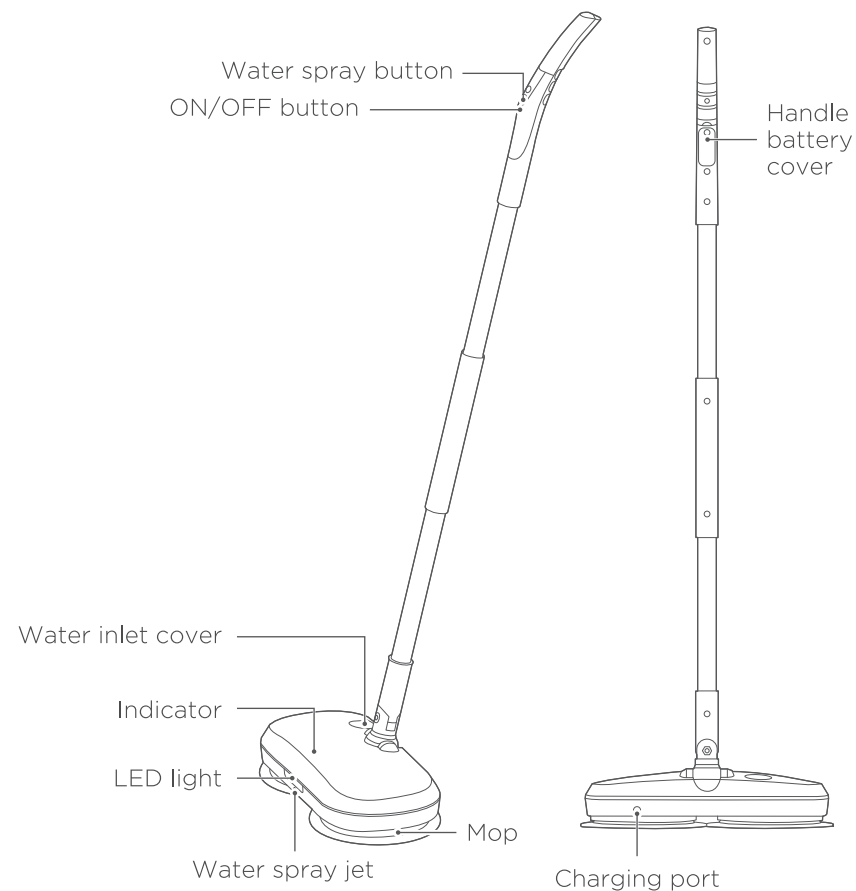

# OPERATION GUIDE

## ASSEMBLING

### ■ Assembling of batteries

1. Take out the battery, battery cover, screws and screwdriver;
2. Install the battery into the handle back in the correct polarity direction of the power supply;
3. Close the battery cover and secure the battery cover with screws (tighten the screws with a Phillips screwdriver);
4. If you do not use the appliance for a long time, remove the battery in the reverse order of installation.

### ■ Instructions about batteries

1. Please use correct type of batteries;
2. Do not mix new and used batteries or with other different types of batteries together;
3. Do not charge the disposable battery;
4. Please remove the exhausted batteries from the appliance and dispose it safely;
5. Please remove the batteries from the appliance if the appliance is long time not used;
6. Do not short circuit batteries.

### ■ Assembling of tubes

 
1. Assemble two aluminum tubes together by plastic tube as shown in the below picture;
2. Insert one end of aluminum tube to the handle, and the other end to the main unit.

#### Note:

Please kindly make sure the lock protrusions on the aluminum tube is well fitted into all plastic parts until you heard "click" sound.


# OPERATION GUIDE

## ASSEMBLING

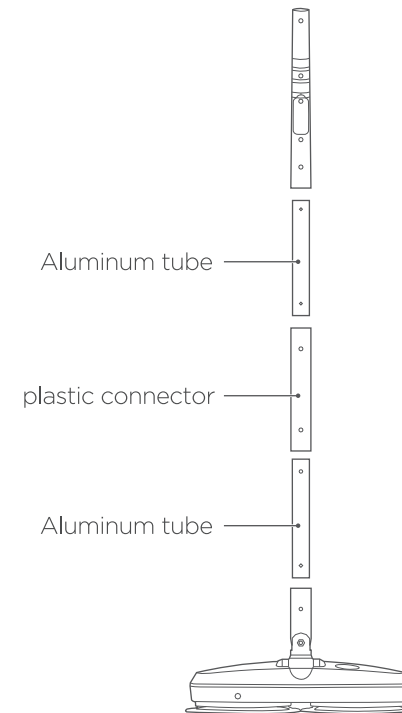

**Assembling of mops:** To paste the mops on the turntable at the bottom of the main unit. Please ensure the central point of the cloth coincides with the central point of the bottom turntable during the installation.

 **Note:** Do not overlap the mops to avoid the damaging of the machine.

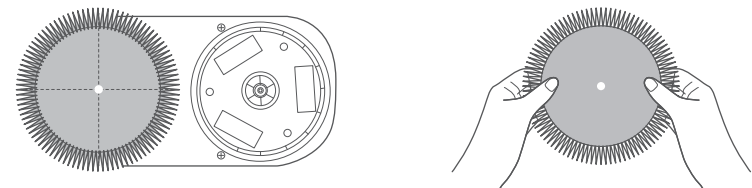


# OPERATION GUIDE

## CHARGING

Place the main unit on a flat ground. Connect one end of the power adapter into the charging port of the main unit, and the other end to the power supply.

**Charging indication:** The indicators flash in blue when the appliance is under charging and keep in blue when fully charged.

 **Note:** Please use the original power adapter.

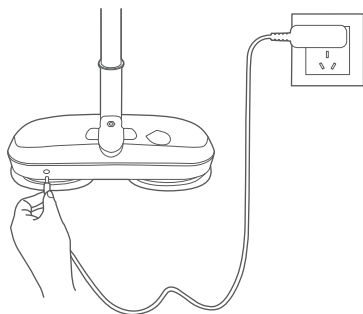


## FILLING WATER

Open the water inlet cover, and holding it aside, pour water into the water tank by the water measuring cup till the water reach the filtration network, close the water tank with water inlet cover.

**Note:**

 1. The capacity of the water is 230ml.
2. To avoid damage to the appliance, please do not fill water directly under faucet into the water tank.
3. Do not fill water with temperature more than 50 degree.

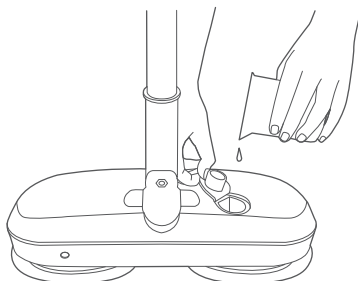


# OPERATION GUIDE


## OPERATION OF APPLIANCE

### ■ ON/PAUSE

 Pull the handle backward until the releasing sound of the lock has been heard.

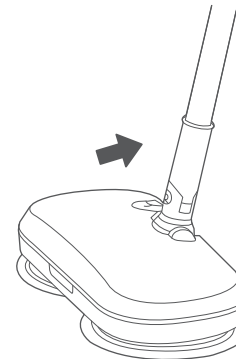

 Press ON/OFF button, the appliance starts to work.  
Press ON/OFF button again, the appliance stops working.

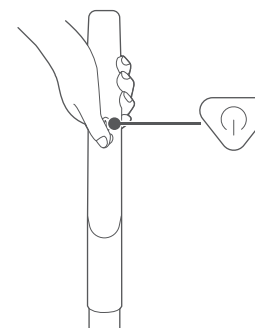

# OPERATION GUIDE

 
## OPERATION OF APPLIANCE

### ■ Water spray

Short press water spray button to spray water once. Keep on pressing water spray button to spray water continually. Release the water spray button to stop the spray of water.

#### Note:

1. Make sure mops have been installed before the operation;
2. Do not stand in front of the device during the operation to avoid sprayed by the water;
3. Take wires, rags, slippers and other debris away during the operation to prevent being tangled or wet.

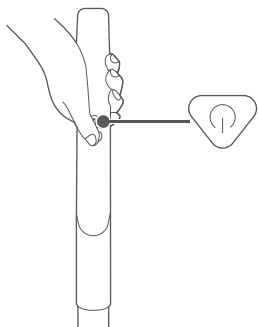


### ■ OFF

Push the handle into vertical position, you will hear a “click” sound at the same time the indicators light will be off. The appliance turn off successfully.

#### Note:

 
Fully charged the appliance before the long term storage. Charge the appliance in each 3 month to avoid the over discharge of battery.

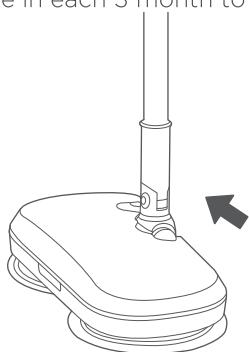

# MAINTENANCE INSTRUCTION


## CLEAN THE WATER TANK

 Empty the water or liquid into the water tank before long time storage to avoid the blockage.

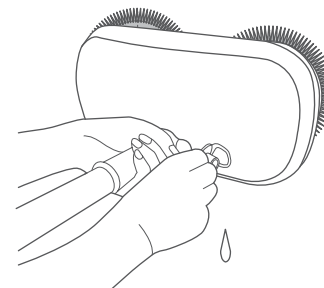

## CLEAN THE MOPS

 Remove the mops from the turntable at the bottom of main unit. Wash the mops and dry them.

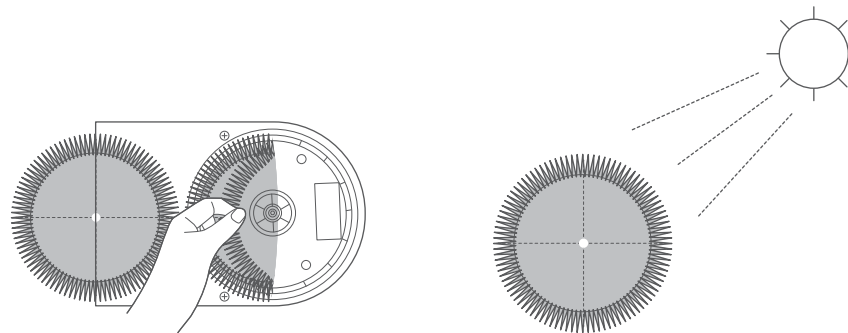

# SPECIFICATION

## MAIN UNIT

<b>Model</b>	FC3/FC-3/FC03
<b>Product size</b>	120×37×18cm
<b>Charging voltage</b>	9.0V $\equiv$
<b>Rated voltage</b>	7.4V $\equiv$
<b>Rated power</b>	40W
<b>Time of charging</b>	About 4-4.5H

# TROUBLE SHOOTING

Should you have any problem with the appliance, follow below simple check list.

<b>Common problem</b>	<b>Normal operation</b>
The device can not turn on	1. Check if the AAA batteries in the handle is installed or should be replaced. 2.The handle is in vertical position. Please pull the handle down till the device in standby mode.
The device stop working suddenly during the operation and can not turn on anymore	1. Charge the appliance and restart it. 2.The PCBA is protected due to overcurrent. Connect the appliance to adaptor and power supply to active the PCBA. Then re-start the appliance.
The device can not spray water	Check if the water tank filled with water. Please fill the water tank in proper amount.

If problems still can not be solved after above steps, please contact our after-sales service department for assistance.

# WARRANTY CONDITION

The appliance includes a warranty from the date of purchase ( the date on sales invoice or receipt).

During the warranty period, you are entitled to a repair or replacement if the appliance is found to be defective due to faulty materials, workmanship or function.

This warranty is only valid if the appliance is used in the country in which it was sold.

## Warranty period

<b>Part</b>	<b>Warranty</b>	<b>Warranty period</b>
Main device	Main unit	1 years
Accessories	Mop	3 months

## Conditions that warranty not covered

1. Unauthorized repairment, misuse, collisions, faults caused by negligent use or care , accidental damage, neglect, careless operation or handling of the appliance, altered or torn label on the appliance;
2. The warranty has expired;
3. No factory name, factory address, production date, product certification;
4. Damage caused by force majeure.

# WARRANTY CONDITION

## ■ Warranty card

User name	
Mailing address	
Contact number	
Product name and model	
Product Serial Number	
Product purchase date	

## ■ Maintenance record

No	Maintenance date	Defects description and replacement parts	Maintenance center	Maintenance Engineer
1				
2				

## CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.To return your used device,please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.