


Gate Installation

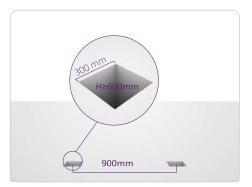


1. Dig Holes

Dig a 300mm diameters' hole in the ground with a depth of min 600 mm(or follow local practice), and make sure they're properly spaced. The spacing between posts on-centre should be 0.9 meters.




5. Fix L-Hinge to Post

Fix the L-hinge to the post with machine screws, and tighten the nuts from inside the post.

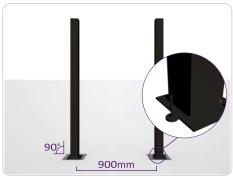

2. Set Posts

3.Fix Shim to Gate

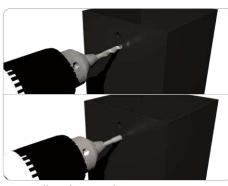

4. Drill and Tap Holes

Place posts into the holes. Pour in concrete and Put the bearing pedestal and bearing on the Use the gate to determine the position of the wait for it to set. Make sure the posts are pin. Fix the shim with screws over the hole on the upper L-hinge, then drill and tap the holes for plumb and in a straight line. bottom of the gate, make sure the shim is well the L-hinge.



6. Gate Placement

Secure the L-hinge to the gate with a hexagon socket bolt.




7. Gate Placement Finished Gate placement completed.



8. Fix Strike Plate and Latch Protector

Fix the strike plate and latch protector to the post with self-drilling screws, and make sure it's in the correct position so that the lock functions well.

• Fence Installation

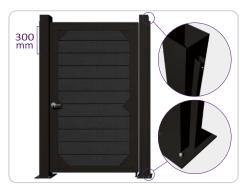


9. Fix U-Slots to Fence Gate Post

Place U-slots on the side of the fence gate post where fence boards are installed, make sure they're centred, then fix with screws at an interval of 30 cm. slots of the posts, and the Top Fence Board into the posts.



10. Install Fence Post

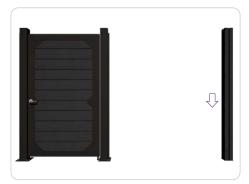

11. Set Posts 12. Fix the Aluminium Fence Base

Determine the position of the fence posts, anchor Put the post on the steel base. Slide an aluminium fence base to the bottom the steel base to the ground with SS expansion

Note: Make sure the fence posts are in a straight line.

along the slots of the post. bolts, and slide the fence post over the steel base.

tion finished. should be last.

