

Lancia Delta Dust Cap install Guide

Removal of headlight is recommended for easier access to rear of head<mark>light. This is just a guide, and is the method we used. The dust caps are universal and can be adapted however you see fit.</mark>

Low Beams H4

Step 1:

Remove H4 socket base from the LED unit by twist and pulling. Cut a hole with diameter just smaller than LED head into the top of the dust cap.



Step 2:

Push LED through dust cap hole, ensuring the yellow o-ring is also through the cut hole. This is required so the guide pins will slide back onto the H4 socket base. Fold the dust cap back to assist with



Step 3:

Lock the H4 base onto the Headlight unit.

Once secure, insert the LED unit with dust cap through the H4 base – Push in and twist.



Dust cap can then be folded back to create the seal.



High Beams H1

Step 1:

Similar to the Low Beams, create a hole slightly smaller than the H1 head. H1 socket base can be removed by simply pulling off.



Step 2:

Lock the H1 socket base onto the headlight using the retaining clip then insert the H1 unit and dust cap into the headlight. Press in and you should feel the click of the socket base attaching to the LED unit.

