

Thank you for your purchase of the Artistic® LED Open Sign with Custom Message Holder.

Please follow the easy set-up instructions below:



Hanging & Installation

- 1) Locate parts (hang chains & power cord) located within the packaging
- 2) Hook the chains through the hanger tabs (Diagram 1)

Inserting Custom Sign

- 1) The holder accepts one, 8.5" x 11" paper insert. Ordinary "copy" paper is recommended, as a thicker paper will reduce the LED light from passing through them. Inserts using color will create a more interesting and contrasting display!
- 2) Begin by sliding your own insert into the left hand side of the clear plastic holder as indicated (Diagram 2). To slide in, lightly separate the clear outer plastic from the white vertical center portion of the holder. To remove the sign and insert a new one, simply grab the insert in the middle area by the cut-out (Diagram 3) and remove.
- 3) To power on and light your inserted content, plug the included power adapter into the back of the unit, and plug into a wall outlet or preferably a surge protector, per (Diagram 4). Next press the On/Off switch to the "On" position (Diagram 5). For added effect you can switch to the "Flash" mode which will add extra excitement to your sign.
- 4) To turn the light off, simply switch the On/Off button to the "Off" position. It is recommended to unplug the AC adaptor from the wall when not using the unit for an extended period of time.

CAUTION: To Reduce the Risk of Fire, Electric Shock or Injury Please Follow Below Precautions:

- This product is intended for indoor use only. Do not use in damp or wet locations
- Not for use with light dimmer circuits
- To reduce the likelihood of injury or damage mount only on a surface that is mechanically sound
- Do not use extension cords or outlets with inadequate current carrying capacity
- It is recommended to use a surge protector. Power surges **ARE NOT** covered under the warranty for this product
- Only use 120VAC input, 60Hz, 12VDC, 3000mA output adaptor
- Do not handle adapter or sign with wet hands
- Disconnect power before handling or cleaning
- Do not spray liquid or aerosol cleaners directly onto sign. Use a dry or damp cloth for cleaning
- This product is fully assembled and ready to use. Do not attempt to disassemble or service as it will void the warranty
- Do not alter the plug or power supply cord in any way

To print your own custom design certificate, visit Artistic's FREE online gallery at:

<http://certificates.artisticofficeproducts.com>