


S-K9025LMA

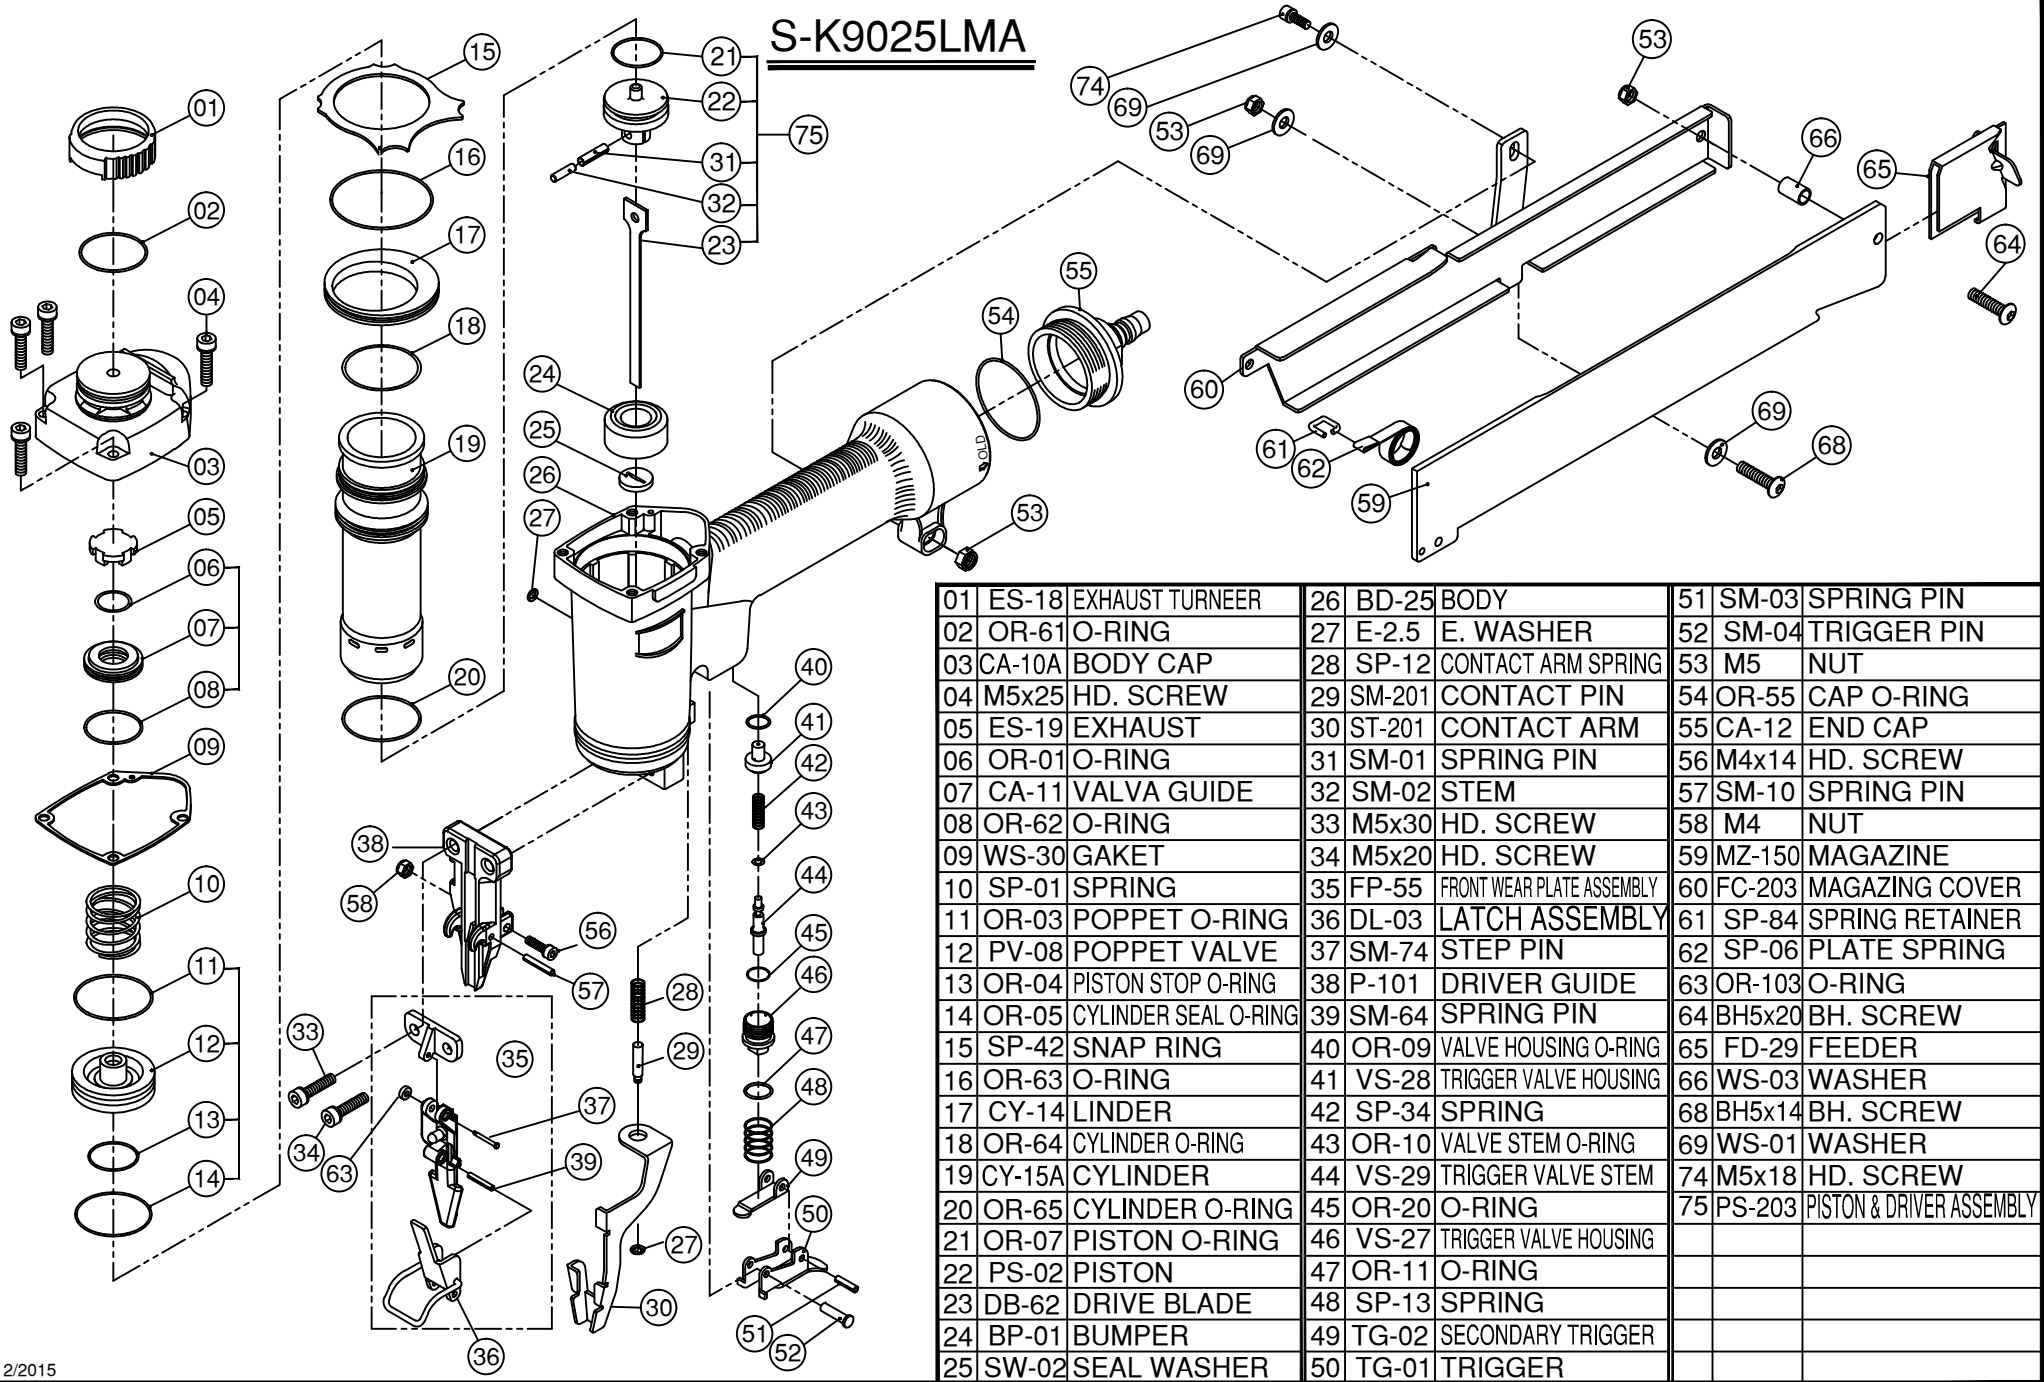

01	ES-18	EXHAUST TURNER	26	BD-25	BODY	51	SM-03	SPRING PIN
02	OR-61	O-RING	27	E-2.5	E. WASHER	52	SM-04	TRIGGER PIN
03	CA-10A	BODY CAP	28	SP-12	CONTACT ARM SPRING	53	M5	NUT
04	M5x25	HD. SCREW	29	SM-201	CONTACT PIN	54	OR-55	CAP O-RING
05	ES-19	EXHAUST	30	ST-201	CONTACT ARM	55	CA-12	END CAP
06	OR-01	O-RING	31	SM-01	SPRING PIN	56	M4x14	HD. SCREW
07	CA-11	VALVA GUIDE	32	SM-02	STEM	57	SM-10	SPRING PIN
08	OR-62	O-RING	33	M5x30	HD. SCREW	58	M4	NUT
09	WS-30	GAKET	34	M5x20	HD. SCREW	59	MZ-150	MAGAZINE
10	SP-01	SPRING	35	FP-55	FRONT WEAR PLATE ASSEMBLY	60	FC-203	MAGAZING COVER
11	OR-03	POPPET O-RING	36	DL-03	LATCH ASSEMBLY	61	SP-84	SPRING RETAINER
12	PV-08	POPPET VALVE	37	SM-74	STEP PIN	62	SP-06	PLATE SPRING
13	OR-04	PISTON STOP O-RING	38	P-101	DRIVER GUIDE	63	OR-103	O-RING
14	OR-05	CYLINDER SEAL O-RING	39	SM-64	SPRING PIN	64	BH5x20	BH. SCREW
15	SP-42	SNAP RING	40	OR-09	VALVE HOUSING O-RING	65	FD-29	FEEDER
16	OR-63	O-RING	41	VS-28	TRIGGER VALVE HOUSING	66	WS-03	WASHER
17	CY-14	LINDER	42	SP-34	SPRING	68	BH5x14	BH. SCREW
18	OR-64	CYLINDER O-RING	43	OR-10	VALVE STEM O-RING	69	WS-01	WASHER
19	CY-15A	CYLINDER	44	VS-29	TRIGGER VALVE STEM	74	M5x18	HD. SCREW
20	OR-65	CYLINDER O-RING	45	OR-20	O-RING	75	PS-203	PISTON & DRIVER ASSEMBLY
21	OR-07	PISTON O-RING	46	VS-27	TRIGGER VALVE HOUSING			
22	PS-02	PISTON	47	OR-11	O-RING			
23	DB-62	DRIVE BLADE	48	SP-13	SPRING			
24	BP-01	BUMPER	49	TG-02	SECONDARY TRIGGER			
25	SW-02	SEAL WASHER	50	TG-01	TRIGGER			