

How to connect to old CNC CRT monitor to LCD Monitor

This Retrofit Monitor is designed for replacing old CRT monitors for CNC. Custom wire adapter is included, so you can plug your existing video signal connector directly into our wire adapter. It had upgraded to our sunlight readable UB series LED kit. It will last 10 times longer than CCFL backlight. Easy to install, anyone can do it! It comes with a 1 year warranty.

Connecting to wire Adaptor:

Connect DB9 (9 pin) to our new retrofit LCD replacement monitor, Connect the other end to your existing signal cable, then the retrofit monitor will automatically detect and lock in that frequency.

Our newest version (V3) retrofit monitor is no need to change settings, such as adjusting H-Size, V-Size, V-position and H-position. Just plug and play! If the picture is not center, just press the "AUTO" button once, our retrofit monitor will automatically lock in. that's it!

Troubleshooting:

"No Signal" – Please double check the connections on video signal adapter both ends. Then disconnect DC jack and reconnect it back to retrofit Monitor.

Looking for technical assistance?

We love to help!

Please visit us online at

<https://www.lcdpart.com/pages/tech-support>