

## How to connect

Disconnect CCFL lamp wire harness from main board

Disconnect Screen wire harness and remove old LCD screen

Mount Direct Replacement LCD screen back to the same location

Connect Screen wire harness to the direct replacement LCD

Connect other end of wire adapter to main board

This Direct Replacement LCD screen included the following items:

- 1) LCD screen (it has upgraded to Sunlight Readable LED kit)
- 1) MS610UB LED driver
- 1) Wire adapter



MoniServ, Inc. | <http://lcdpart.com> | techsupport@lcdparts.net  
1600 Noriega Street | San Francisco | CA 94122 | 1-415-682-8685

Looking for technical assistance?

We love to help!

Please visit us online at

[http://store.lcdparts.net/tech-support\\_ep\\_45.html](http://store.lcdparts.net/tech-support_ep_45.html)

MoniServ, Inc. | <http://lcdpart.com> | techsupport@lcdparts.net  
1600 Noriega Street | San Francisco | CA 94122 | 1-415-682-8685