

Model #: 52325

Model #: 52323

Model #: 52321

Sweeper **BG**25[™]

Sweeper BG23[™]

Sweeper **BG**21[™]

Quick and easy assembly

- 1. Locate handle sections A, B, C, D.
 - A top handle section; handle grip
- **B** mid handle section; external threaded ends
- C mid handle section; internal threaded ends
- D bottom handle section; external threaded end & bottom threaded hole
- 2. Twist handle section B into A; C into B, and D into C. Twist sections until they fit tightly into one another. When handles no longer turn they are in place.



3. Lift the bail (threaded metal bar on the top of the sweeper) to a vertical position. Screw sweeper handle all the way down the "shoulder" of the threaded metal bail. Failure to do this could cause the bail to break.



To empty dustpan

Hold sweeper over wastebasket. Press gently on rear of dustpan. Pan will open and debris will fall out.



Proper care and cleaning

Models 52325 & 52323

Clean strings, hair and other debris from the brush, paying special attention to the brush ends. Cleaning can be performed while the brush is in or out of the sweeper.



Model 52321 only

Paddles can be removed and washed with warm soapy water or washed in a dishwasher. Thoroughly dry before reinserting the brush.