

Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters (<i>Excluding Counter Displays and Encoders</i>) Label Dispensers (<i>Excluding Counter Displays</i>) Label Slitters (<i>Mechanical Parts Only - excluding Counter Displays</i>) Reel-to-Reel Machines (<i>Excluding Counter Displays and Encoders</i>) Print Mechanisms (<i>Excluding Counter Displays and Encoders</i>) Bottle Label Applicators (<i>Excluding Polyurethane Rollers</i>) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

LABELMATE USA LLC

12A Sunset Way, Henderson, NV 89014 USA

(702) 435-8535 FAX (702) 435-8536

Toll-Free (877) 833-7149 in USA!

support@labelmateusa.com

www.labelmateusa.com



LABELMATE USA LLC

ACH-CAT

Adjustable Core Holder for CAT-3 Label Rewinder



ACH-CAT installed on the CAT-3 Rewinder

- Three convenient Lock Levers
- Use any Core Size 1" to 4" i.d.
(25-mm to 100-mm)
- Core Widths up to 6" (152+ mm)

Remove all parts from shipping container and verify contents.

Package Contents

- ACH-CAT Adjustable Core Holder
- Allen Wrench
- User Manual (this document)

Retain the Shipping Container and Packaging for Storage and Transport.

• **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •



WARNING

**This product is for indoor use only.
Not for use in wet locations.**



SET-UP

The **ACH** Adjustable Core Holder is supplied fully assembled, ready to use. An Allen Wrench is also included.

___ If your LABELMATE Label Rewinder or Label Unwinder has a standard Fin-style Core Holder on it or a Quick-Chuck Core Holder, loosen the set screw, remove the Core Holder and set it aside. These Core Holders are not used with the Adjustable Core Holder.

___ Slide the Hub of the **ACH** over the motor Shaft of the Label Rewinder or Unwinder. Position the Hub so there is a gap between the **ACH** Hub and the Rewinder or Unwinder Drive Unit case.

___ Using the supplied Allen Wrench, tighten the set screw in the Hub onto the **flat side** of the motor Shaft until it is snug.

Your **ACH** is now ready for use.

USE

Use for Unwinding or Rewinding Labels

1. Loosen the three- (3) Lock Levers on the back of the **ACH** Flange Plate. **NOTE: If needed, the Locking Levers can be repositioned by pulling straight up on the Lever (away from the Flange Plate) and rotating it. When released, the Lever will re-engage.**
2. Grasp the front Flange Plate with one hand and the rear Flange Plate with the other. Notice that the rear Flange Plate has convenient notches for your thumb.
3. Rotate the Plates in opposite directions until the three- (3) Core Fingers move to the center of the ACH next to each other.
4. Slide an empty cardboard core **only partway** (about 2" or 50-mm) over the Fingers.
5. Now rotate the Flange Plates in opposite directions to expand the Fingers against the inside of the cardboard core. While you

hold the Flanges so the Fingers are against the inside of the Core, rotate one of the Locking Levers clockwise until it is snug. **DO NOT OVER TIGHTEN.**

6. Move the other two (2) Locking Levers to the LOCK position. **DO NOT OVER TIGHTEN.**
7. Now slide the core all the way on up against the inside Flange. If the Core is too tight, loosen the Lock Levers and try again sliding the Core a little further over the Fingers to yield less tightness.
8. Refer to your CAT-3 User Manual if needed for operation of the Rewinder itself.
9. When rewinding is finished, place the Rewinder (DIRECTION) switch in the center, OFF, position.
10. Slide the cardboard core and the label roll off the **ACH**. You usually will not need to loosen the three- (3) Locking Levers unless you want to use a different diameter core or adjust the tightness of the fit.

Note On Using Multiple Cores For Slitting – Because the Fingers of the **ACH** can flex, the **ACH** is not suitable for slitting applications or for multiple cores. The outer cores will be loose, resulting in slipping. Instead, for multiple cores use a LABELMATE "Quick-Chuck"[™] that is designed to uniformly grip cores across its full width.

MAINTENANCE

The **ACH-CAT** Adjustable Core Holder requires no maintenance.