


ARRANGE ALIGNMENT PLATES

1. Position the Alignment Plates adjacent to each other with the shaped sides facing inward.




POSITION PRINTER

2. Set the printer on top of the Rewind Plate, inserting the two metal printer pegs into the holes in the Plate.
3. Slide the Unwind Plate inward beneath the printer until it abuts snugly against the printer feet.

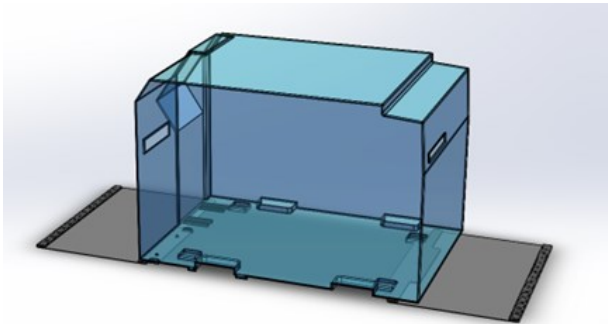

POSITION WINDERS

4. Place Winders firmly in position next to the outer bars of the Alignment Plates.

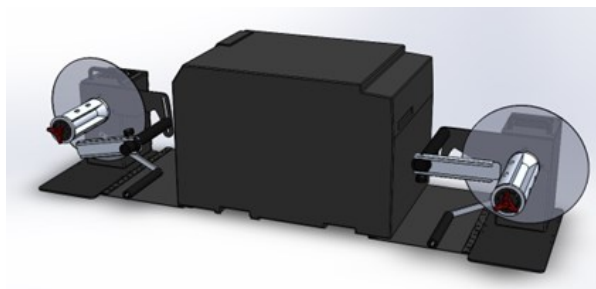

5. Align the Winders with the printer by sliding them forward/backward as necessary until the rear base of the Winders is positioned at the 1.75" mark of the Alignment Plates.

