

### Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters ( <i>Excluding Counter Displays and Encoders</i> ) Label Dispensers ( <i>Excluding Counter Displays</i> ) Label Slitters ( <i>Mechanical Parts Only - excluding Counter Displays</i> ) Reel-to-Reel Machines ( <i>Excluding Counter Displays and Encoders</i> ) Print Mechanisms ( <i>Excluding Counter Displays and Encoders</i> ) Bottle Label Applicators ( <i>Excluding Polyurethane Rollers</i> ) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

**LABELMATE USA LLC**

**12A Sunset Way, Henderson, NV 89014 USA**

**(702) 435-8535 FAX (702) 435-8536**

**Toll-Free (877) 833-7149 in USA!**

support@labelmateusa.com

www.labelmateusa.com



**LABELMATE USA LLC**

***C-100 / C-200***

***Label Counters for use  
with CAT-3 Label Rewinders***



*C-100 Label Counter*

- *Digital Circuitry for Accuracy and Repeatability*
- *Preset Count—Up or Down*
- *Stops Rewinder when Count is reached.*

***Remove all parts from shipping container and verify contents.***

### **Package Contents**

- C-100 (6"-width") or C-200 (10"-width) Counter Unit
- AC-DC Adapter (Power Supply Module)
- 3.5 mm External Halt Cable
- User Manual (this document)

***Retain the Shipping Container and Packaging for Storage and Transport.***

**• KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE •**



## WARNING

**This product is for indoor use only.  
Not for use in wet locations.**



### PC-1 PRESET COUNTER SET-UP

Verify that the AC/DC Adaptor “**VOLT CHANGE SW.**” is set to “9” and plug the Adaptor into a suitable AC Power Outlet. Plug the Cord on the AC/DC Adaptor into the Power Input Jack on the bottom of the Counter Display Module.

Plug the Control Cable (with 3.5mm plugs at each end) between the Output Jack on the bottom of the Counter Display Module and the “EXTERNAL HALT CONTROL” jack on the CAT-3 Label Rewinder.

The Counter is pre-programmed as a Preset Count-Up Counter. Press each of the 6-digits for the count desired. This is the number of labels you wish to pass through the Label Sensor before the Counter issues a “HALT” command to the CAT-3 Label Rewinder.

Pull a short strip of labels back and forth through the Label Sensor Gap and observe the count on the Counter increasing. When the preset number of labels is reached, the PC-1 Counter will issue a Halt Command for the CAT-3 Label Rewinder to stop. Pressing “RESET” will reset the count and restart the CAT-3.

See the included detailed manual for the Pre-set Counter itself for other Counter options.

### COUNTER USE

Place the C-100 or C-200 Label Counter so that it is perpendicular to the label web.

Observe the Paper Path Label on the Counter: Feed the label web under the metal Rotating Paper Guide and over the Nylon Fixed Paper Guide.

Adjust the position of the rings on the Rotating and Fixed Paper Guides to the width of your label web. Only finger tighten the screws. The labels must pass through the black sensor slot between the round Paper Guides.

Affix the label web to the label rewind core on the Label Rewinder.

The Counter will count the number of labels passing through the sensor air gap.

If you observe erratic counting, clean the Optical Sensor with isopropyl alcohol.

### PHOTOCELL ADJUSTMENT:

The sensitivity of the Photocell that detects the Labels and triggers the Counter Display should be calibrated for the labels being counted. Here's how: Place a Label Liner ONLY (no label) in the Label Sensor Gap. Using a small flat-bladed screwdriver, adjust the Photocell Adjust Control until the green Photocell Adjust LED illuminates.

COUNTER BOX  
SIDE VIEW



### MAINTENANCE

The C-200 and C-100 Label Counters require no maintenance.