

Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters (<i>Excluding Counter Displays and Encoders</i>) Label Dispensers (<i>Excluding Counter Displays</i>) Label Slitters (<i>Mechanical Parts Only - excluding Counter Displays</i>) Reel-to-Reel Machines (<i>Excluding Counter Displays and Encoders</i>) Print Mechanisms (<i>Excluding Counter Displays and Encoders</i>) Bottle Label Applicators (<i>Excluding Polyurethane Rollers</i>) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

LABELMATE USA LLC

12A Sunset Way, Henderson, NV 89014 USA

(702) 435-8535 FAX (702) 435-8536

Toll-Free (877) 833-7149 in USA!

support@labelmateusa.com

www.labelmateusa.com



LABELMATE USA LLC

UCAT-S

Economy Label Unwinder with Fixed Braking



UCAT-S Economy Unwinder

- Low-cost economy Unwinder
- Limited Fixed Braking
- Standard 3" (76-mm) Core Holder
- Non-powered

Remove all parts from shipping container and verify contents.

Package Contents

- User Manual (this document)
- UCAT-S Unit
- 3 Metal Fins
- 6 Screws
- Plastic Flange with Nylon Hub
- Allen Wrench

Retain the Shipping Container and Packaging for Storage and Transport.

• KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE •



WARNING

**This product is for indoor use only.
Not for use in wet locations.**



SET-UP:

1. Locate the Plastic Flange Plate (disk) that has a white Nylon hub with an Allen Screw.
2. Slide the Flange Plate onto the brass Shaft, with the Hub facing out, away from the UCAT-S Chassis.
3. Install the 3 metal Fins onto the Shaft. Secure each Fin with 2 screws provided.
4. Position the Plastic Flange Plate even with the inside end of the Shaft so there is clearance between the Flange and the Chassis.
5. Using the provided Allen wrench, tighten the Allen screw in the Hub until it is snug.
6. Set the unit in place near the label entrance path to your printer.

Your UCAT-S is now ready for use.

LABEL UNWINDING FOR PRINTING:

CAUTION: AVOID ACCIDENTS. THE UCAT-S BY ITSELF WEIGHS APPROXIMATELY 14 POUNDS (6.4 KG), SO CHOOSE ONLY A STURDY SURFACE ON WHICH TO SET THE UCAT-S.

The UCAT-S is bi-directional. It can unwind labels in either direction.

1. Slide the roll of labels to be unwound onto the shaft of the UCAT-S and all the way up against the Plastic Flange Plate.
2. Thread the labels into the printer as required.
3. Begin the printing operation and observe that the labels are feeding correctly into your printer. If necessary adjust the position of the UCAT-S so the alignment with the printer is appropriate to correctly feed the labels.

LABEL UNWINDING FOR LABEL SLITTING:

The UCAT-S Label Rewinder has only limited fixed braking and is therefore not ideal for label slitting operations. For label slitting use a LABELMATE UCAT-1 Unwinder or one of LABELMATE's powered Unwinders or Rewinders to provide correct web tensioning for slitting.

MAINTENANCE:

The UCAT-S requires no maintenance.