

ARENA 6000

Wired Soundbar with Subwoofer

USER MANUAL



For support, visit us at www.mulo.in

General Information

Safety Instructions

Please read carefully the Safety Mark on the Back side



This mark is intended to alert the users from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons



This mark is intended to alert the user for important operating and servicing instruction

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Please unplug the system from the AC outlet when unused for a long time
- Do not open the cover or back panel to avoid electronic shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Sound Bar.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any sources of danger on the Bar (e.g. liquid filled objects, lighted candles).
- Do not install near heat sources.


Do not block any ventilation openings

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 100cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Bar becomes hot. Do not touch it.

Care of the cabinet

 Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.


Speaker Placement & Connections

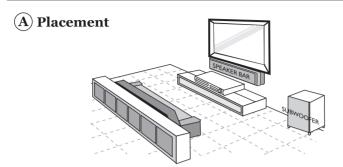


- Place Speaker Bar on top of a table or mount it on the wall.
- Place it at a height that is closest to the listening ear-level.
- Position Speaker Bar so that it is directly parallel to the listening area.
- Place the subwoofer at the corner of the room or at least one meter away from the TV.

(B) Wall Mounting

 Get ready with wall mounting arrangement using provided accessories.



C Connections

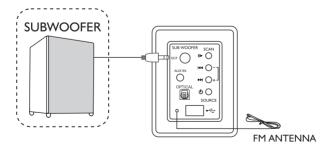


Note * Placement of subwoofer is very important for low frequency response.


* Do not keep any object below subwoofer.

Input Connections


(A) Connect to TV with Optical

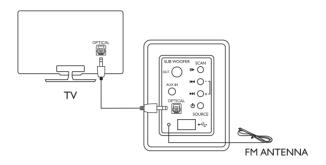

(B) Connect to TV with AUX

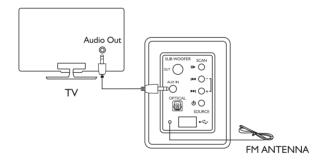

(C) Connect from USB

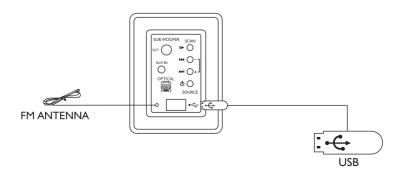

(D) Connect with Bluetooth

- I. Select Source
- 2. Display Shown BLU (Flashing)
- 3. Pair Bluetooth device with name ARENA 6000
- 4. Stop flashing once Bluetooth device is paired.

Now your system is ready to play wireless. Control all function from your Bluetooth device eg. $\blacksquare \blacktriangleleft$, $\blacktriangleright \blacksquare$,


Button	utton Action	
– Volume	Volume Decrease	
+Volume	Volume Increase	
Mute	To Mute / Unmute Sound	

Play from Radio

- I. Press source key to select FM
- 2. Display shows FM frequency (eg. 104.0)
- 3. Press following buttons to control play


Button	Action	
 	Search for a radio station	
- PR + PR	Select a preset radio station	
SCAN	Press to auto scan the radio station	
Numeric Keys	Select preset directly (eg. for 104.6 press 1046)	

Side Panel

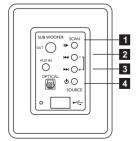

No.	Key	Short Press	Long Press
	►II	Play/Pause	Scan (Radio Mode)
	 44	Previous - Volume	
	>>	Next	+ Volume
	Ф	Ů Mode ST / BY	

Remote Controller

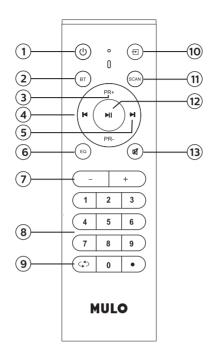

1 POWER

Switches system ON AND STANDBY

- 2 BT
- Direct go to BT mode
- (3) PR /+
 Up and Down preset channel in FM
- (4) PREVIOUS ►
 - (a) Play previous file in USB
 - (b) Long press song will rewind
 - (c) Tunning down in radio mode
- (5) NEXT ►
 - (a) Play next file in USB
 - (b) Long press song will fast forward
 - (c) Tunning up in radio mode
- 6 EQUALIZER

Select preset sound modes

(7) MAIN VOLUME (- +)

Adjusts volume of speakers.

8 DIGITS

Press number key to play directly MP3 files (Eg. To play 57th song press 5 then 7) In radio mode select preset station directly

9 REPEAT

Repeats a track or the entire USB

(10) SOURCE

To select desired input USB / FM / AUX / BLUETOOTH / OPTICAL

(11) Scan

Auto Scan in Radio Mode

12) PP

(a) Play and Pause in USB

(13) **MUTE**

Turns off speaker sound

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair.

Problem	Solution
No power.	Check if the AC power cord is properly inserted into the AC mains socket.
No sound or distorted sound.	Adjust the volume. Select the correct source to choose the equipment that you want to hear through the System.
The remote control does not function Properly.	 Reduce the distance between the remote control and the system. Replace the batteries with new ones. Point the remote control directly toward the IR sensor (located on front panel of the Soundbar). Check that the batteries are loaded correctly. Switch off system for 30 seconds and then restart
Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference. Check power supply voltage and consult electrician
The content of the USB flash drive cannot be read	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS)
Slow operation of the USB Flash drive	Large file size of high memory USB flash drive takes longer time to read and play.
Cannot detect USB flash drive	Take out USB drive insert it again properly.
FM not properly tuned	Match with local frequency
FM reception not good	While listening radio turn off TV or other radiation source. Extend antenna wire
Bluetooth	Reduce the distance between system and your device. Re-Pair the device.
Optical	Re-check the connection and wire.

Warranty

ARENA 6000 Sound Bar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase. Should a defect develop during the period of warranty, please contact us in our customer-care number +91 8777281759 (available in Whatsapp also) or e-mail customercare@mulo.in for support and also fill the warranty form in our website www.mulo.in.

The warranty is not valid in case:

- 1. The apparatus is not used according to this manual.
- 2. Defects are caused by improper or reckless use.
- 3. Any repairs are done by persons other than MULO Authorised service person.
- 4. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

For support, visit us at www.mulo.in