

Supreme Pump Filter- Replacement Flushing Instructions:



1. Remove Supreme filter and pre-filter.



2. Remove ALL stickers from Supreme filter and pre-filter.



3. Thread the flush bulb assembly to Supreme filter.



4. Attach flush bulb assembly to the sink faucet, slowly turn on water until a thin stream of water begins to flow. Flush for five minutes.



5. Turn off water, remove wing-nut flush bulb assembly, and re-install filter into your pump.

Note: Wing nut flush bulb is included in your original pump package.

Supreme Pump Filter- Replacement Flushing Instructions:



1. Remove Supreme filter and pre-filter.



2. Remove ALL stickers from Supreme filter and pre-filter.



3. Thread the flush bulb assembly to Supreme filter.



4. Attach flush bulb assembly to the sink faucet, slowly turn on water until a thin stream of water begins to flow. Flush for five minutes.



5. Turn off water, remove wing-nut flush bulb assembly, and re-install filter into your pump.

Note: Wing nut flush bulb is included in your original pump package.