

BARCOOL[®]

www.subcold.com

BAR SERIES

PLEASE READ & RETAIN USER MANUAL FOR FUTURE REFERENCE

USER MANUAL

Contents

Important Safety Warnings	3-4
Intended Usage & Environment	4-5
Operating Instructions	5-6
Moving & Handling Your Appliance	7
Maintenance & Defrost	7-8
Contamination Prevention Guidelines	8
Troubleshooting Guide	9-10
Product Specification	11
EPREL	12
Warranty	12
Environmental Friendly Disposal	12

Important Safety Warnings

- **Caution When Positioning:** Ensure the appliance's power cable is neither trapped nor damaged during positioning.
- **Power Socket:** Refrain from positioning portable power sockets or cables at the rear of the appliance.
- **Ventilation Clearance Warning:** Maintain adequate ventilation openings around the appliance; it should remain unobstructed without any door coverings.
- **Refrigerant Circuit Warning:** Avoid damaging the refrigerant circuit.
- **Defrosting Caution:** Use only recommended methods to defrost; sharp objects or other tools may cause permanent damage.
- **Electrical Appliance Use Warning:** Refrain from using electrical appliances inside the fridge unless manufacturer recommended.
- **Disposal Precautions:** Before disposing of the appliance, remove doors and leave shelves in place.
- **Flammable Materials Caution:** Never allow children to interact with the appliance, avoid cleaning with flammable liquids, and keep flammable materials away from the appliance.
- **Cleaning Instructions:** Use non-abrasive cleaners or soapy water for cleaning; avoid solvents.
- **Fire Hazard Symbol:** Symbol ISO 7010 W021 indicates a fire hazard. 
- **Ventilation Clearance:** Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- **Door Openings:** Minimise the time the door is open to maintain a stable temperature.
- **General Installation Guidelines:** Avoid heat sources and direct sunlight, install on a flat, clean, stable surface, and refrain from placing other electrical equipment on the appliance.
- **Damp Environment Warning:** Ensure the appliance is not placed in damp areas.
- **Perishable Food Storage:** Avoid storing perishable food in this appliance for extended periods of time, as the indoor temperature may not be sufficiently cold for proper storage.
- **Circuitry and Power Plug:**
 - The circuitry for the refrigerator must be isolated. The area of cross section of wire must be larger than 0.75mm.
 - The power plug should have its own socket, grounded, as an adapter may cause the socket to overheat.
 - The voltage and frequency of this product should be 220-240V;50Hz. Contact a local qualified electrician or retailer in case of electrical cord damage.
 - Always disconnect the power by pulling the power plug out of the socket directly and not by the cord.

Important Safety Warnings

- **Supervision and Usage:** Persons with low physical, sensory, and mental capabilities (including children below 8 years) are not advised to use this appliance unless they are well supervised/instructed by a safety person. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance should not be done by children without supervision.
- **Ventilation Opening:** Ensure the ventilation opening in the appliance enclosure is clear of obstruction.
- **Disposal Instructions:** Before disposing of your old refrigerator or freezer, take off the doors and leave the shelves in place to prevent easy access for children.
- **Prohibited Storage:** Do not store explosive devices/substances such as aerosol cans with a flammable propellant in the appliance.
- **Intended Use:** This appliance is intended for household and similar applications.
- **Use of Electrical Appliance:** Do not use electrical appliances inside the food storage compartments of the appliance unless recommended by the manufacturer.
- **Replacement of Faulty Parts:** All affected or faulty parts (including the light) must be changed by a certified technician.
- **Supply Cord Replacement:** To avoid hazards, the supply cord must always be replaced by the manufacturer, its service agent, or similarly a certified/qualified person when damaged.
- **Built-in Appliance Use:** This refrigerating appliance is not intended to be used as a built-in appliance.

Intended Usage & Environment

- **Intended Use and Temperature Range:** This appliance is specifically designed for indoor use within households and similar applications, including non-retail environments such as staff kitchens in shops, offices, and other working environments, hotels, motels, residential settings, and bed and breakfast establishments. It operates optimally within a room temperature range of 16°C to 32°C.
- **Age Recommendation and Supervision:** This appliance is intended for use by individuals aged 8 years or older. Individuals with reduced physical, sensory, or mental abilities may use this item, provided they are under appropriate supervision. Cleaning and user maintenance activities should be overseen. It is crucial to provide clear instructions on safe usage and address any associated risks.
- **Child Safety Warning:** Refrain from using this product in areas accessible to children, and do not permit unsupervised use by children. The appliance is not designed for play by children.

Intended Usage & Environment

- Built-in Use: This appliance is not intended for built-in use.
- Food Freezing Warning: It is not suitable for freezing food items.

Operating Instructions

Before Putting Your Appliance Into Use

- Remove all inner and outer packaging components, including adhesive transport tapes.
- Verify that none of the following are missing:
 - Removable Shelves
 - Operating Manual
 - Set of 2 Keys
- Allow the device to stand upright for a minimum of 2 hours before connecting it to a power supply. This minimises the risk of refrigeration system malfunction due to transport & handling.
- Clean the inner surfaces of the unit with a soft cloth and warm, soapy water. Avoid using any abrasive cleaners or solvents.
- Place the unit on a stable surface that can withstand its weight, making sure to adjust the front feet for stability. Ensure the surface is firm, flat, and level to reduce noise and vibration. Tighten the adjustable legs to the floor and tilt the appliance slightly backward to ensure the door closes tightly.
- Install the appliance away from direct sunlight and heat sources to prevent damage to the coating and reduce power consumption. Extreme temperatures can affect proper operation.
- Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- Do not install the unit in unheated buildings, outbuildings, or garages.
- This unit is for indoor use only.
- Before connecting the unit to the power supply, ensure the drip tray is properly positioned.

Caution: Keep the unit away from any substances that may cause combustion.

Operating Instructions

Setting the Temperature Control

The refrigerator's temperature can be manually adjusted using the control dial. A higher number on the thermostat corresponds to a colder inside temperature.


Your unit features a single control dial for regulating the temperature in the compartment. You'll find the temperature control dial at the top interior of the appliance.

To regulate the internal temperature, adjust the control knob based on the ambient temperature or intended use.

The temperature control range spans from position "0" to "3".

To switch off the appliance, turn the dial to "0."

Temperature range for your reference: 5~15°C.

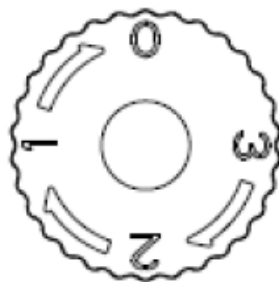

Note

Turning the dial to "0" stops the cooling cycle but does not disconnect the unit's power.

If the unit is unplugged or turned off, wait for 3 to 5 minutes before restarting to avoid the unit malfunctioning.

Door Reversal

1. Use a flathead screwdriver to gently prise up and slide forward the top hinge cover on the right side, removing it.
2. Utilise a battery drill with a 'Phillips head' to unscrew the three screws securing the top hinge, then lift off the hinge and set it aside.
3. Carefully lift the door straight upwards and place it to one side.
4. Lay the fridge on its back to access the three screws holding the bottom hinge. Remove these screws with the battery drill.
5. Attach the bottom hinge to the opposite side, using the same hole pattern as before.
6. Place the door back onto the bottom hinge pin.
7. Before re-fitting the top hinge on the fridge's top, remove the blanking plate.
8. Ensure the door is level and straight, then use the battery drill to securely tighten the screws back into place.
9. Return the fridge to an upright position and wait 2-3 hours before switching it back on.

Moving & Handling Your Appliance

How to Safely Disconnect Your Fridge

Take note of the position of each accessory when packing the appliance.

When re-packing for transportation, ensure everything is securely packed and accessories are securely in place.

Avoid lifting or pulling the door or handle during transport to prevent damage.

Allow a minimum of 2 hours standing time before reconnecting the appliance to power.

Keep the appliance tilted at less than a 45-degree angle from the vertical direction while moving to prevent damage. Minimise exposure to strong vibrations during transportation.

Maintenance & Defrost

- **Preparation for Maintenance**

Disconnect the appliance from the power source and remove all contents.

- **Interior Maintenance:**

Clean the inside of the appliance with clean water and a non-hazardous cleaner, then wipe it dry with a cloth. Avoid using any abrasives or solvents during cleaning.

- **Door Gasket Maintenance:**

Thoroughly clean the door gaskets to prevent potential damage and increase operational life.

- **Outer Maintenance:**

Remove dust using a dry, clean cloth to maintain the external cleanliness of the appliance.

Defrosting Process:

- Excessive frost accumulation can impact the appliance's refrigeration efficiency and escalate energy consumption. Defrosting becomes necessary when the frost reaches a thickness of 5 mm.

Manual defrosting involves the following steps:

- Remove all contents from the appliance.
- Take out the shelves.
- Unplug the power cable.
- Open the doors and wait for the natural thawing process.
- Wipe away the defrost water with a dry cloth.

Maintenance & Defrost

Caution: Do not employ alternative equipment or methods to aid the defrosting process, as it may cause damage to the cooling system.

Note: If there is excessive ice, the drip tray may overflow with surplus water. Wipe with dry cloths/ paper towels.

Regular Cleaning and Upkeep:

This appliance requires regular upkeep and cleaning for optimal performance. For safety, always disconnect the plug from the main power source before initiating cleaning procedures.

Contamination Prevention Guidelines

To prevent food contamination and ensure safe usage of your appliance, follow these guidelines:

- Avoid prolonged door openings to prevent a significant increase in internal temperature, which can lead to food spoilage.
- Regularly clean surfaces that come in contact with food, such as shelves, drawers, and door seals, using a mild detergent and warm water.
- Ensure accessible drains are also kept clean to prevent the build-up of dirt and bacteria.

If the appliance will be unused for an extended period, take the following steps:

- Switch off the fridge.
- Defrost the appliance if necessary (refer to page 7).
- Clean and dry the interior thoroughly.
- Leave the door open slightly to allow air circulation and prevent the growth of mold and mildew.
- Refrain from storing explosive substances, such as aerosol cans with flammable propellants, in the appliance to avoid potential hazards.
- In the event of a damaged power cable, only a local qualified electrician or retailer should carry out replacement to mitigate potential safety hazards.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
The appliance does not work	Ensure proper connection. Check if the circuit-breaker is tripped or if the fuse is blown. Verify the power socket by connecting another electrical device. Check the control dial is not set to '0'.
The appliance is not cold enough	Adjust the temperature setting. In high ambient temperatures, consider setting the fridge to a colder temperature. Limit frequent door openings. Ensure the door is fully closed and the seal is positioned correctly. Allow sufficient space around the fridge for proper ventilation. If ice is present conduct a manual defrost.
The appliance operates continuously	Ensure ambient room temperature is within the operating range. Reduce the number of items inside. Minimise door openings. Ensure the door is completely closed - confirm the proper positioning of the door seal. Check/adjust the temperature control setting. Ensure sufficient ventilation space.
The light doesn't work	Check the appliance is connected to a power supply. The circuit-breaker is tripped, or a fuse is blown. The LED lighting may need replacing. Check the light switch button is not at the "OFF" position.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
Vibrations / The appliance seems to be making too much noise.	Ensure the appliance is leveled correctly and adjust feet if necessary. Make sure to properly position the shelves of the appliance within their grooves to minimise noise.
The door does not close properly	Ensure the appliance is leveled correctly and adjust feet if necessary. Adjust shelves or contents that may obstruct proper door closure. Ensure lock & locking plate are in the correct position.
Water under the device	Check for correct water collection in the drip tray at the back. Confirm the drip tray is in place and empty it as required. Check the drip tray is not damaged/cracked. If the appliance is disconnected from the power supply to perform defrost the drip tray may overflow with excess water.

Product Specification

Model Number	BAR25LED	BAR30LED	BAR40LED	BAR50LED
Colours	Black	Black	Black	Black
Cooling System	Thermoelectric	Thermoelectric	Thermoelectric	Thermoelectric
Temperature Range	5°C-15°C	5°C-15°C	5°C-15°C	5°C-15°C
Climate Class	N	N	N	N
Net Volume	19L	24L	33L	40L
Energy Class	E	E	F	G
Noise (dB)	22dB	22dB	25dB	23dB
External Dimensions (WxDxH)	402x350x444 (mm)	380x435x465 (mm)	402x431x546 (mm)	402x482x545 (mm)
Internal Dimensions (WxDxH)	295x170x325 (mm)	260x260x343 (mm)	300x250x410 (mm)	290x305x428 (mm)
Packing Dimensions (WxDxH)	480x430x500 (mm)	460x515x545 (mm)	485x510x625 (mm)	483x555x620 (mm)
Gross Weight	13.2kg	13.4kg	15kg	16.7kg
Net Weight	10.4kg	10.7kg	11.7kg	13.5kg
No. of Shelf	1	2	2	2
Door Material	Foam/Metal/Plastic	Foam/Metal/Plastic	Foam/Metal/Plastic	Foam/Metal/Plastic
Lighting (W)	0.5W	0.5W	0.5W	0.5W
Input Power (W)	58W	58W	58W	58W
Refrigerant gas	R600a	R600a	R600a	R600a
Refrigerant grams	25g	25g	25g	25g
Lock and Key	Yes	Yes	Yes	Yes
Certification	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH	CE, ROHS, ERP, UKCA, REACH
Plugs included	British Standard	British Standard	British Standard	British Standard

EPREL

The appliance's actual consumption is influenced by its usage and location. Please note that this appliance is specifically designed for non-perishable storage. For detailed model information, refer to the product database outlined in Regulation (EU) 2019/2016, accessible via the following link or by scanning the QR Codes below:

<https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019>



BAR25LED



BAR30LED



BAR40LED



BAR50LED

Warranty Registration

To register your product warranty, kindly visit www.subcold.com/pages/product-registration and fill out the online form.

Environmental Friendly Disposal



To avoid any harm to the environment or human health caused by improper disposal of electrical waste, recycle the device responsibly to promote the reuse of material resources. Disposal must be done safely at public collection points provided for this purpose.

Older refrigerators may contain CFCs that destroy the ozone layer; contact your nearest waste treatment centre for more details on proper disposal procedures.



sales@subcold.com



01506 440557



[@subcoldltd](https://www.facebook.com/subcoldltd)



[@subcold_official](https://www.instagram.com/subcold_official)

BARCOOL[®]

Subcold Ltd.

28/2 Firth Road
Houstoun Industrial Estate
Livingston, EH54 5DJ, United Kingdom.
www.subcold.com

Authorised Representative

Authorised Rep Compliance Ltd.
Ground Floor, 71 Lower Baggot Street
Dublin, D02 P593, Ireland.
www.arccompliance.com