

# tersano®

## iClean® mini Cartridges

### What is an iClean mini Cartridge?

Every iClean mini needs a cartridge. They are installed in the base of the device and sit in the water-holding reservoir. They filter your tap water by removing impurities to optimize cleaning performance.



[Shop Now](#)

### What Does the Cartridge Do?

#### Conditions Your Tap Water

The iClean mini cartridge pre-treats tap water by removing fine minerals, ensuring you get the maximum amount of ozone in every spray.

#### Protects Your Device

The cartridge protects your iClean mini's interior cell, ensuring your device performs like-new for years.

### When is it Time to Replace the Cartridge?

#### General Guidelines

iClean mini cartridges come in a convenient four-pack to grant you up to one year of uninterrupted cleaning.

As a general rule of thumb, replace your iClean mini's cartridge once every three months (or once every four liters of solution).

For questions, please get in touch with Tersano directly at: E: [wecare@tersano.com](mailto:wecare@tersano.com) P: 1(800)-808-1723

# tersano®

## iClean® mini Cartridges

### Cartridge Color Codes

The easiest way to tell if your iClean mini is due for a fresh cartridge is to inspect the color.



#### Purple to Amber

If your new cartridge is purple, it will turn amber when it's time for a replacement.



*Purple to Amber*



#### Orange to Red

If your new cartridge is orange, it will turn red when it's time for a replacement.



*Orange to Red*



## How to Replace the Cartridge

### Replace your iClean mini's Cartridge in Seconds!



Remove the iClean mini's base by turning it clockwise and detach.



Pull down gently on the cartridge until it disengages.



Attach your new cartridge onto the nob by sliding it upward.