#### Use Instruction

#### Please read this instruction carefully before using this furniture. To extend its longevity, please use and maintain it properly.

#### Things of notice:

- Don't put furniture directly under sunlight or near AC vent or radiator to avoid color fading, shedding edge band or even distortion.
- Don't tilt desk or chair to avoid broken feet or loose connection.
- Don't put hot or icy objects directly on it to avoid color change or indelible marks.
- Don't push items on furniture directly to avoid scratches.
- Lift the furniture for about 10 mm off the ground when it has to be removed as a whole to avoid possible damages to the bottom and connector part.
- It is suggested to put a soft cloth underneath if you want to lay heavy or hard items on the furniture.
- Use a soft cotton cloth or feather duster for cleaning and maintenance.
- Use detergent specially designed for furniture instead of chemical detergent or acid liquid for lampblack and other stain removal.

#### Simple malfunction analysis and solution

#### Remove stains


- Paper mark: Immerse paper in salad oil and wait several minutes. Wipe the furniture with furniture-used steel wool along the grain and then polish it.
- Food stain, Stain of tea, vegetable, fruit, butter leaves slight traces on the surface and should be wiped out immediately.
- Paint: For water, based paint, use soft and wet cloth to wipe it; for oil paint, let it dry up naturally and gently shave it with a blunt spatula or hard cards
- Nail polish/nail polish remover: As chemical solvent, they should be wiped immediately.
- Alcohol: If perfume/cocktail/medicine liquid spills out, let them dry up naturally.
- Chewing gum: Shave it with blunt spatula or hard card after cooling it with ice bag or cold water.
- Ball, pen/ink mark: Use soft eraser to rub it or sprinkle several drips of water. Avoid chemical solvent with alcohol or high corrosive ability.
- Suggestion: Furniture, used steel wool can be bought at building material & hardware stores. (Don't use kitchen steel wool).
- Note: The above suggestions may bring different results due to different operations of each person. It would be better if you can test it in inconspicuous area first.
- There may be cases as listed in the following list after long time of using. Please refer to correspondent measures.

 
Malfunction	Reason	Solution	
the banding edge is loose	ambient environment	use hairdryer or iron to melt the glue and stick it at once	
drawers can't be opened smoothly	lubricating oil is drying up	remove the drawer out, add lubricating oil or wax to the slide	
uneven desktop	the adjustment leg is not properly adjusted	adjust it accordingly	
sliding door slides out of the side panel	sliding door positioning parts are loosing or sliding door top bead slides down	return the sliding door positioning parts and sliding door top beads to original positions	

 
#### Assembly instruction:

- Please determine the location of your furniture before assembly to avoid moving them for a large distance after being assembled.
- Do not place your furniture in dark and damp or hot and dry environment.
- Please check the direction of each part when unpacking them before installation.
- Please check the stability of the furniture after installation. Shake your furniture gently to confirm whether it is level with the ground or whether the screw is tight.
- Please install the product patiently. Make sure each part is in the right position. Furniture is easy to assemble, but it needs patience and care to make every part in place.
- Please check the number of packaging bags, view the product installation manual and verify the product structure
- Please keep the furniture open for a period of time to release residual painting smell


#### Note:

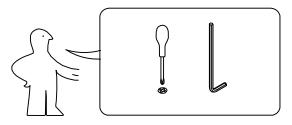






 ② Handle it with care. Use a protection layer.



 ① Move it carefully with at least 2 people






3 Contact Sunon if you have any questions.



Use Instruction

Thanks for buying Sunon product. Please read this instruction carefully before using.

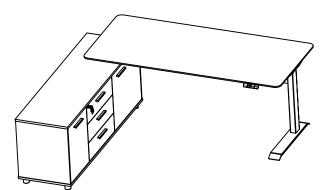

#### Product introduction

Series: UP1 series

Item No.: DZZ80L-2.180182/DZZ80R-2.180182/

DZZ81L-2. 200182/DZZ81R-2. 200182

Item name: Executive desk

Dimension: 1800/2000\*1820\*720-1210 Color: Matte white, meteor gray Material: Melamine+Cold Rolled Steel

This product is suitable for office use, and the decorative accessories are for indoor use only.

#### Main features

Product passed the following

GB 18580-2017 Formaldehyde emission limits in wood-based panels and

products of interior decoration material

GB/T 22792.1-2009 Office Furniture Screen Part 1: Dimension

GB/T 22792.2-2008 Office Furniture Screen Part 1: Safety requirements

HJ 2547-2016 Environmental labeling products technical requirements for

furniture

HJ 571-2010 Environmental labeling products technical requirements of

wood-based panel and its products

#### Quality guarantee

Sunon strictly implements the national "three guarantees" regulation (exclude glass and mirror) for one year (except special offers), and makes response to all services within 24 hours.

- Product warranty: China
- Loss caused by improper use is not covered by the warranty
- Loss due to natural disasters such as fire loss is not covered by the warranty

# **Cautions**



Keep children, pets, etc. away from the product during table lifting operation. Unplug the product in lightning weather and when it will be unused for a long time.



Keep proper distance between the table and the wall.



keep obstacles away in the running process of the table, and there should be no obstacles higher than 500mm under the table.



Better keep environment temperature 0-40°C, the product is far away from corrosive gases, liquids and dusty objects.



To avoid malfunction and harm to human body, it is strictly prohibited to disassemble the product without instruction.



The anti-collision functions cannot be activated when manually reset. Be careful with your hand and keep them is safe position when operating the table.




Please read the operation instructions carefully before using the product. Sunon does not assume any responsibility for the damage of the product or human injury caused by abnormal operation.



Reset manually after first use or power off.

# Components list

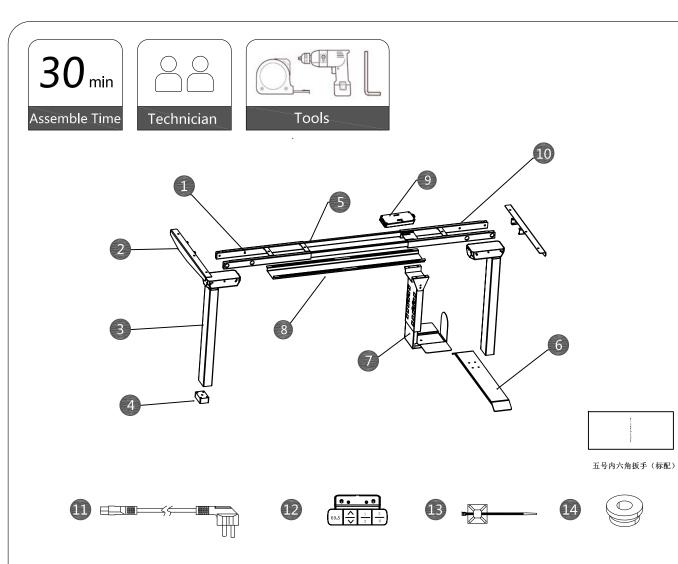


No.	Component	Pcs
1	Frame with holes	1
2	Side panel	2
3	Lift feet	2
4	Middle feet	1
5	Connection lever	2
6	Ground feet	1
7	Chassis holder (Optional)	1
8	Cable folder	1
9	N2 controller	1
10	Frame with controller plug	1
11	Short beam	1
12	Power line	1

No.	Component	Pcs
13	Cable clip	10
14	Soft rubber mat for tabletop	9
15	Patch cord	1
16	M6x10 Hexagon socket screws	16
17	M6x14 Hexagon socket screws	17
18	ST5*16 Tapping screw	2
•		


# Assembling instruction

# • Insert the two plastic pieces into the column and fasten them tightly; • Insert the column into the main desk side cabinet.

# • Fasten the column to the ground feet with 4 M6\*14 screws; • Fasten the column to the frame with 4 M6\*10 screws (8 in total).

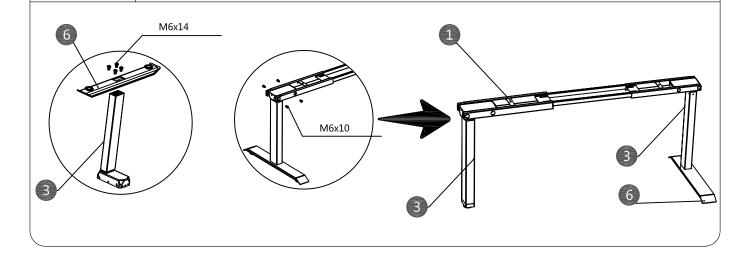


# STEP 3 · Insert the side panel into the frame respectively and fasten it to the frame with 2 M6\*14 screws (4 in total).

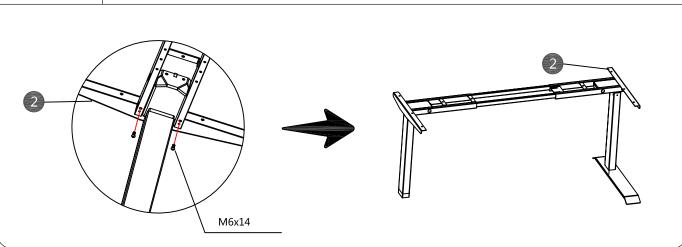

# Assembling instruction


## STEP 4

- · Adjust the frame to fit the size of the desktop;
- · (Tabletop upside down) Fasten the understructure to the desk with 9 M6x14 screws.

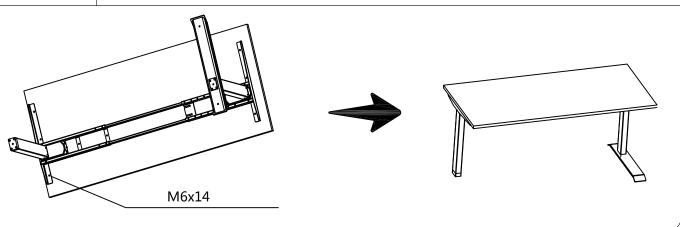


## STEP 5


- · Install the controller on either side of the desktop edge with the display screen facing outward;
- · Insert the mounting plate and fasten with 2 ST5\*16 tapping screws.

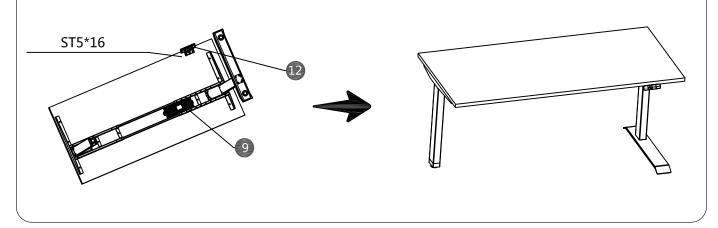



# • Connect related components, including manual controller, extension cord and power cord, etc., and fix with cord clips.

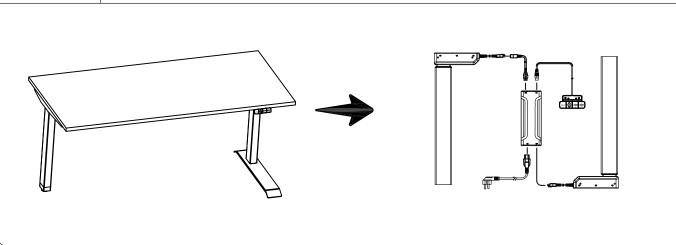


# **Assembling instruction**

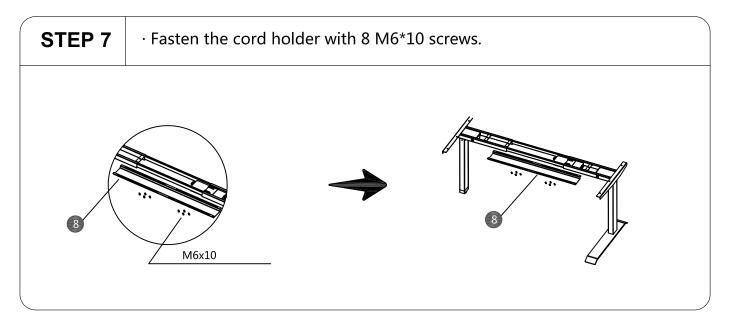

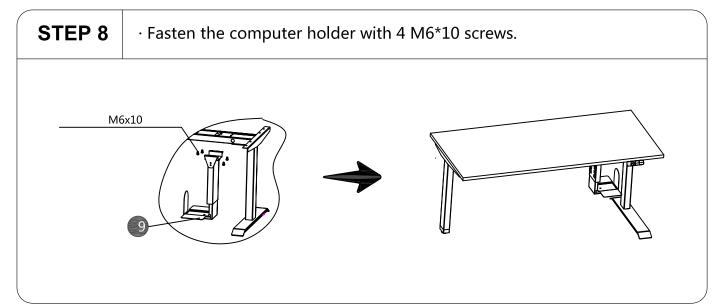

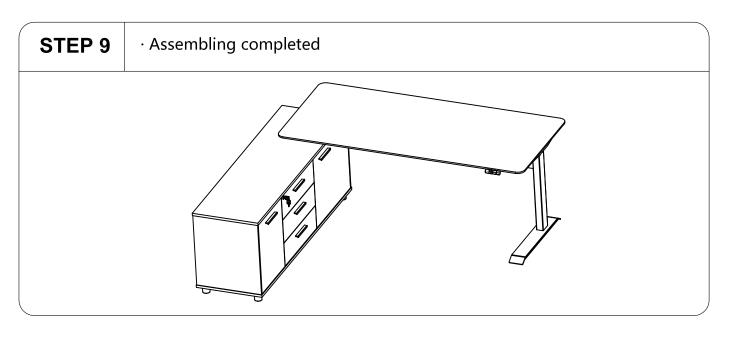

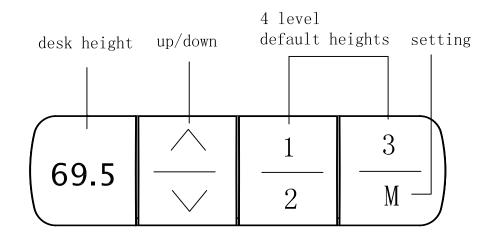


Note

69.5

Please make sure there is no obstacle during the operation, and there is a gap between desk and wall. And all wires are long enough to allow the up-down of desk.

Advice Please set up as 1 the most comfortable height when you sit down, and set up as 2 the most comfortable height when you stand up. For the other two heights, you can choose whatever you like.

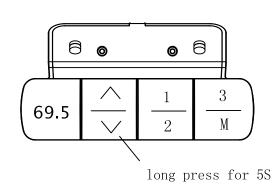

## Reset abnormality protection


When there is something wrong with controller reported, the digital tube shows E07-E09, Even if it has access to power after a power cut-off, it will still give an error notice no matter what button you press.

## **Operation**

After pressing for 5s and digital tube shows RST, release the button and press the down button, reset will be activated.

## Set up upper limit position


Press M button, the digital tube shows "S-", then release the button. Press the up button, the digital tube will flash once, release the button. Press M button again for 2s, the digital tube shows "999". The upper limit position has been set.

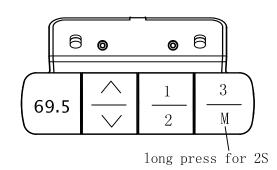

long press for 2S


## Set up lower limit position

Press M button, the digital tube shows "S-", release the button. Press the down button. The digital tube will flash once. Release the button. Press down M button again for 2s, the digital tube shows "000". The lower limit position has been set.

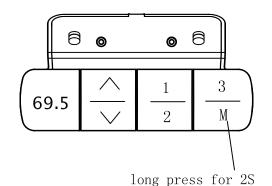

## Delete limit position

Press M button, the digital tube shows "S-", release the button. Press M button again for 2S, it shows "555". The upper and lower limits have been deleted.

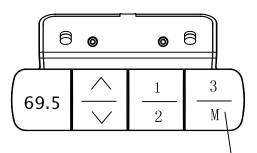


long press for 8S

#### Lock

Press M button, the digital tube shows "S-", long press M button for 5S, the digital tube shows numbers. Press M button for 3S, it shows LOC. The buttons on the hand controller are locked.


#### Unlock

Under the LOC condition, long press M button for 8S, it shows numbers. Buttons on hand controller are unlocked.

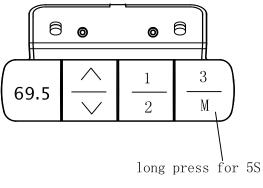

## Revise lowest height

Under the reset condition, it shows RST. Long press "M" button for 5S, it shows the height after reset and twinkles. Press up or down button to adjust to the appropriate height. 5S after releasing the button, the digital tube will go back to RST, which means the amendment is successful.

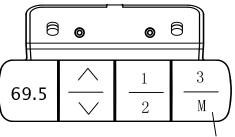

Switch between memory inching/continuous moving

Under the reset condition(digital tube shows RST) Long press button "1" for 5s, switch inching and continuous moving.

When it shows "10.1", continuous moving. When it shows "10.2", inching moving.


long press for 5S


# Centimeter/inch display switch


Under the reset condition(digital tube shows RST), long press "2" for 5s, you can switch between inch display and cm display.

When it shows "10.3", the height after reset will be shown in cm;

When it shows "10.4", the height after reset will be shown in inch.

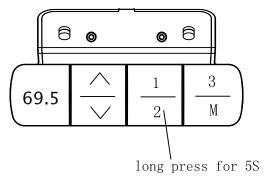

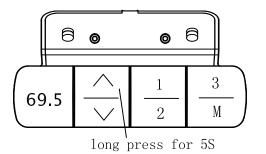

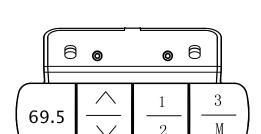

# Sensitivity setting on retreating upon obstacle

Under the reset condition(the digital tube shows RST), long press the up button for 5S, the sensitivity can be adjusted.

switch display

"10.5" --10kg

"10.6" --15kg

"10.7" --20kg

## Setting of memory position

Press M button, it shows "S-", select and press one of the memory buttons, current height will be remembered.

Use up/down button to get the desirable height, then repeat the following action.

## Normal problems and solutions

- 1. If your desk has the following issues, please try resetting:
- Working abnormality
- Hand controller shows RES (reset)
- Hand controller shows error (E07, E08 ), but motor drive wire is well connected.
- 2. If it shows HOT (hot), please cut off the power and allow it to cool off for 20 minutes.