

X9 Performance Product Information

Warranty

X9 Performance warrants that this product will be free from defects in title, materials and manufacturing workmanship for one year from the date of purchase. If the product is found to be defective then, as your sole remedy and as the manufacturer's only obligation, X9 Performance will repair or replace the product. This warranty shall not apply to products that have been subject to abuse, misuse, abnormal electrical or environmental conditions, or any condition other than what can be considered as normal

Limitation of Liability

The liability of X9 Performance arising from this warranty and sale shall be limited to a refund of the purchase price. In no event shall X9 Performance be liable for costs of procurement of substitute products or services, or for any lost profit, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arising from this warranty and sale. These limitations shall apply not with standing any failure of essential purpose of any limited remedy.

Copyright® 2021 by X9 Performance

System Requirement

- Windows 7/8/10, Chrome OS
- Any desktop and notebook computer with a USB-A port available

Function keys mode F1 to F12

Hardware Basics

When Fn Lock LED is on, F1 to F12 function keys are the default when top row keys are pressed. Also 14 shortcut keys require pressing fn key simultaneously to work. You can toggle between Function key mode and shortcut mode by pressing fn and Esc keys simultaneously, Fn Lock LED is on to indicate it is in Function key mode, otherwise it is in shortcut mode.

fn key

Installation Instruction

The X9JJKEY is automatically recognized by the computer and does not require a driver. Simply plug the keyboard directly into a USB port in your computer and you are ready to go!

Shortcut Keys

Fn Lock

Caps Lock

Num Lock

Below are the description of all 14 shortcut keys. Shortcut keys require (1) pressing fn key simultaneously to work when Fn Lock LED is on, or (2) pressing top row key itself to work when Fn Lock LED is turned off by pressing fn and Esc keys together. Pressing fn and Esc keys toggles between Function key mode and shortcut mode of the keyboard.

- Open email program
- ☐ Open Windows File Explorer ☐ Volume Down
- Print
- Default music player
- >II Play/Pause

- >> Next Track
- ≺ Mute
- (3)) Volume Up
- Lock Windows PC Brightness change to
- PC built-in display

Materials Spec: 105G 双铜纸 用料规格: ■ 単黑 🗍 5 页折

Peripherals Printing Spec 印刷規格