


FlexCharge[™]4

Assembly and operation instructions

Personal desktop power

Model # FCH4-DSK-WHT Model # FCH4-DSK-BLK

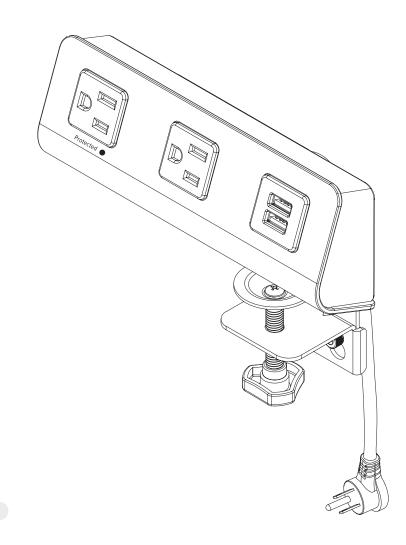




	e safety instructions carefully.
	ear heat sources such as radiators, heat registers, stoves nt (including amplifiers) that produce heat.
Unplug the unit periods of time	t during lightning storms or when unused for extended .
	isk of fire or electric shock, do not expose this unit to rain ding any drips or splashes.
 Objects filled w the unit. 	with liquids such as vases, should never be placed on or ne
• Do not open th	e unit due to risk of electric shock hazard.
• The outlet used near the equip	I to power the unit should be easily accessible and locatement.
• The unit is for in	ndoor use only.
	the marking label on the unit for input and output ratings. e power supply.
unit can reason	nis unit in life support applications where failure of the lably be expected to cause the failure of the life support o significantly affect its safety or effectiveness.
	nis unit in the presence of a flammable anesthetic mixture n or nitrous oxide.
Failure to adhe	re to these instructions effectively voids the warranty.

Please review these instructions before beginning the installation. Check that all parts and tools needed were provided with your order (see illustration on following page). Contact your supplier if any parts are missing. Do not discard the packaging until content that the product operates to your satisfaction.

Parts provided

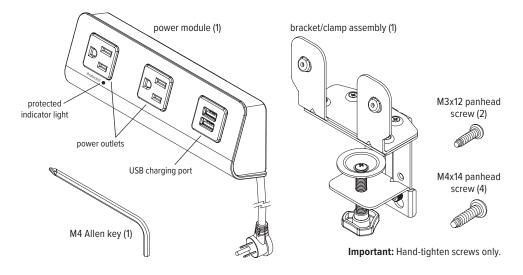


Additional tools required

- · Phillips screwdriver
- power drill with 1/8" drill bit (under-desk mounts only)


There are three ways to mount the FlexCharge4 power module:

- Edge Mount (page 4)
- Grommet Mount (page 6)
- Under-Desk Mount (page 8)


Choose the best mounting method based on user preference and the mounting circumstances.

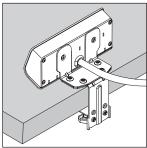

edge mount

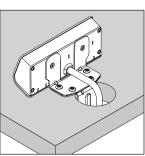


grommet mount

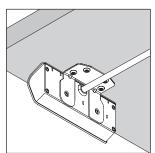

under-desk mount

Edge Mount


With edge mounts, the product is clamped to the edge of the worksurface.

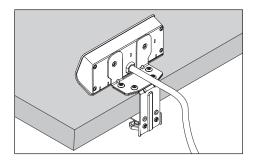

Step #1: if necessary, raise clamp on bottom bracket


Skip this step if worksurface thickness is 0.9" or more.

• The clamp is attached to the lower two holes on bottom bracket. If worksurface thickness is less than 0.9", clamp attachment must be moved to the upper two holes.

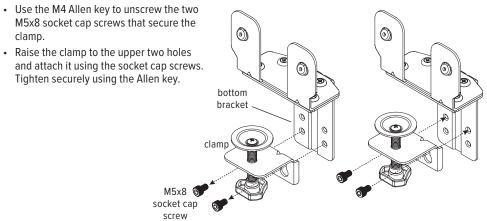


Step #2: attach bracket/clamp assembly to power module

- Route the power cord through the opening in the top bracket.
- Attach the top bracket to the rear of the power module using the two M3x12 panhead screws. Hand-tighten securely.

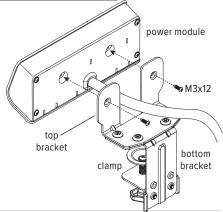

Step #3: clamp FlexCharge4 assembly to worksurface


- Position the assembly in the desired location and clamp it securely to the worksurface by tightening the triangle knob.
- Plug the power cord into an AC outlet.

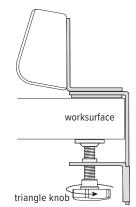

You are now ready to use the two AC power outlets and two USB charging ports on the FlexCharge4.


Grommet Mount

The grommet mount method is similar to the edge mount method, except here the assembly is clamped to the edge of a grommet hole rather than the edge of the worksurface. Minimum diameter of the grommet hole is 2.3".

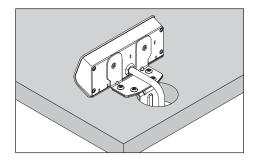


Step #1: remove clamp from bottom bracket


- Unscrew the two M5x8 socket cap screws using the M4 Allen key.
 - Remove the clamp from the bottom bracket.

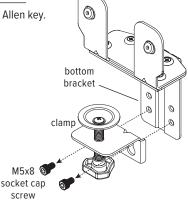

Step #2: attach M5x8 screws to bottom bracket


- Install the two M5x8 screws back onto the bottom bracket, leaving about 1/8" exposed between the screw heads and the bracket.
 - With worksurface thicknesses between 0.9" and 2", attach the screws to the lower two holes.
 - With worksurface thicknesses less than 0.9", attach the screws to the upper two holes.

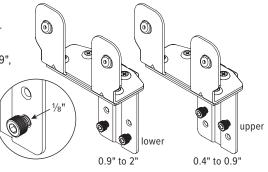

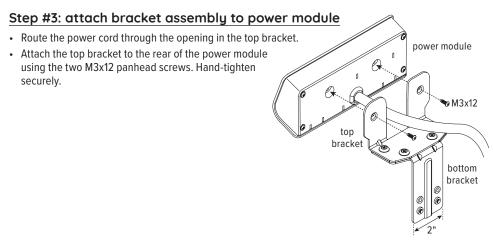

Step #4: clamp power module assembly to worksurface

- Insert the bottom bracket through the grommet hole.
- Attach the clamp to the bottom bracket.
 - Fit the keyhole openings in the clamp over the M5x8 screw heads. Tighten the screws securely over the narrow portion of the keyholes using the M4 Allen key.
- Clamp the assembly securely to the worksurface by tightening the triangle knob.
- Plug the power cord into an AC outlet.

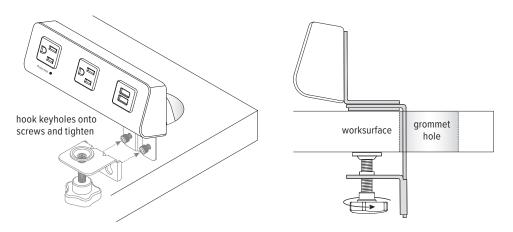


You are now ready to use the two AC power outlets and two USB charging ports on the FlexCharge4.

#6-32x1/4

FlexCharge4

Under-Desk Mount

With this method, the top bracket is turned upside-down so that it can be mounted to the underside of the worksurface with M4x14 wood screws. As with the other methods, the power module is mounted to the bracket using two M3x12 panhead screws.

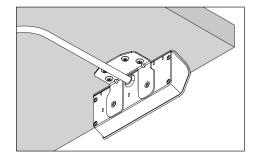

ை

top bracket


Step #1: remove top bracket

- Unscrew the M5x8 socket cap screws using the M4 Allen key.
- Remove the top bracket from the bracket/clamp assembly.

Step #2: mark and drill pilot holes

- Use the top bracket as a template to mark where to drill four pilot holes.
 - Position the bracket at the desired location, typically at the front of the worksurface on the left or right side.
 - Mark hole locations.
- Drill $\frac{1}{2}$ deep pilot holes using a $\frac{1}{8}$ drill bit.

Caution: Be careful not to not drill through the top of the worksurface.

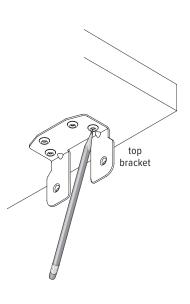

M4x14

M3x12

Step #3: attach top bracket to underside of worksurface

• Attach the bracket using the four M4x14 wood screws. Hand-tighten securely.


Step #4: attach power module to bracket

- Route the power cord through the opening in the top bracket.
- Attach the power module to the bracket using the two M3x12 panhead screws. Hand-tighten securely.

You are now ready to use the two AC power outlets and two USB charging ports on the FlexCharge4.

Additional Features

- FlexCharge4 offers built-in surge protection with an indicator light. The light displays when surge protection is active on your Flexcharge4.
- If the light is not illuminated, please contact Customer Service.
- AC outlet orientation can be rotated to accommodate large plugs
- FlexCharge4 complies with UL 962A Standard for Furniture Power Distribution Units and meets respective spill test criteria.

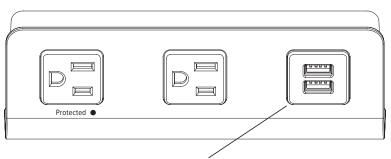

3.1A USB charging module can charge one tablet and one smart phone at the same time.

esi

FlexCharge[™]4

Personal desktop power

Please contact Customer Service with any questions or comments at 800.833.3746 or visit our website at esiergo.com

LIMITED WARRANTY

ESI warrants this product to be free from defects in manufacturing for a period of five year from the date of original purchase. This warranty extends only to the original purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, modification, alteration, or improper cleaning or maintenance. This warranty does not apply to damage in shipment caused by carriers, damage caused during installation, normal wear and tear, or excessive use (meaning consistent use in excess of an eight hour shift). ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. ESI's sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at ESI's option, of the product or any defective part. Costs (such as installation, labor fees or express shipping) incurred due to replacement of products are not covered under warranty. IN NO EVENT SHALL FELLOWES, ITS AFFLIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES.

To make a warranty claim, contact ESI at 800-833-3746 or customerservice@esiergo.com. You must provide proof of purchase, such as the original purchase order number.

The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law.